

Riso shall not be responsible for any damage or expense that might result from the use of this manual.

As we are constantly improving our products, the machine may differ in some respects from the illustrations used in this manual.

Riso shall not be liable for any direct, incidental, or consequential damages of any nature, or losses or expenses resulting from the use of this product or included manuals.

 Caution:

- Make sure to read the important operational safety information.
- Store this manual close-by, and fully acquaint yourself with the printing machine.



Countries of intended use

Austria/Belgium/Denmark/Finland/France/Germany/Greece/Iceland/Ireland/Italy/Luxembourg/Netherlands/Norway/Portugal/Spain/Sweden/Switzerland/U.K.

RISO is a registered trademark of RISO KAGAKU CORPORATION in Japan and other countries.

RISO iQualitySystem™ is a trademark of RISO KAGAKU CORPORATION.



is a trademark of RISO KAGAKU CORPORATION.

- This product contains RFID (Radio Frequency Identification) System.
- The information contained in this document is subject to change without notice.

Contents

Welcome to the MZ7 Series Model	7
About This User's Guide.....	7
Icons Used in This Manual	8

Before Starting to Use **10**

Safety Guide - Installation	10
Installation	10
Power connection	10
Safety Guide - Handling and Operation.....	11
Operation Environment.....	11
Machine Handling	11
Consumables.....	12
Ink Handling.....	12
Connection with a Computer	13
Paper Recommendations	14
Size and Weight Restrictions.....	14
Tips for Better Paper Feeding	15
Storing Environment	15
Originals	16
Size and Weight Restrictions.....	16
Maximum Printing Areas and Margins.....	17
Materials Not to Be Printed	17

Getting Acquainted **18**

Function and Name of Each Part	18
Control Panel.....	20
Display.....	22
The Screens and their Various Stages.....	22
Basic Screen Layout.....	25

Basic Operations **30**

Preparing to Print.....	30
Turning the power ON	30
Setting up the Paper Feed Tray and Loading Paper	31
Setting up the Paper Receiving Tray	33
Basic Process.....	35
2-Colour Printing with 2 Originals	38
2-Colour Printing with 1 Original [Easy 2Colour]	44
Easy 2Colour Types	44
Operating Procedures for Easy 2Colour.....	49
Printing with 1-Colour	57
Printing from a Computer Data [Direct Print]	62
Printing Computer Data	63
Changing Output Directions	66
Changing Stop Timing	67

Functions for Master-Making 68

Selecting Image Processing Mode [Image]	68
Processing Photos with Dot Screen [Dot Process]	70
Adjusting Photo Contrast [Contrast Adj]	72
Adjusting Photo Gradation [Tone Curve]	73
Selecting Scanning Contrast for the Original [Contrast]	75
Enlarging/Reducing Originals [Standard Ratio] [Free] [Margin+] [Zoom]	76
Enlargement and Reduction by Standard Ratio [Standard Ratio] [Margin+]	77
Magnification/Reduction of a Changed Aspect Ratio [Free]	78
Enlarging and Reducing with the Zoom Function [Zoom]	79
Using Custom-Sized Paper [Paper]	80
Automatic Printing [Auto-Process]	81
Printing from Bound Documents [Book Shadow]	82
Saving Ink [Ink Saving]	84
Printing Side-by-Side on One Sheet [2 Up] [Multi-Up Print]	85
Original Orientation and Print Results	86
Orientation of Print Paper	88
Multi-Up Interval	88
Enlargement/Reduction Ratio	89
2 Up Operation	90
Operation for Multi-Up Printing	91
Operation for Multi-Up Tickets	94
Switching Masters of Just One Drum [OneSide MasterMake]	96
Making a Master that Utilizes the Maximum Printing Area [Max. Scan]	99
Reproducing the Master [Renew Page]	100
Recreating a Master	101
Using Auto Page Renewal	102
Cutting the Top Margin of the Original and Printing [Top Margin]	103
Adjusting the Side Margins of the Master [Side Margin]	105
Checking the Print Image Prior to Making Master [Preview]	107
Actions Available on the Preview Screen	108
Setting and Printing the Preview Display	108

Functions for Printing 110

Changing the Print Speed [Print Speed Adjustment]	110
Printing at High Speed [150ppm].....	111
Setting "150ppm"	111
Adjusting the Print Density [Print Density Adjustment]	112
Adjusting the Print Position [Print Position Adjustment] [1=2 Alignment]	113
Adjusting the Print Position of Both Drums Together	114
Printing Proof Copies [Proof]	116
Prevent Paper Jams When Using Special Paper [D-Feed Check].....	117
Keeping Printed Copies Dry [Interval]	118
Ejecting Paper Using Pre Configured Setting [Eject Wing Control]	120
Turning the Air Blower and Separation Fan OFF [Paper Eject Adj]	121

Advanced Features 122

Automatic Sorting Into Groups [Programme]	122
How to Programme Print	125
Setting Up for Programmed Printing.....	126
Saving Programmes	129
Renaming a Programme	131
Clearing Programmes	133
Retrieving a Programme	134
Making changes to Stored Programmes	135
Programming Example	136
Using Job Memory Functions [Job Memory]	140
Storing Job Memory	141
Renaming a Job Memory	143
Retrieving a Job Memory and Printing	145
Clearing Job Memory	147
Extending the Reserve Period [Reservation]	149
Idling Action [Idling Action]	150
Protecting Confidential Documents [Confidential]	152
Showing Usage Status [Digital Copy Count]	154
Rotating the Original 180 Degrees to Make a Master [Rotate].....	155
Proof and Print (with the Optional ADF unit installed) [ADF Semi-Auto]	156
Changing Default Settings [Admin.]	158
Configurable Functions.....	158
Customising the Default Settings	164
Setting Up Direct Access Area and Selections Tab	
[DirectAccess Entry] [Selections Entry]	167
Registering a Custom Paper Size [Custom Paper Entry]	171
Entering sizes and changing names.....	171
Deleting a Custom Paper Size	174

Storage and Scan Modes (Option) 176

About Storage	176
Storable Original Data	176
Retrieving Storage Data	177
Converting Hard-copy to Stored Data (Scan Mode).....	178
About Scan Mode	178
Scanning an Original for 1-Colour Printing	179
Scanning Originals (2) for 2-Colour Printing	181
Setting Data Information	183
Specifying Paper Size	185
Retrieving Stored Data and Printing [Storage Memory]	186
Retrieving Storage Data	186
Using the Storage Retrieve Screen	188
Changing the Data Order	189
Overlaying Storage Data onto a 1-Colour Print Job [Overlay].....	190
2-Colour Printing with the Original and Storage Data [Stamp]	192
Specify the name data to insert.	193
2-Colour Printing with [Stamp]	195

When using a Linked Printer (sold separately) 196

Print Functions for Using Linked Printers	196
Setting up a Linked Printer [Link Properties]	198
Linked Printer Setup List	198
Setting up a Linked Printer	201
Printing Scanned Original from a Linked Printer [Link Mode].....	202
Using Optional Functions on a Linked Printer	205
Configurable Functions.....	206
Duplex Printing [Duplex]	208

Replacing Consumables 212

Check for Remaining Amount of Consumables.....	212
Replacing the Master Roll	213
Replacing the Ink Cartridge	216
Emptying the Master Disposal Box	218
Replacing the Print Drum	220
Removing the Print Drum	220
Installing the Print Drum	222
Disposal of Depleted Consumables	223

Maintenance 226

Cleaning	226
Thermal Print Head	227
Platen Glass and Platen Cover Pad	227
Scanner Glass and White Sheet of ADF unit (Option)	228
Pressure Roller	228
The Exterior	229

Troubleshooting 230

When a Message Displays	230
Error Message Layout	230
Pop-Up Message Layout	239
Consumable Information Screen	244
Troubleshooting	247

Appendix 254

Optional Accessories	254
Specifications	255
Index	258

Welcome to the MZ7 Series Model

Thank you for your purchase of this printing machine.

This machine is a digital duplicator with the following functions.

- This machine is equipped with two colour drums, allowing anyone to easily print in two colours.
- This machine also is equipped with an LCD display and features an easy-to-use Touch Screen operated by touching buttons displayed on the screen.
- With an interactive guidance system, highly-sophisticated printer settings can be made with ease.

About This User's Guide

This machine comes with the following 4 user's guides.

◆ RISO MZ770 User's Guide (this manual)

This user's guide explains basic printer operations, handy tips, and how to set up the high-speed print function. It also contains user cautions, information on storing and changing consumables, and troubleshooting procedures. It also contains an explanation for using **[Link Mode]** when an optional linked printer is attached.

◆ RISO Editor User's Guide

This user's guide explains the RISO Editor functions.

◆ Reference Guide NAVIGATION BOOK

This book explains in easy-to-understand language the mechanisms and operational flow of 2-Colour printing and Easy 2Colour, as well as tips for printing.

◆ RISO Printer Driver User's Guide (included as a PDF file in the attached CD-ROM)

This user's guide explains the procedures for printing from a computer.









 

This manual shows you the machine's basic and advanced operations using various functions. It also contains cautionary notes, usage and replacement information on consumable supplies and troubleshooting tips. Please read this manual carefully before using this machine. Reference at any time as needed for more tips and ideas.

Icons Used in This Manual

The following icons are used in this manual.

About the Notation

The following icons are used throughout the document.

	WARNING:	Ignoring this warning could cause death or serious injury.
	Caution:	Ignoring this caution could cause injury or damage to property.
	Important!:	Indicates items that require special attention or that are prohibited actions. Read carefully and follow the directions as instructed.
	Note:	Gives you useful information.
	Tip:	Gives you additional hints for more convenience.
		Indicates a reference page.
		Indicates a button or item name on the LCD display.
		Indicates which button to touch on the LCD display.
		Indicates the original document.
		Indicates printed copies.

The notation for Operational Instructions and Function Descriptions

The following conventions are used to explain functions and operations.

1

Functions for Master-Making

Selecting Image Processing Mode [Image]


In order to make a master best suited for the original document, select an appropriate mode depending on original contain only text (Line), photo, or both of them.

Note:


- Default Image Processing mode can be set on the Admin. screen.
p.158

2

1 Touch [Image] on the Master Making Basic Screen.

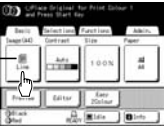


2 Select the appropriate Image Processing mode for the original.



- [Line] Only text contained; e.g., text document, newspaper
- [Photo] Only photos contained
- [Duo] Both text and photos contained
- [Pencil] pencil drawings or tightly printed documents

3


Touch [Photo] to select the type of photo.




- [Standard] Select for photos other than [Portrait] or [Group].
- [Portrait] Use this setting for pictures of two individuals from the bust up. The image processing is particularly good for photos of faces.
- [Group] This setting is for group photos that are over-exposed. This process is for restoring facial features that have been washed out by a flash. The Group setting is not for photos that are overly dark. It may be more effective to select [Standard] for such photos.

Functions for Master-Making

3 Touch [OK].



The following screen appears.



Returns to the Master Making Basic Screen. Image Processing mode is updated.

Note:

- Some functions are not available in certain Image Processing mode settings.

	Line	Photo	Duo	Pencil
Dot Process	—	✓	✓	—
Contrast (Auto)	✓	—	—	—
Contrast (1-5)	✓	✓	✓	✓
Contrast Adj.	—	✓	—	—
Tone Curve	—	✓	✓	✓

✓ : available — : not available

1) Chapter Title

2) Operation Procedure

The operational procedures are outlined in steps. Follow these steps.

3) Display

Shows the screen as seen on each step.

About the content of this manual and the illustrations

Displays are illustrated as if currently activated. Some buttons presented in this manual may not be available by default setting, or when the optional device is not installed.

The examples in this user's guide generally assume that Drum 1 is "Black" and Drum 2 is "Red".

Icons Used in This Manual 9



Before Starting to Use

Safety Guide - Installation

This section describes the precautions to be observed when installing the machine. Read this section before installing the machine.

Note:

- Your dealer will help you to determine a proper location for the machine at the time of delivery.

Installation

⚠ WARNING:

- Place the machine on the dedicated stand for this model or on a flat and stable surface (maximum of 10 mm differential allowed). Injury might occur if the machine falls.
- Install the machine in a well-ventilated area. Failure to do so may result in serious health problems.

⚠ Caution:

- Install the machine near the wall socket to avoid using an extension cord between the machine and the wall socket. If an extension cord is absolutely required, do not use one longer than 5 m.
- Allow at least 10 cm or more of clearance behind the machine so that you can unplug the machine in case of technical difficulties.
- Keep the machine away from dusty environments. Failure to do so may result in fire.

Important!:

- Avoid installing the machine in the locations listed below. Failure to observe this precaution may lead to machine failure.
 - Locations with exposure to direct sunlight, such as locations close to windows (Curtain all windows that might expose the machine to direct sunlight)
 - Locations that are subject to sudden changes in temperature
 - Extremely hot and humid locations or cold and dry locations
 - Heated locations
 - Locations exposed to direct cold air, direct hot air, or direct radiant heat

Power connection

⚠ WARNING:

- Do not overload the wall socket or extension cord, nor damage the power cord by placing heavy objects on it or pulling or bending it. This can result in fire or electric shock.
- Do not pull the power cord but hold the plug itself when unplugging it. This can damage the cord and result in fire or electric shock.
- Do not plug or unplug the power cord if your hands are wet. This can result in electric shock.

⚠ Caution:

- Pull out the power cord plug from the wall socket more than once a year and clean the prongs of the plug and their surroundings. Dust collected on these areas can result in fire.

Important!:

- Check the power cord and plug for poor connections. Plug the power cord securely into a nearby wall socket.
- Be sure to turn off the POWER switch when connecting or disconnecting a cable.

Safety Guide - Handling and Operation

This section describes the precautions to be observed when handling the machine. Read this section before operating the machine.

Operation Environment

Important!:

- Operate the machine under the following appropriate environment conditions.
Temperature range: 15°C to 30°C
Humidity range: 40% to 70% (noncondensing)

Machine Handling

⚠ WARNING:

- Do not place water containers or metallic objects on the machine. Fire or electric shock may occur if water or metallic objects fall into the machine.
- Do not insert any metallic material or flammable substance into the machine through any opening. This can result in fire or electric shock.
- Do not remove machine covers. Exposing internal parts may result in electric shock.
- Do not disassemble or rebuild the machine by yourself. This can result in fire or electric shock.
- If the machine emits excessive heat, smoke or foul odor, immediately turn off the POWER, unplug the power cord and contact your service representative. Failure to do so can result in fire or electric shock.
- If something drops inside the machine, immediately turn off the POWER, unplug the power cord and contact your service representative. Failure to do so can result in fire or electric shock.
- Never stick your hands or fingers in the openings of the machine during operation.
- Keep loose clothing or long hair away from moving parts to avoid becoming entangled.
- Do not place heavy objects on the machine. The objects might fall and cause injury.
- Contact your service representative before moving the machine.

⚠ Caution:

- Do not open any covers or move the machine during operation.
- Unplug the power cord, if you do not use the machine for a long time.
- The machine has precision parts and driving parts inside. Do not handle the machine in other ways than described in this manual.
- Do not apply any shock to the machine.

Important!:

- Do not unplug the power cord or turn off the power during operation.
- Be sure to open and close all machine covers gently.

Consumables

Important!:

- For ink and Master Roll, it is recommended to use the products specified by RISO.
- Store consumables such as Master Roll and ink properly.
Do not store consumables in the following places:
 - Locations that are subject to direct sunlight or bright locations that are close to windows
(If there is no other choice, curtain the window.)
 - Locations that are subject to rapid changes in temperature
 - Extremely hot and humid locations or extremely cold and dry locations


Ink Handling

Caution:

- If ink gets into your eyes, flush it out immediately with plenty of water. If irritation continues, seek medical attention.
- If ink comes into contact with your skin, wash it off thoroughly using soap.
- Allow plenty of ventilation during printing.
- If you feel unwell during use, seek medical advice.
- Only use the ink for printing purposes.
- Keep the ink out of the reach of children.

Connection with a Computer

You can directly send data from a connected computer to the machine as an original for printing. Because digital data itself is used for making a master, the finish of prints becomes outstanding.

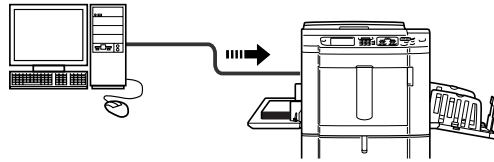

Important!:

- Before making the connections, turn off both the machine and computer.
- The maximum allowable voltage for parallel connector input and output is 5 V.

Connection Method	Option Needed	Cable	
One-to-one connection with a Windows PC	—	Parallel printer cable	IEEE1284 conformed
One-to-one connection with a Macintosh (Windows PC also acceptable)	RISORINC-NET	Ethernet cable (cross)	Shielded cable that supports 10BASE-T or 100BASE-TX
Network connections	RISORINC-NET	Ethernet cable (straight)	

Paper Recommendations

Size and Weight Restrictions

The table shows the specifications of the usable print paper.

Usable Printing Paper	
Size	Weight
100 mm × 148 mm to 297 mm × 432 mm	46g/m ² to 210g/m ²

Note:


- Up to 555 mm of vertical paper dimension may be used (loaded) by setting up "Custom Paper Entry".
p.171
- The minimum size paper that can be used differs for 1-Colour and 2-Colour printing.
 - 2-Colour Print**
Min. 182 mm × 257 mm (B5)
 - 1-Colour print with Drum 1 only**
Min. 100mm × 148mm
 - 1-Colour print with Drum 2 only**
If Drum 1 is set to "Confidential": Min. 182 mm × 257 mm (B5)
If Drum 1 is removed: Min. 182 mm × 257 mm (B5)
If Drum 1 is removed, and the print speed is high (150 ppm): Min. 257 mm × 364 mm (B4)

Important!:

- Even when using paper whose specifications are supported size and weight, it may not pass through the machine depending on such factors as paper finish, ambient conditions, and storage conditions. Keep this in mind when using the machine. For more information, consult your dealer.

Do not use the following types of paper, as they can cause jams or misfeeds:

- Extremely thin paper (less than 46 g/m²)
- Extremely thick or heavy paper (greater than 210 g/m²)
- Wrinkled, curled, folded, or torn paper
- Chemically treated or coated paper (such as thermal or carbon paper)
- Paper having a sticky section or holes (such as an envelope and label paper)

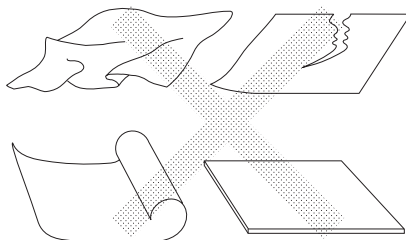


 
 
Note:

- Paper with a horizontal grain direction can cause problems with paper pass. Use paper with a vertical grain direction.
- Images are not output onto the entire area of usable print paper. [p.17](#)

RISO does not assure that paper outside the above specifications pass through the machine and can be used for printing.

Tips for Better Paper Feeding


To prevent paper jams and misfeeds, follow the directions below:

- When using standard or light-weight paper, set the Paper Feed Pressure Adjustment Lever to “”. Then open all four Paper Arrangers. [p.31](#), [p.33](#)
- When using thick paper (such as card stock), set the Paper Feed Pressure Adjustment Lever to “”, and open the two inner Paper Arrangers. [p.31](#), [p.33](#)
- When using slippery paper, set the Paper Feed Pressure Adjustment Lever to “”. [p.31](#), [p.33](#)
- Slide the Feed Tray Paper Guides, Receiving Tray Paper Guides, and Paper Stopper to fit the paper size. [p.31](#)
- Use flat printing paper that is free of folds. If curled paper is unavoidable, place the printing paper so that the curl faces down.
- Paper may stick to the drum surface if the top margin is too narrow on the original or if the upper portion of the original uses a large amount of ink. To solve this problem, lower the print position to provide a wider top margin or reverse the top and bottom of the original. Then restart printing from the beginning.

Storing Environment

Store printing paper in a level, dry area. Storing the paper in an excessively humid area can result in paper jams or poor print quality.

After unpacking printing paper, keep the remaining paper wrapped and store it in a moisture-proof box. It is highly recommended to put silica gel in the paper storage box.

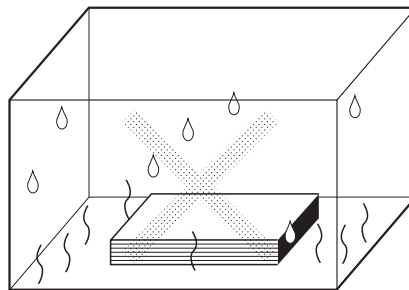

Originals

Size and Weight Restrictions

Usable originals are as follows.

Using the Platen Glass		Using the Optional ADF unit	
Size	Weight	Size	Weight
50 mm × 90 mm to 297 mm × 432 mm	Max. 10kg	90 mm × 140 mm to 297 mm × 432 mm	50g/m ² to 128 g/m ²

- Originals are scanned according to the size of paper placed on the Paper Feed Tray when masters are made; for the same width, the positions of the Feed Tray Paper Guides.
When the placed paper is smaller than an original, not the entire original will be scanned.
When the placed paper is larger than an original, dirt on the glass or shade of the original, for example, may result in unexpected dirt in the area beyond the size of the original.
- Bound originals can also be used on the Platen Glass.
- You can feed automatically up to 50 original sheets when using the optional ADF (Auto Document Feeder) unit.

Note:

- Use the Platen Glass when printing the following originals:
 - Patched or worn originals
 - Wrinkled, curled, folded, or torn originals
 - Transparent originals (such as tracing paper or OHP transparencies)
 - Chemically treated originals (such as thermal or carbon paper)
 - Originals with correction fluid or glue
 - Extremely thin originals (less than 50 g/m²)
 - Extremely thick originals (greater than 128 g/m²)
 - Heavy drawing paper
 - Originals with staples or clips
- If an original is wrinkled, curled, or creased flatten it thoroughly so that the originals can be pressed directly onto the Platen Glass during processing.
- If correction fluid or glue is used on an original, thoroughly dry it before placement.
- For an original patched with thick paper, the shade of the patched paper may also be printed.


Maximum Printing Areas and Margins

The maximum printing areas are as follows.

Maximum Printing Area	Usable Maximum Print Paper Size
291 mm × 413 mm	297 mm × 432 mm

Important!:

- No matter which size of originals is printed, the margins indicated on the figure are required for the originals. Reduce the original if necessary to fit it inside of the margins. Place an original so that its end having a 5 mm margin at least comes to the left of the Platen Glass.

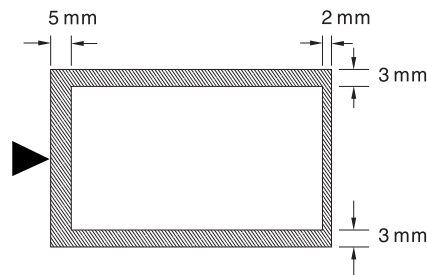

Tip:

About Printing Areas


- Printing area for the master is determined by the actual paper size detected on the Paper Feed Tray, regardless of whether the original is being scanned, or sent from a computer.
 - As shown in the illustration above, the printing area on the master will be smaller than the paper size (allowing 7mm total margins for top and bottom, 6 mm for left and right). Peripheral areas in the original document exceeding the printing area for the master will not be printed.
 - The maximum printing area can be applied to the scanned image, regardless of the print paper size.
- ☞ p.99

Materials Not to Be Printed

Do not use the machine in any manner which violates the law or infringes on established copyrights, even when making copies for personal use. Consult your local authorities for further details. In general, use discretion and common sense.

Getting Acquainted

Function and Name of Each Part

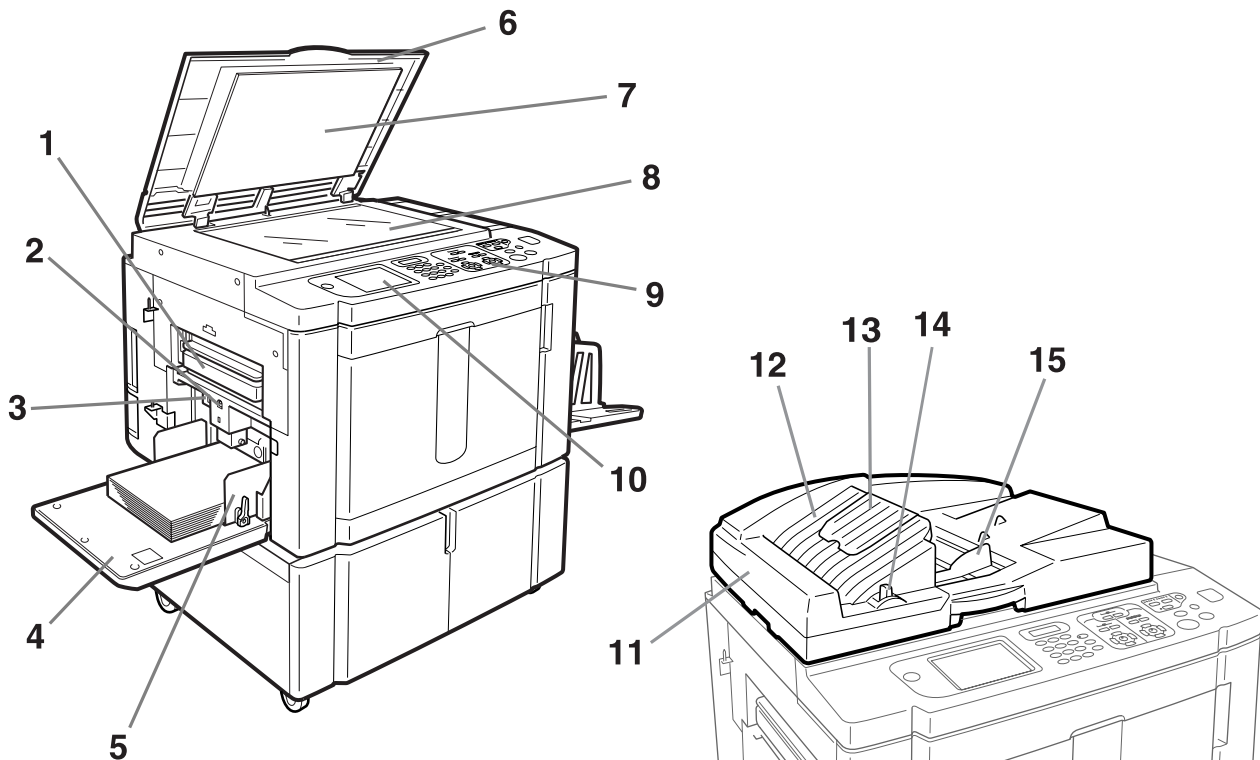

1) Master Disposal Box 1 (☞p.218)

Holds discarded masters.

2) Feed Tray Descent Button (☞p.32)

Lowers the Paper Feed Tray when changing or adding paper.

3) Paper Feed Pressure Adjustment Lever (☞p.31)

Adjusts the paper feed pressure according to paper in use.

4) Paper Feed Tray (☞p.31)

Load print paper on this tray.

5) Feed Tray Paper Guide (☞p.31)

Holds and guides paper.
Slide to fit to the sides of paper.

6) Platen Cover

Opened and closed when placing the original.

7) Platen Cover Pad (☞p.227)

8) Platen Glass (☞p.39, ☞p.227)

Place the original face-down.

9) Control Panel (☞p.20, ☞p.21)

Press the keys to perform various print operations.

10) Display (☞p.22 ~p.28)

Displays various screens needed for print operations.
Touch the buttons on the screen to execute various print operations.

11) Auto Document Feeder (Option)

12) ADF Original Receiving Tray (Option)

Scanned originals are ejected into this tray.

13) ADF Original Stopper (Option)


Receives and stops the scanned original.

14) ADF Original Release Lever (Option)

If an original is jammed, pull this lever to the right to eject from ADF unit.

15) ADF Original Guide (Option)

Slides and adjusts to the width of the original to hold together.

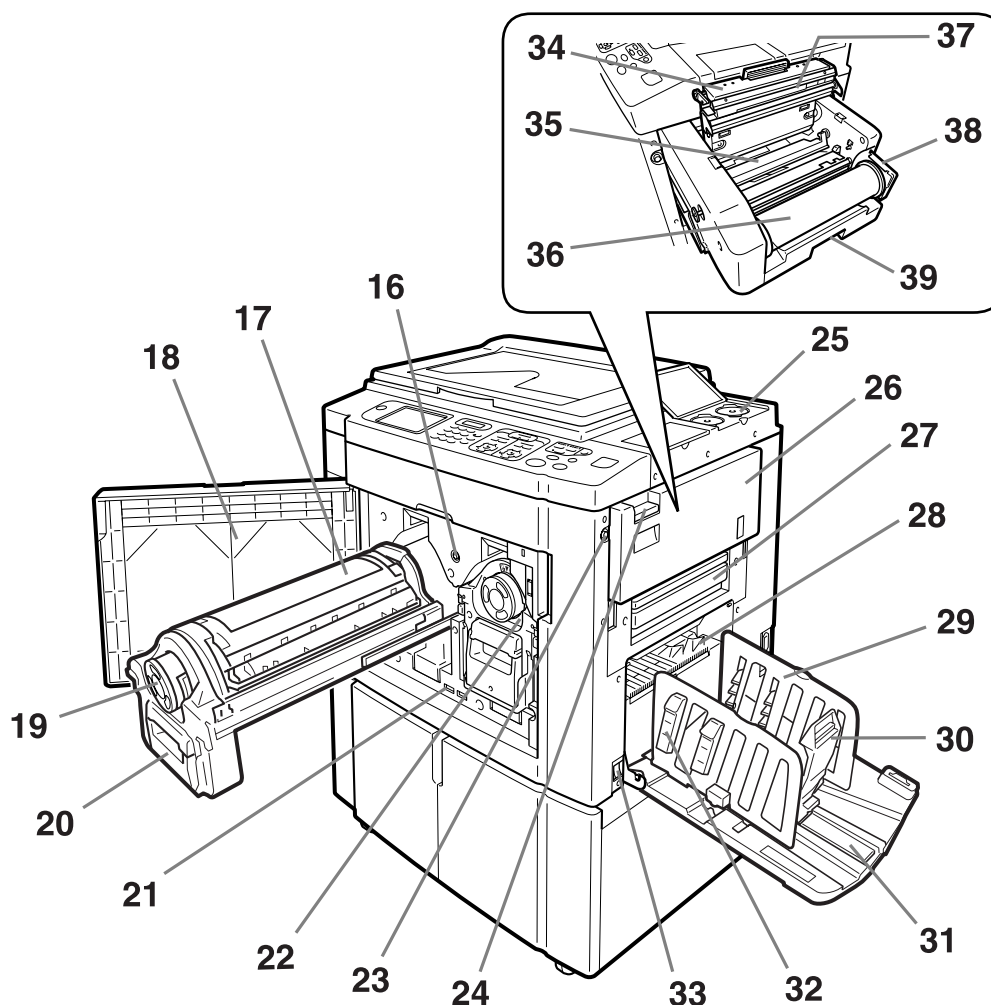**16) Print Drum Release Button (p.220)**

Unlocks the Print Drum for removal.

17) Print Drum 1 (p.220)**18) Front Cover****19) Ink Cartridge (p.216)****20) Print Drum Handle (p.220)****21) Counter**

Counts the number of copies (total print counter) and the number of made masters (master counter).

22) Print Drum 2 (p.220)**23) Master Making Unit Release Button (p.213)**

Unlocks the Master Making Unit for removal.

24) Master Making Unit Removal Lever (p.213)

Grasp the lever to open Master Making Unit Removal cover.

25) Ink Cartridge Cap Holder (p.217)

Secure the Ink Cartridge cap.

26) Master Making Unit Removal Cover (p.213)

Once the cover is open, the Master Making Unit can be removed.

27) Master Disposal Box 2 (p.218)**28) Paper Ejection Wing (p.120)**

Automatically adjusts to keep printed paper neatly stacked.

29) Receiving Tray Paper Guides (p.33)

Aligns printed paper neatly.

Slide according to the width of paper to be printed.

30) Paper Stopper (p.33)

Slide to adjust to the length of print paper size.

31) Paper Receiving Tray (p.33)

Printed copies are output to this tray.

32) Paper Arranger (p.33)

Press to open for aligning printed paper.



33) Power Switch (p.31)**34) Master Making Unit Cover (p.213)**

Open and close to install Master Roll.


35) Master Guide Flap (p.214)**36) Master Roll (p.213)****37) Thermal Print Head (p.227)****38) Master Roll Holder (p.214)****39) Master Making Unit Lever (p.213)**

Use the lever to pull out the Master Making Unit.

Control Panel

The Control Panel features permanent keys such as  and . It also has a large-size display that shows various messages and function buttons.

This section introduces hardware Key names and functions, as well as the display window and its functions.

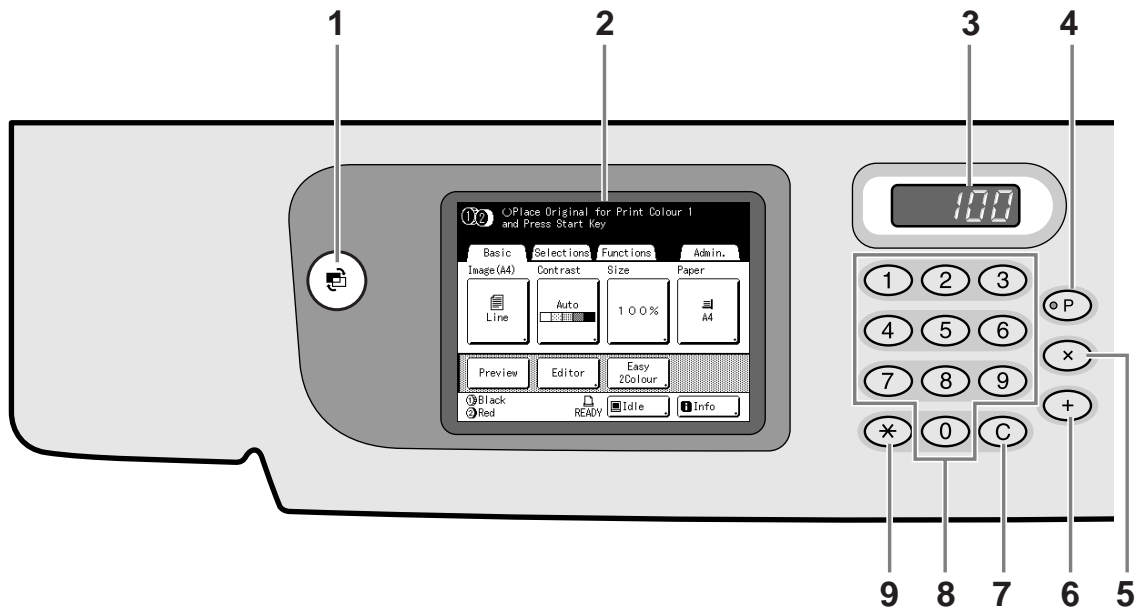

1) Mode Key

Use to change modes.

2) Display (p.22 ~p.28)

3) Print Quantity Display

Displays the number of copies, or numeric values entered for various settings.

4) P Key (p.126)

Use to retrieve stored programmes. The indicator on the key lights when set.

5) xKey (p.126)

Use to move between fields in setup screens, or set up programmed printing.

6) + Key (p.126)

Use to move between fields in setup screens, or set up programmed printing.

7) C Key

Cancels entered numerical values, or reset the counter to 0.

8) Print Quantity Keys (0 to 9 Keys)

Use to enter the number of copies, or the numerical values for various settings.

9) * Key (p.126, p.140)

Use to move between items in a setup screen, or retrieve stored memory.

10) Print Speed Adjustment Keys/Indicator (p.110)

Select the print speed from five levels.
The indicator above the keys shows the current speed level.


11) Print Density Adjustment Keys/Indicator (For Drum 1, For Drum 2) (p.112)


Select the print density from five levels.
The indicator above the keys shows the current density level.

12) Print Position Adjustment Keys/Indicator (For Drum 1, For Drum 2) (p.113)

Adjust the print position in the vertical direction (within ± 15 mm) and/or in the horizontal direction (within ± 10 mm) after making a master.

The indicator above the keys shows the offset amount from the centre.

To clear the offset amount, press .

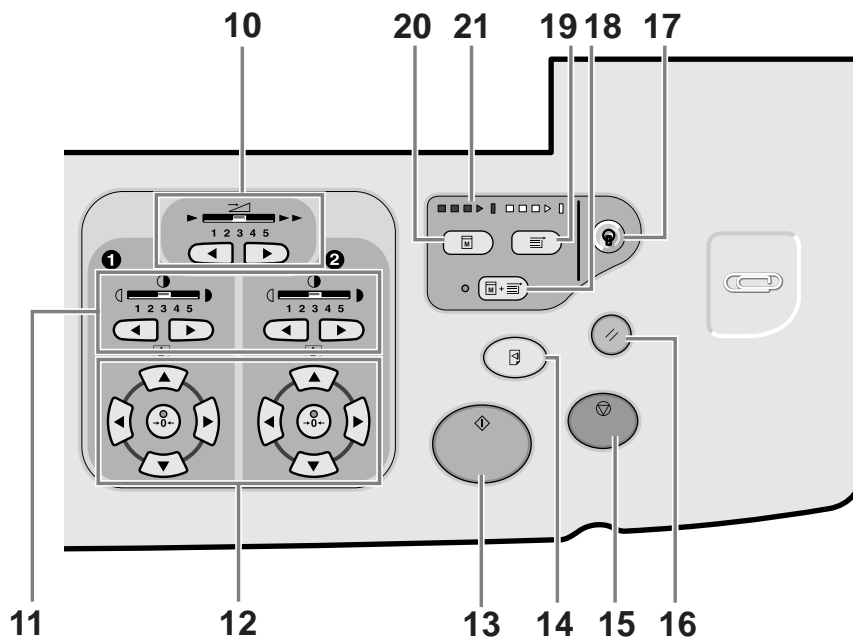**13) Start Key**

Starts master-making or printing process or executes specified operations.
The key is lighted only when the key is active.

14) Proof Key (p.116)

Use when you want to check print result after adjusting the print position, for example.
This allows you to print proof copies without affecting the value on the Print Quantity Display.

15) Stop Key

Stops current operation in progress. During the master-making procedure, the machine will not stop until the master-making process is completed.

16) Reset Key

Returns all settings to the initial settings.

17) Wake-Up Key

Wakes up the printer in Energy Saving mode.

18) Auto-Process Key (p.81)

Performs non-stop operation from master-making through printing. When activated, the indicator besides the key lights.

19) Print Key


Makes the printer be ready for printing.

20) Master-Making Key

Makes the printer be ready for making masters.

21) Progress Arrows

Indicates master-making and printing progress status.

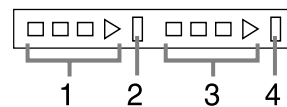

- 1) Master-Making Indicator
- 2) Master-Making Stop Bar
- 3) Print Indicator
- 4) Printing Stop Bar

Ready to make a master (Auto ON): when 1 is blinking

Ready to make a master: when 1,2 are blinking

Ready to print: when 3,4 are blinking

The indicator increases one bar at a time from the left, indicating the progress of the current master-making or printing job.

- If a master-making or printing job is halted, the progress bar stays lit at that position. (Ready for resume)

Display

The Screens and their Various Stages

When the power is turned on, after a brief display of the start-up screen, the initial screen appears.


Power ON



Start-Up Screen (Ex.)



Initial Screen (Ex.)

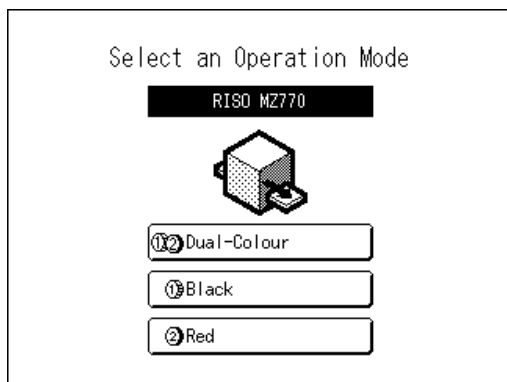


Note:

- Start-Up Screen settings
Select **[Start-Up Screen]** on the Admin. screen.

The Mode Screen is normally displayed as shown in the diagram on the left.


Note:

- When an optional Document Storage Card is installed and a Linked Printer (sold separately) is connected, the Mode Screen is displayed as shown below.

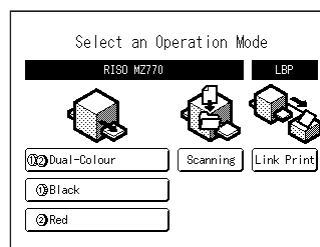


Selecting a Mode

Touch the Mode button on the Mode Screen to view the basic screens of the various modes.

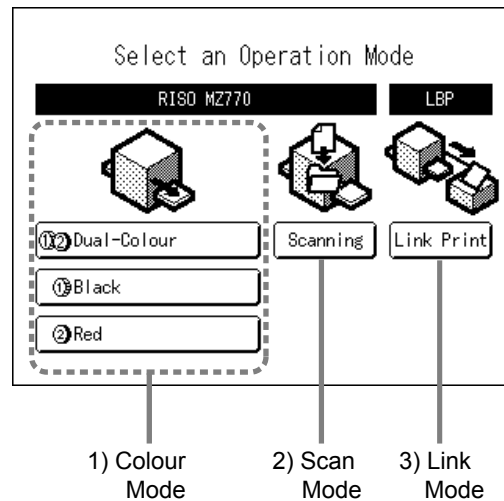

1) Colour Mode


Select the print type (2-Colour Print/1-Colour Print (Drum 1 only or Drum 2 only)) to display the Operation Selection Screen (MasterMake/Printing).

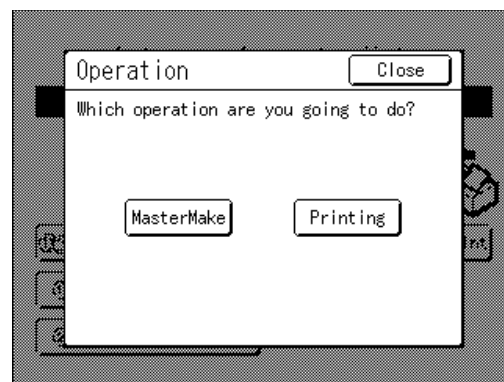

- Touch **[MasterMake]** to display the Master Making Basic Screen.



- Touch **[Printing]** to display the Print Basic Screen.

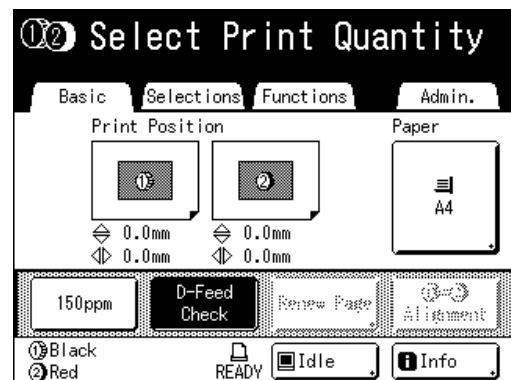


Note:

- The diagram above shows the basic screen for 2-Colour printing. The screen for 1-Colour printing is different.

2) Scan Mode (Option)

Touch **[Scanning]** to display the Scan Basic Screen.

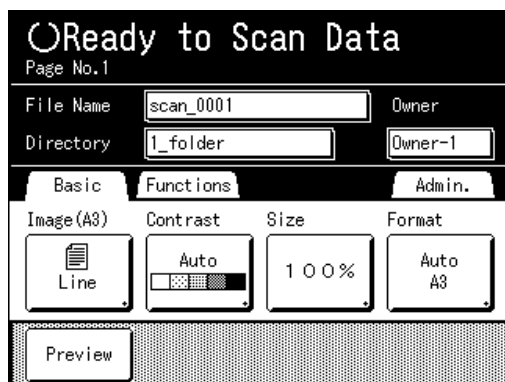


Note:

- See “Storage and Scan Modes” (p.176) for information about Scan Mode.

3) Link Mode (Option)

Touch **[Link Print]** to display the Link Basic Screen.

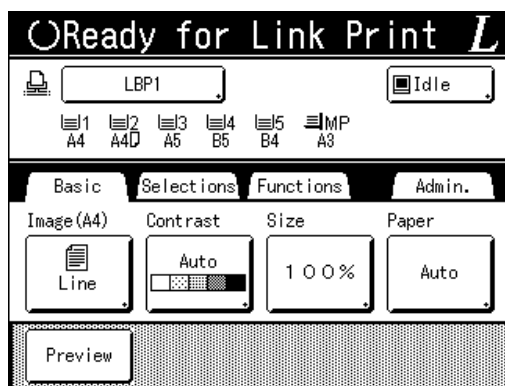

Note:

- Refer to “When using a Linked Printer (sold separately)” (p.196) for information on connecting and using a Linked Printer (sold separately).

Note:

- Pressing the  will open the Mode Screen no matter which screen you are currently on.


Basic Screen Layout

The name and function of each area of the basic screens are explained below. The display of the basic screen differs depending on whether you are scanning a paper document or printing from a computer.

Note:

- The display for each basic screen differs depending upon the mode.

Scanning and Printing from a Paper Document

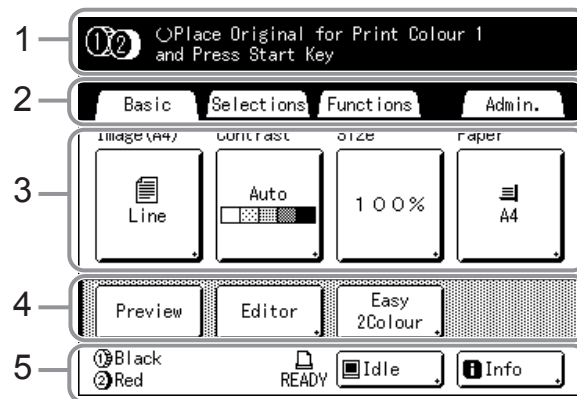

1) Message Area

Displays the printer status and operational instructions. If functions such as Programme (p.122) or Ink Saving are used to print, the programme information and/or function icons are displayed.

2) Tab Area

Touch a tab to display its screen.

3) Functions Area

The main functions for master-making/printing steps. Each button shows the current setting. Touch the button to make changes.

4) Direct Access Area

Up to four buttons can be selected in advance. Use this area to store most frequently-used functions.

You can make selections on the Admin. screen.

p.167

5) Status Area

Displays the current status of the machine and the Linked Printer (sold separately).

: Colour of the currently installed Print Drums.

: Current status of the Linked Printer.

(A Linked Printer must be specified in the Admin. screen first. Otherwise, it will not be displayed.)

- **[ERROR]**: Error in network, etc..
- **[- - -]**: Linked Printer information cannot be retrieved.
- **[READY]**: Linked Printer is ready



: Status of data sent from a computer.
Touch to display the list of data being received.


- **[Idle]**: Ready to receive data
- **[Data-Map]**: Processing data for printing.
- **[Pause]**: Ready for output.
- **[Error]**: Error in data transmission.
- **[Blocked]**: Cannot receive data



: Touch to display **i** information (consumables information, Disposable Box Space, Print Drum information, date/time).

p.212

Printing from a Computer Data

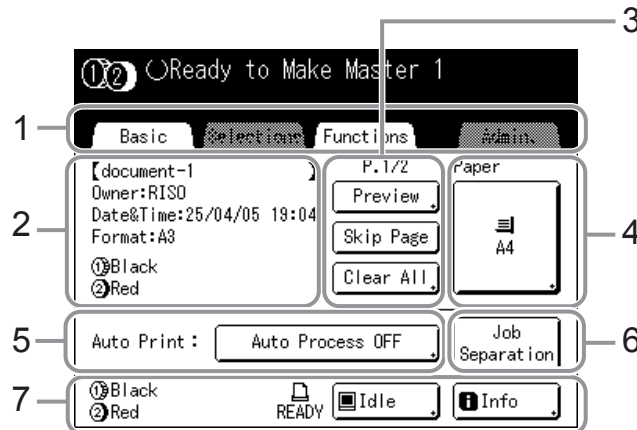

1) Tab Area ("Selections" and "Admin." tabs are disabled)

Touch a tab to display its screen.

2) Job Properties Area

Properties of the current print job is displayed.
Refers to the computer data ready for print output.

3) Job Operation Area

- **[Preview]:** Displays the master making image of the page currently awaiting creation. (Available only in the Master Making Basic Screen.)
- **[Renew Page]:** Create another master when current one is damaged or compromised, without having to download data from the computer. (Available only in the Print Basic Screen.)
- **[Skip Page]:** Stops processing the current page and moves on to process the next page.
- **[Clear All]:** Stops the current process altogether.

4) Paper Button

☞ p.80

5) Auto Print

A printing operation can be set to stop at certain points. (overrides driver settings)

6) Optional Device Area

Displays when an optional device is attached.
Touch to activate.

Note:

- When no optional device is attached, "150ppm" button is displayed.

7) Status Area

Displays the current status of the machine and its Linked Printer (sold separately).
This area shows the same information as that on the "Printing from the Original Document" screen. (☞ p.25)


Note:

- Depending upon the usage environment, some of the "Admin." features may not be available ("Admin." tab may not be displayed). Consult your dealer (or authorised service representative) for details.
- For information on other screens and their functions or settings, refer to corresponding pages.

Other Screens


◆ Selections Screen

Quickly change settings for a function or open its screen.
Up to 9 functions can be displayed for quick access. (p.167)

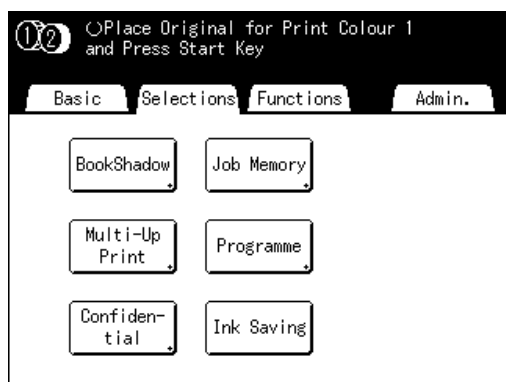



◆ Functions Screen

Access to a variety of functions.

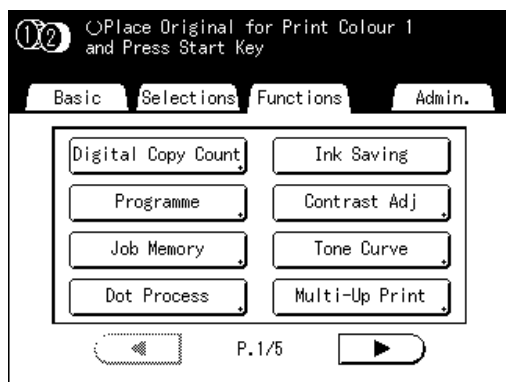





◆ Admin. Screen


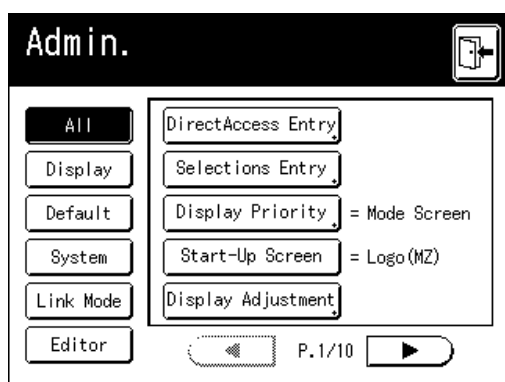
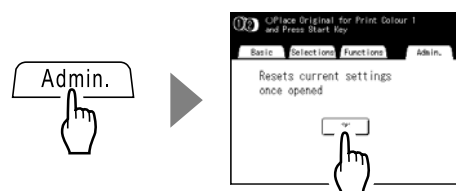




Changes the default values of various functions.

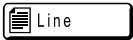

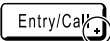Buttons on Touch Screen

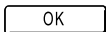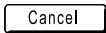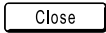Select buttons by lightly touching with a finger.
Touch again to cancel the selection. Avoid pressing with excessive force.

	Not Selected.
	Selected.
	Buttons in grey cannot be selected.
	Press a button with a + on the right side to expand options or display Setup screens.

Frequently Used Buttons	
	Activates/Executes a setting.
	Cancels a setting.
	Closes a current window.
 	Switch pages.
 	Increases/decreases selected values (numbers, location, etc.). Scrolls through screens.


Basic Operations

Preparing to Print

First, set up the Paper Feed Tray and Paper Receiving Tray of the machine.


Turning the power ON

1 Turn the power ON.

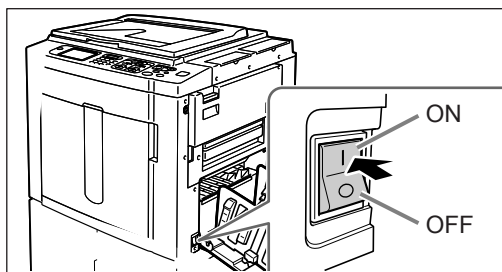


2 Select a mode.


This example is for “Dual-Colour Printing”.

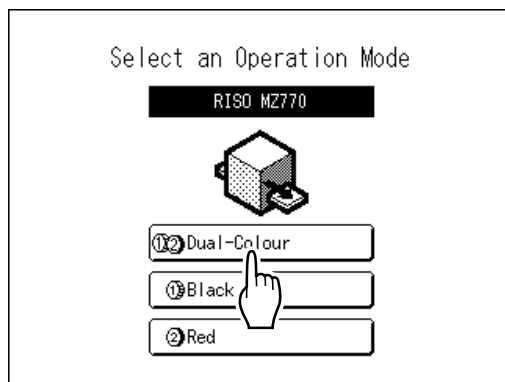

3 Touch [MasterMake] on the Operation Selection Screen.

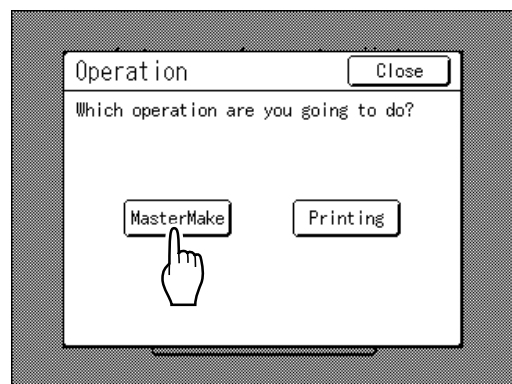

The Master Making Basic Screen appears.

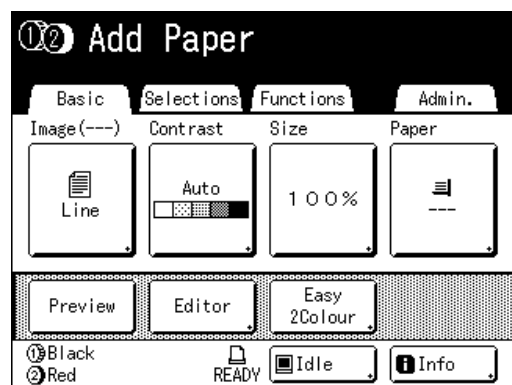


Setting up the Paper Feed Tray and Loading Paper

Important!:

- Do not use unsuitable paper, or mix paper of different sizes. Doing so can cause paper jams and damage the machine.
p.14


1 Open the Paper Feed Tray.

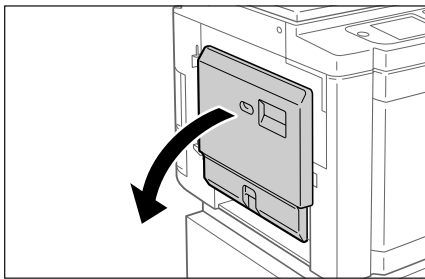

Pull the Paper Feed Tray to open until it comes to a rest.

2 Load paper.

- Place paper in the printing orientation.
- Slide the Feed Tray Paper Guides to fit to the sides of the paper. Then turn the right and left Feed Tray Paper Guide Levers to lock the guides.

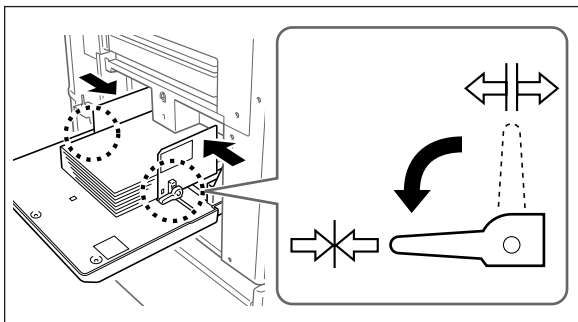

↔ : Unlock
⌘ : Lock


Important!:

- Make sure that the Feed Tray Paper Guides fit tight up against the paper. Failure to do so can produce undesired results.

Note:

- Custom size paper must be registered on the Admin. screen before use.
p.171
Failure to do so may create an incomplete master.

3 Select the paper feed pressure.

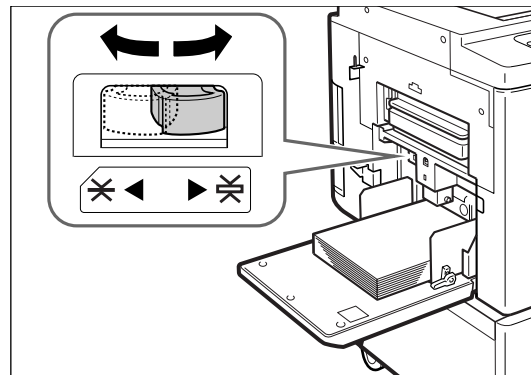


Position the Paper Feed Pressure Adjustment Lever according to the finish of the paper.

✕ : For standard paper

⌘ : For thick or smooth-surface paper

4 Check the Basic Screen.

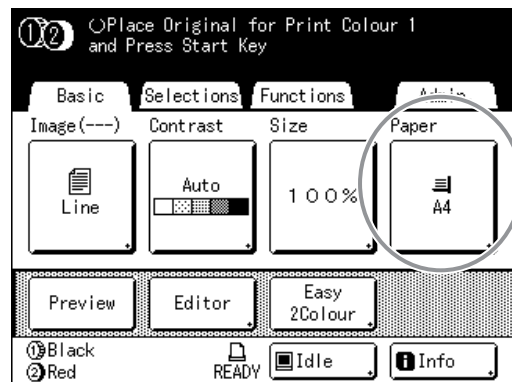

Note:

- Paper size is automatically detected. When size display shows "Custom", custom size paper is loaded, or Feed Tray Paper Guides are not properly set against the paper. Make sure that the paper fits tightly against the Feed Tray Paper Guides. When using custom-sized paper, touch **[Paper]** and select the size.
p.80

Adding or Replacing Paper


When you add paper or replace with paper of a different size at the time of printing, press the Feed Tray Descent Button to lower the Paper Feed Tray.

- Press the Feed Tray Descent Button to lower the Paper Feed Tray.
- If you press and hold the button, the Paper Feed Tray will be lowered until you depress the button.
- When the tray runs out of paper or you remove all paper, the tray is automatically lowered to the bottom.

Important!:


- When changing to a different paper size, remember to readjust the Receiving Tray Paper Guides and Paper Stopper.
- When changing to a different quality paper, remember to adjust the Paper Feed Pressure Adjustment Lever.

Paper Feed Descent Button

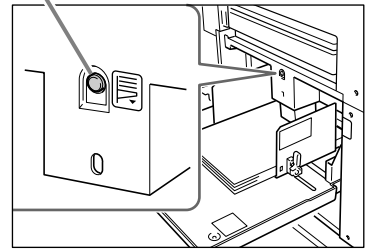


Closing the Paper Feed Tray

Before closing the Paper Feed Tray, remove the paper and widen the Feed Tray Paper Guides to the limits. Then close the Paper Feed Tray.

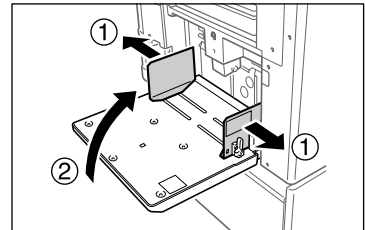

Setting up the Paper Receiving Tray


1 Open the Paper Receiving Tray.

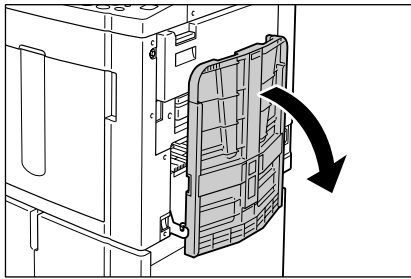

Pull the Paper Receiving Tray down until it comes to a rest.

2 Position the Receiving Tray Paper Guides.

- 1) Raise the Receiving Tray Paper Guides.
- 2) Hold their lower part and slide them to fit the paper width.

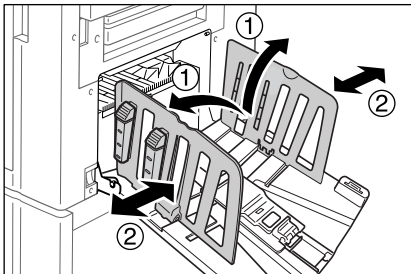


Important!:


- For thick paper such as drawing paper, position the Receiving Tray Paper Guides a little wider than the actual paper width.

3 Set the Paper Stopper.

- 1) Raise the Paper Stopper.
- 2) Slide to fit the length of the paper.

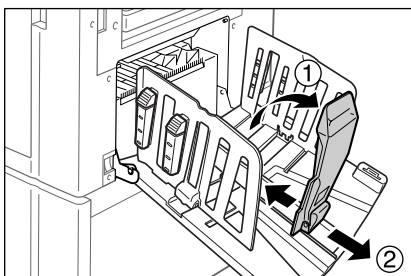


4 Adjust the Paper Arrangers.

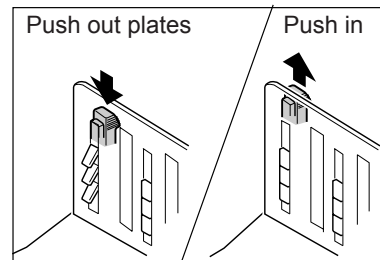


Alignment of paper is affected by sizes and strength of paper. Adjust the Paper Arrangers so that printed paper is aligned. Press the Paper Arranger to push the plates out, pull up to pull them in.

◆ For plain paper

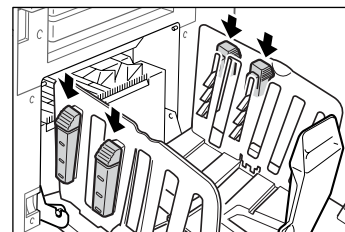


Press to open all of the four Paper Arrangers.

◆ For plain paper with images lopsided on page

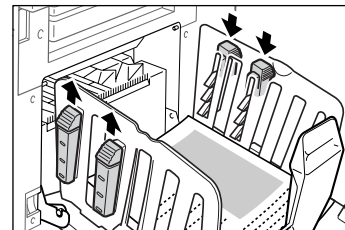

Press to open the two Paper Arrangers on the more heavily printed side.

◆ For thick paper

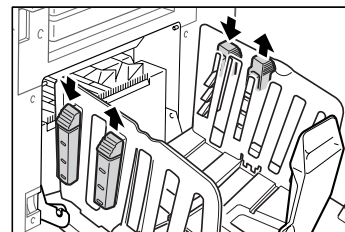


Press to open the two Paper Arrangers (right and left) closer to the machine.


Closing the Paper Receiving Tray

Remove all printed copies and follow the steps below to close the Paper Receiving Tray.


- 1) Slide the Paper Stopper to the edge of the Paper Receiving Tray.

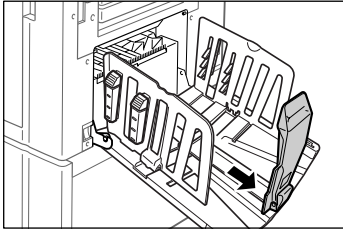


- 2) Fold in the Paper Stopper.

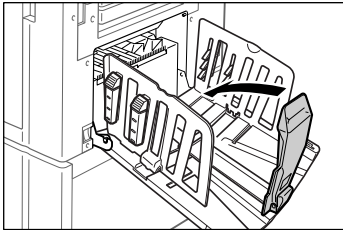

- 3) Pull up the Paper Arrangers, slide the Receiving Tray Paper Guides to the left and right as far as they will go.

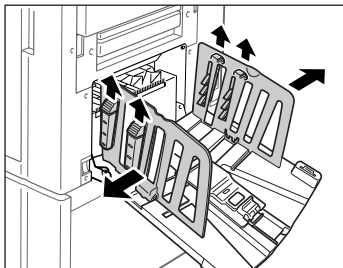

- 4) Fold in the Receiving Tray Paper Guides.



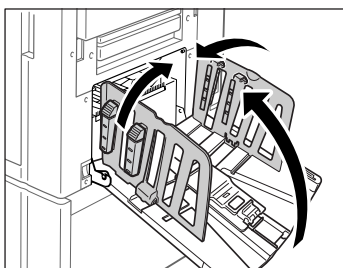

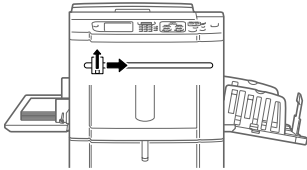
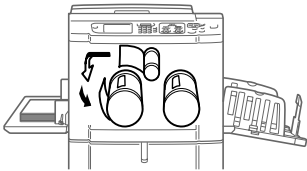



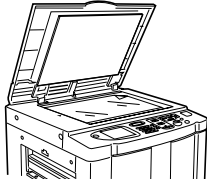
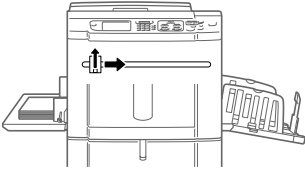
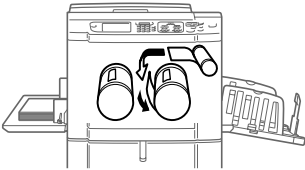
- 5) Close the Paper Receiving Tray.



Basic Process

The general print job flow for 2-Colour printing is explained here.

There are two methods for 2-Colour printing: Preparing two originals separated by colour (For Drum 1 and For Drum 2), or separating the colours of one original into two.

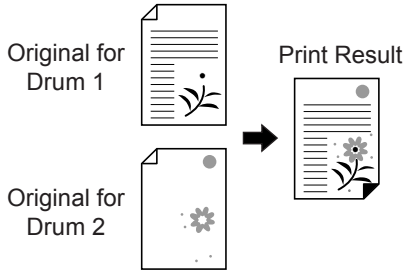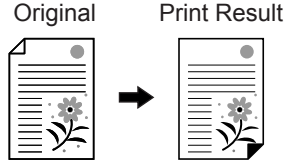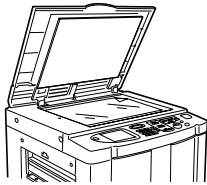
Process	Operation Flow	
	For 2-Colour printing with 2 originals separated by colour:	For 2-Colour printing by separating the colours of a single original (when using Easy 2Colour)
	 <p>Original for Drum 1</p> <p>Original for Drum 2</p> <p>Print Result</p>	 <p>Original</p> <p>Print Result</p>
Master-Making	<p>Place the original for Drum 1.</p>  <p>Place the original on Platen Glass or in ADF unit (option).</p>	
	<p>Place the original.</p>  <p>Place the original on Platen Glass or in ADF unit (option).</p>	
	<p>Scanning the Original</p>  <p>The scanner scans the original.</p>	
	<p>Master Making on Drum 1</p>  <p>A master for Drum 1 is made and wrapped around Drum 1.</p>	

Process	Operation Flow	
	For 2-Colour printing with 2 originals separated by colour:	For 2-Colour printing by separating the colours of a single original (when using Easy 2Colour)
Master-Making	Proof Copy (1)	
		
	A one colour proof copy is printed using only Drum 1.	
	▼	
	Place the original for Drum 2.	
		▼
	▼	▼
	Scan the Original.	▼
		▼
	▼	
	Makes a master on Drum 2.	
		
	A master for Drum 2 is made and wrapped around Drum 2.	
	▼	

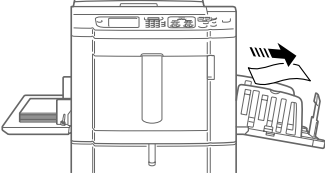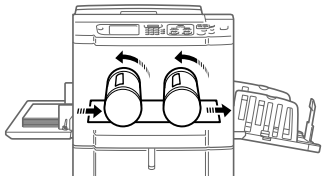Process	Operation Flow	
	For 2-Colour printing with 2 originals separated by colour:	For 2-Colour printing by separating the colours of a single original (when using Easy 2Colour)
Master-Making	<p>Proof Copy (2)</p>  <p>A 2-colour proof copy is printed.</p>	
Printing	<p>Print</p>  <p>The specified number of copies are printed.</p>	

2-Colour Printing with 2 Originals

A total of 2 originals (For Drum 1, For Drum 2) are printed.

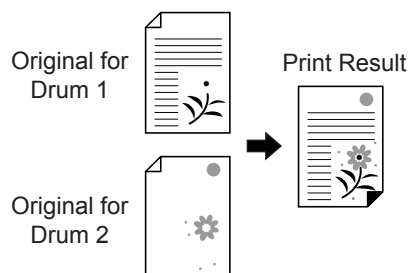




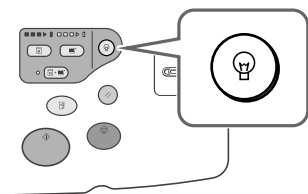
Important!:

- Use paper that is 182 mm × 257 mm (B5) or larger.

1 Turn the power ON.


Note:

- When the power is OFF, both the Display and the  key are off. Turn the power ON.
- If the  key is lit, the machine is in Energy Saving mode. Press the  key to cancel Energy Saving mode.




2 Selecting Dual-Colour Printing.


1) Touch [Dual-Colour].

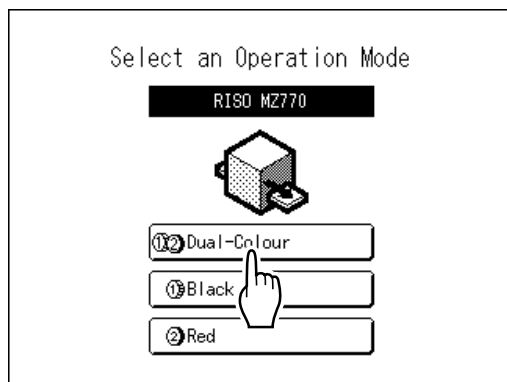


Note:

- If a basic screen other than the dual-colour printing screen is showing, press the  key to display the Mode Screen.

2) Touch [MasterMake] on the Operation Selection Screen.

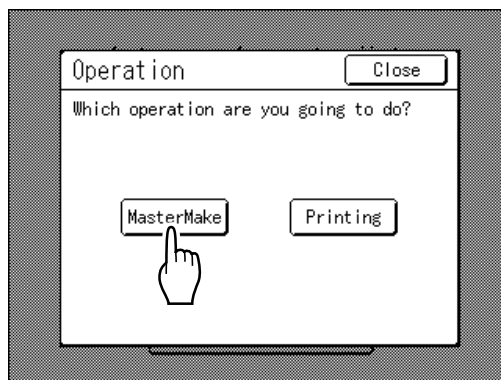


The Master Making Basic Screen appears.

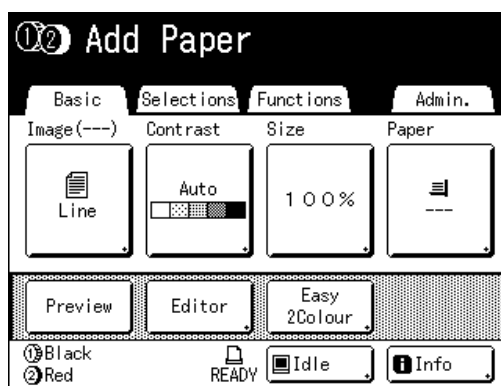

3 Load paper.

See p.31 for details on how to load the paper.

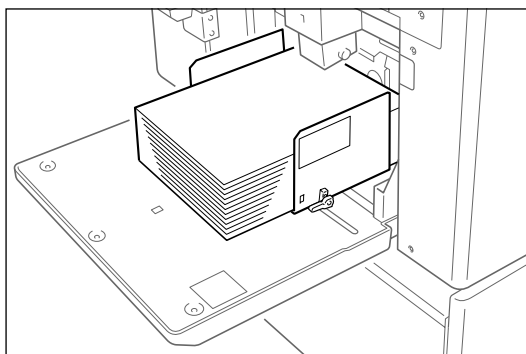


4 Set up the Paper Receiving Tray.

See p.33 for details on how to set up the Paper Receiving Tray.

5 Place the original for Drum 1.

Place the original on the Platen Glass or in the optional ADF (Auto Document Feeder) unit.

◆ When placing on the Platen Glass

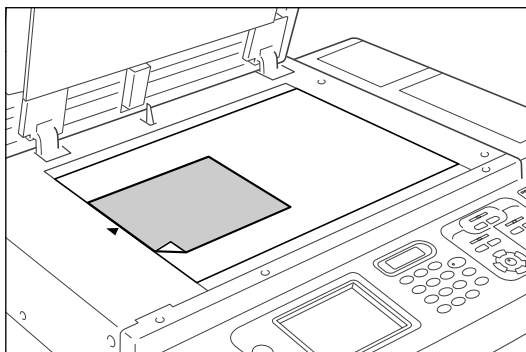


Place the original face down on Platen Glass. Align centre on the top edge, and close Platen Cover.

Magazines, books, scrap books, etc. should be placed on Platen Glass.


Tip:

Using the Gauge Cover

The Gauge Cover allows you to align original images precisely on the Platen Glass even if they are not squared on the sheet. Shift the original sheet along the grid lines printed on the cover, touching it through the openings on the cover.

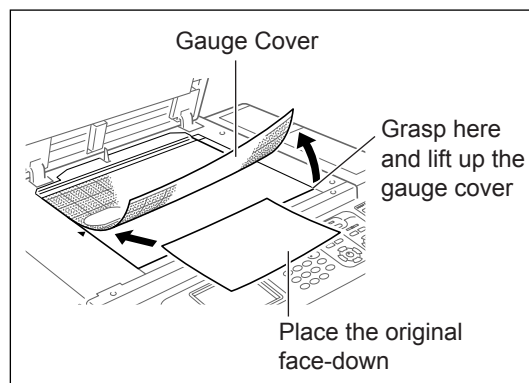

◆ When placing in the ADF unit (Option)

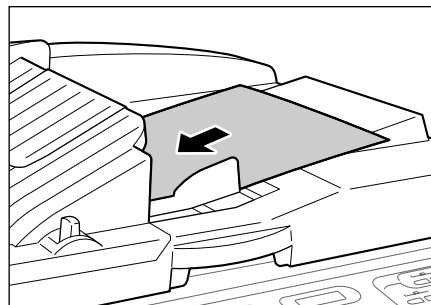

Use the ADF unit if you are printing multiple originals in succession. Place originals face-down and then adjust the ADF Original Guides to the width of the originals. Insert the originals as far into the ADF unit as possible.

If you are using the ADF unit, both originals for Drum 1 and Drum 2 can be set together. If you choose to do so, place the original for Drum 1 on top and the original for Drum 2 on the bottom.

 
Note:

- If you are placing the originals one at a time, for the procedures below, place them in the same way you would when placing on the platen glass. If two originals are placed at once, the procedures differ, since masters are consecutively made from Drum 1 and Drum 2.

Important!:

- The ADF unit can accommodate originals of 90mm × 140 mm and above. Smaller originals should be placed on the Platen Glass.
- Do not place multiple originals of differing sizes or otherwise unsuitable originals into the ADF unit. Doing so can cause paper jams and damage the machine.

☞ p.14

- Once the original is placed into the ADF unit, "Auto Process" setting is turned ON. Press the  key to turn it OFF.

Default "Auto Process" setting for the ADF unit can be changed on the Admin. screen.

☞ p.159


Tip:**When placing multiple sets of originals in the ADF unit**

If you want to set multiple sets of originals of 2 sheets per set (for Drum 1 and Drum 2), place as indicated below.

- In each set, place the originals for Drum 1 on top and the originals for Drum 2 on bottom.
- Place so that the last set is on top and the first set is on bottom.


Ex.)


To create a total of 2 dual-coloured sheets, place a total of 4 sheets as shown in the diagram below.

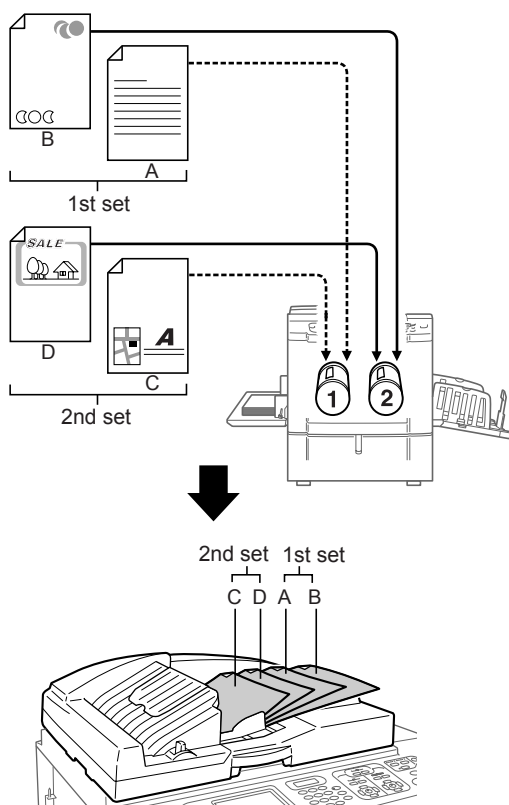**Note:**


- Up to 50 sheets of 64g/m² paper can be placed in the ADF unit.

6 Configure print functions.


In the Master Making Basic Screen, select functions as needed. See the item for each printer function for further information about print functions. If it is not displayed, press  to display the Master Making Basic Screen.

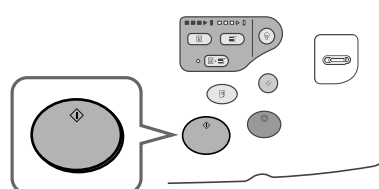7 Press the  key.

The scan of the original for Drum 1 begins. Once the scan has completed, the master is made for Drum 1.

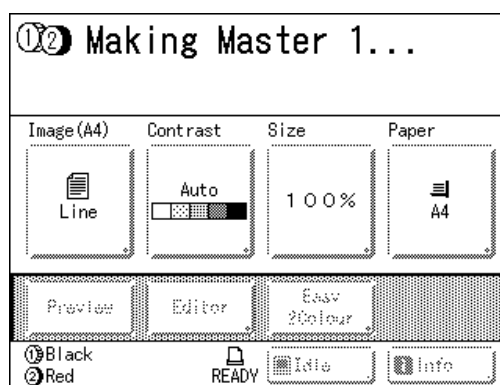

Once the masters are made, one proof copy from Drum 1 alone is printed, and the Master Making Basic Screen for Drum 2 appears.

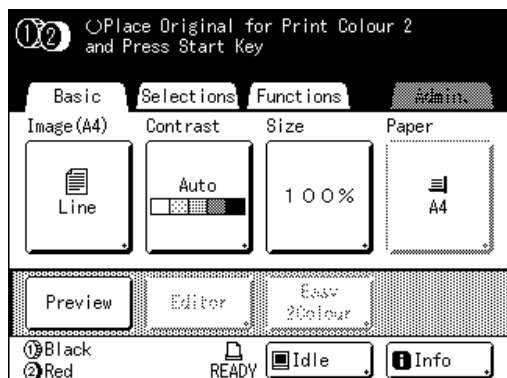

In step 5, if two originals have been placed together in the ADF unit, one proof copy from Drum 1 only is printed, and the master is subsequently made on Drum 2. Continue on to step 11.

Tip:

Auto Idling

When "Auto Idling" is set to ON, idling operations may occur when master-making process is initiated.

Factory default is set to idle automatically at the beginning of the master-making when the machine is inactive for over 12 hours.

To toggle "Auto Idling" ON/OFF, or to modify number of hours before activating next idling, go to the Admin. screen.

☞ p.161

Idling can also be manually initiated when making a master.

☞ p.150

8 Place the original for Drum 2.

◆ When Placing on Platen Glass

Remove the original for Drum 1 from the platen glass and place the original for Drum 2 in the same way as indicated in step 5.

◆ When placing one original at a time in the ADF unit (when [Auto Process] is turned off)

You do not need to remove the Drum 1 original. Place the original for Drum 2 in the same way indicated in step 5.

9 Set the print functions for the Drum 2 original.

You can set print functions of the original for Drum 2 as needed.

If you make no settings, the same settings as the first original are applied.

Note:

- The print functions that can be set for the Drum 2 original are as shown below.

◆ Auto Process (☞ p.81)

Making a master and printing in one pass

◆ Image Processing mode (☞ p.68)

Selecting Image Processing mode for the document

◆ Scanning Contrast (☞ p.75)

Selecting Scanning Contrast for the original

◆ Size (☞ p.76)

Enlarging/Reducing the Image

◆ Dot Process (☞ p.70)

Applying Dot Process to photos

◆ Tone Curve (☞ p.73)

Adjusts the gradation of a photo original.

◆ Top Margin (☞ p.103)

Cuts the top margin of an original with a margin and creates a master.

◆ Side Margin (☞ p.105)


Adjusts the side margins and creates a master.

This setting is available when the ADF (Auto Document Feeder) unit (Option) is installed.

◆ Max. Scan (☞ p.99)


Making a master that utilizes the maximum printing area

10 Press the key.

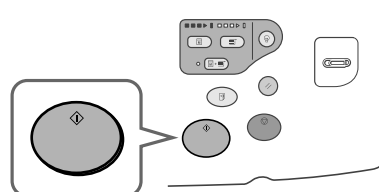


The scan of the original for Drum 2 begins.

Once the scan has completed, the master is made for Drum 2.

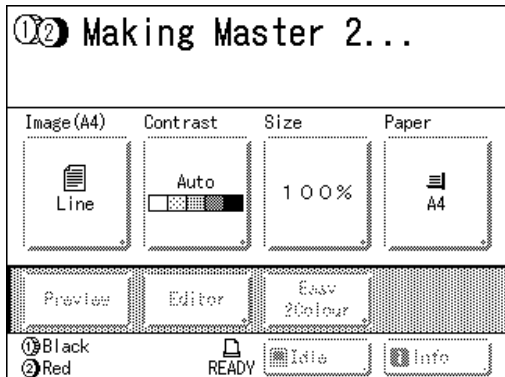

Once the masters are made, a 2-Colour proof copy is printed, then the Print Basic Screen appears.

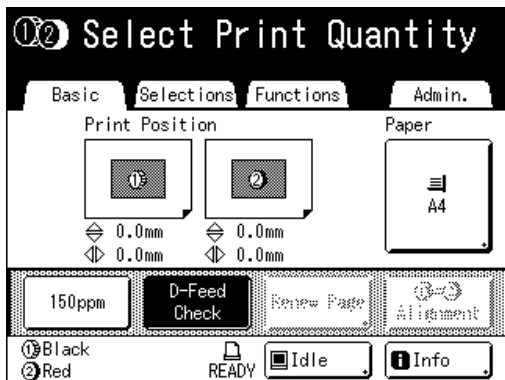

Note:

- When "Auto Process" is selected, the process will be different.
p.81

11 Check the proof copy result.

When a proof copy is printed, the Print Basic Screen will be displayed automatically. Check the proof copy; e.g., print position and density.

If necessary, change print position and density.

- Print Position (p.113)
- Print Density (p.112)

After adjustment, press the key to print a proof copy.


Important!:

- When the machine has not been used for a long period of time, the print quality may suffer due to dry ink on the Print Drum. Press the key to print proof copies several times.

Note:

- You can also adjust the print position, the density, and the speed while print process is in progress.

12 Enter the number of copies using the Print Quantity Keys.


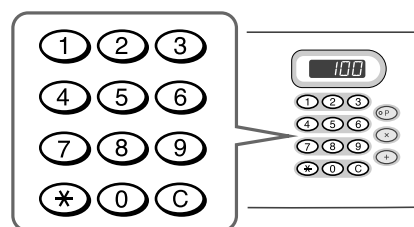


The specified number is displayed on the Print Quantity Display.

Note:



- To change the number, press the key, then re-enter the correct number.

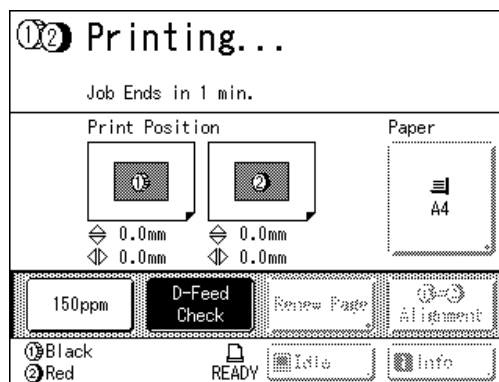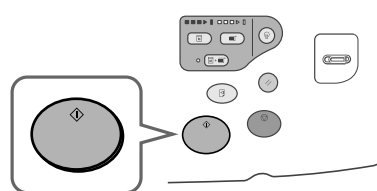13 Press the key.




The specified number of copies will be printed.

Note:

- Press the  key to interrupt printing operation currently underway.
- If the machine is inactive for a certain period of time, it determines that the current job is completed, even if the actual printing is still in progress. When the machine is connected to a computer, and if another person accidentally sends a job from the computer, this causes a new master to be made, discarding the current one. To prevent this from occurring, you may set a "Reserve Period". We recommend that you activate the "Reservation" setting when printing leaflets etc. to prevent interruption.
☞ p.149
- Easily restore current settings by saving them into memory. Saved settings can be retrieved even when the  key is pressed, or after turning the power off.
☞ p.140

14 Press the key when print job is complete.

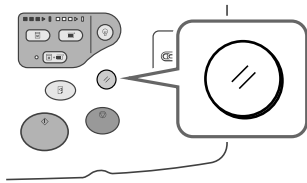


The setting returns to its default value.

Note:

- After printing is completed, the master remains on the Print Drum. To protect confidential documents from unauthorised duplication, use the Confidential feature to discard the master after printing.
☞ p.152


15 Remove the printed paper.

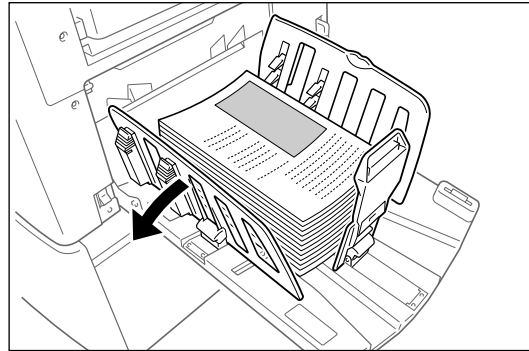

Open the Receiving Tray Paper Guides and remove the paper.

2-Colour Printing with 1 Original [Easy 2Colour]

One original is scanned, is divided into Drum 1 and Drum 2, and a dual-colour print is made.

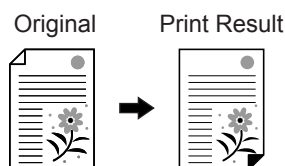

Important!:

- Use paper that is 182 mm × 257 mm (B5) or larger.

Easy 2Colour Types

There are two ways of separating colours for “Easy 2Colour”.

◆ Separating by contrast of the original

In this separation method, the dark and light sections of the original are automatically detected.

You can use 3 functions with this method: “Red Colour”, “Hand Writing--1”, and “Hand Writing--2”.

◆ Separating by specified area

Draw around the part of the original that you want to separate by using a recommended pen.

You can use 2 functions with this method: “Specified Area” and “Separation Sheet”.

This function cannot be used with the following functions.

- Multi-Up Print
- Size (enlargement/reduction)
- Stamp
- OneSide MasterMake
- Printing from a computer data
- 2 Up
- Book Shadow
- Auto-Link function


Important!:

- If you use “Red Colour”, “Hand Writing--1” or “Hand Writing--2”, “Contrast” is set to “Auto” and “Image” is set to “Line”.
- If you use “Specified Area” or “Separation Sheet”, adjust the “Contrast”.
- If you use “Specified Area”, place the original on the platen glass.

Red Colour

Separates the colours of an original printed in black and light red.

The master of the black portion of the original is created on Drum 1, the red portion on Drum 2 (drums are reversed if [Sw.Colour] is selected).

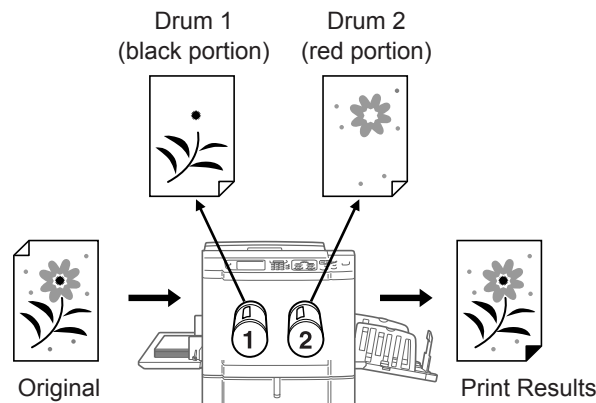

Note:

- If you are creating an original on a computer, use orange for red.


Hand Writing--1

Separates lighter images written with the recommended pen, pencil or mechanical pencil from black printed images by copier or a laser printer.

The master of the prior original is created on Drum 1, the handwritten portion on Drum 2 (drums are reversed if [Sw.Colour] is selected).

Note:


- Do not use a ballpoint pen to write.
Red writing may be detected as black.
- Use H to 2B for mechanical pencils.

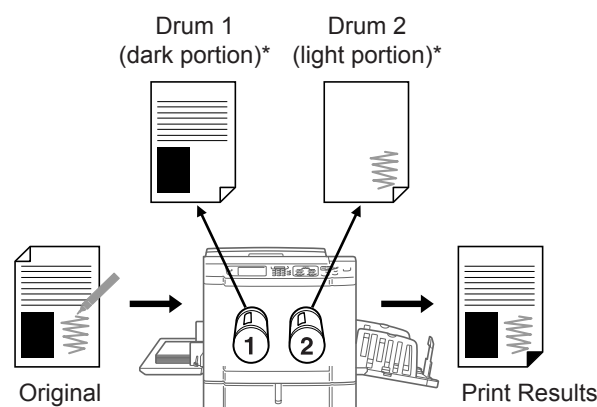

For details about Contrast, see “About Red Colour, Hand Writing--1, Hand Writing--2 Originals” (p.46).

Hand Writing--2

Separates handwriting written using the recommended pen or red pencil on originals from black printed images by a RISO printer or ink-jet printer (documents printed with a lighter shade of black, or with water-based ink, etc.). The master of the prior original is created on Drum 1, the handwritten portion on Drum 2 (drums are reversed if [Sw.Colour] is selected).

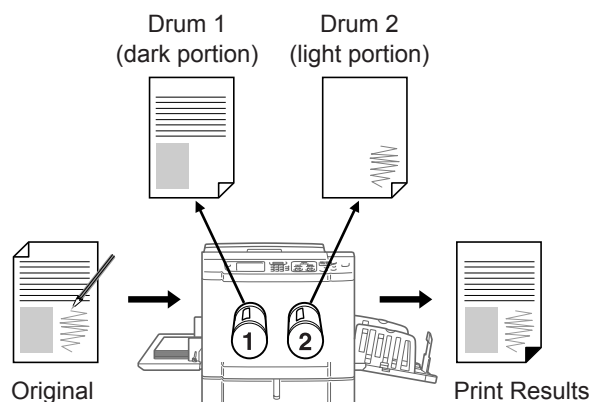

Tip:

About Red Colour, Hand Writing--1, Hand Writing--2 Originals


The “Easy 2Colour” function separates colours by detecting light and dark portions of the original. This function does not detect colours. The master of the dark portion of the original is created on Drum 1 (black) and the light portion on Drum 2 (red).

- Even if the pen is red, the contrast of the writing is dark, so it will be detected as black. In addition, if the contrast is extremely light, neither a red nor black master will be made.
- We recommend a Sans-Serif fonts of 10.5 point or larger for the original. For Serif fonts, please use 18 point or larger font. If the text is too small, it will be detected as red.
- Text that is of average contrast (not dark and not light) will be created on both a black and red master. This will cause the text edges to appear fuzzy (text will be both red and black, text will be missing, etc.).
- Contrast and tone level will determine whether photos, gradations or shaded areas are printed in black or red.

Specified Area

Separates the original that has been written directly upon with the recommended pen in the desired area.

The master of the portion outside the specified area is created on Drum 1, the portion within on Drum 2 (drums are reversed if [Sw.Colour] is selected).

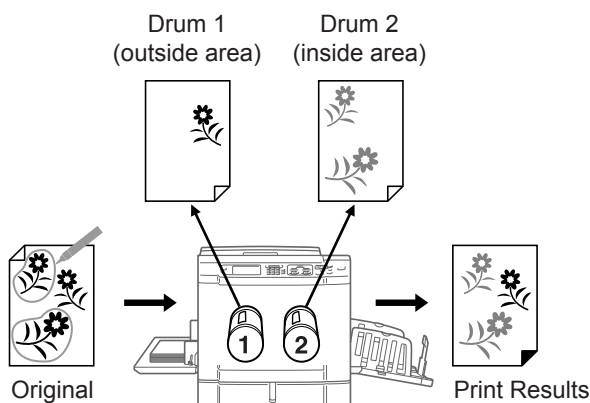


Important!:

- Use “Separation Sheet” if the original contains photos or colour images.


Separation Sheet

Separates the original using a separate sheet (Area Specification Sheet) that is written on using the recommended pen for the desired area. The master of the portion outside the specified area is created on Drum 1, the portion within on Drum 2 (drums are reversed if **[Sw.Colour]** is selected).

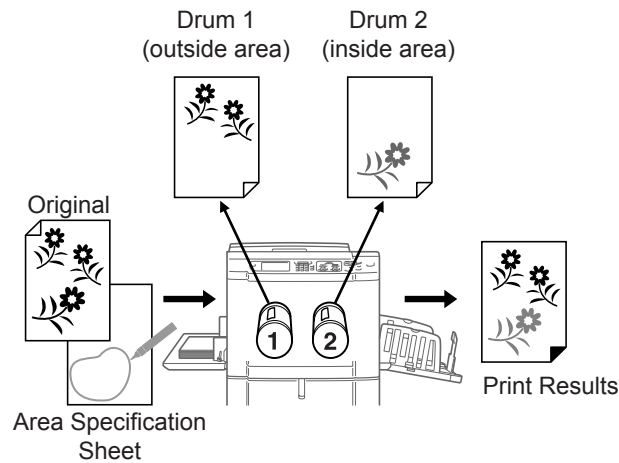

Note:

- About the Area Specification Sheet
Use the area specification sheet if you are using an original that cannot be written on. Also use the area specification sheet for separating originals with photos or colour images. The Area Specification Sheet should be a white sheet of paper the same size as the original. Place the sheet on the original and draw around the area to be separated (the area to be printed in colour) with the pen.

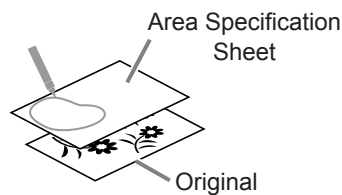

Tip:


About the Specified Area, Separation Sheet

Use the recommended pen to create the area to be specified. If you specify the area with a non-recommended pen, separation may not properly occur.

- Make sure to properly connect the edges of the area you draw with the pen. If the edges are not connected, the specified area may not be recognized.



- The line width of the specified area should be between 1 mm to 3 mm (2.25 to 4.5 points). Lines less than 1 mm or wider than 3 mm will not be recognized as a specified area.

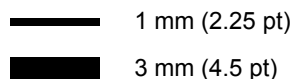


- Areas that are 10 mm × 10 mm or less will not be recognized as a specified area.
- If the area specified by the pen exceeds A3 size, it will not be recognized.
- Do not create dark points on the pen line.



- Up to 20 pen areas can be created on one original. An error will occur if you select more than 20 areas.
- Do not overlap the pen areas. If the edges touch, the specified area may not be recognized. Leave 3 mm or more of space between pen-enclosed areas.



- Make sure the pen line is approximately 3 mm away from text or an image of the original. Sections within 3 mm of the pen line will be lost.

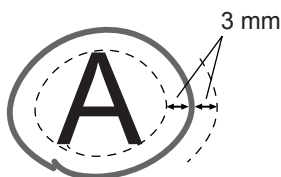

- Do not enclose an area within an area. If you do so, the inner pen area will not be recognized.






- Specified areas outside of the scanned area (size of the print paper being used) will not be separated.

Operating Procedures for Easy 2Colour

1 Turn the power ON.


Note:

- If the  key is lit, the machine is in Energy Saving mode. Press the  key to cancel Energy Saving mode.

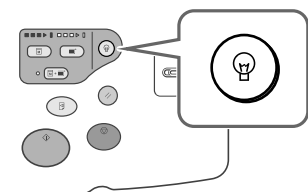


2 Select Dual-Colour Printing.


1) Touch [Dual-Colour].

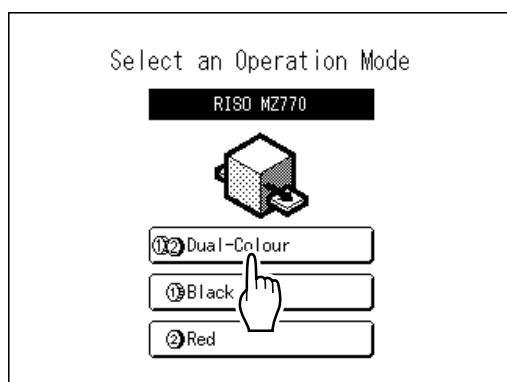

Note:

- If a basic screen other than the Mode Screen is showing, press the  key to display the Mode Screen.


2) Touch [MasterMake] on the Operation Selection Screen.

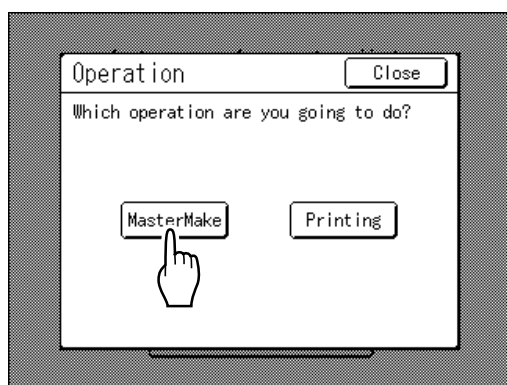

The Master Making Basic Screen appears.

3 Load paper.

See [p.31](#) for details on how to load the paper.

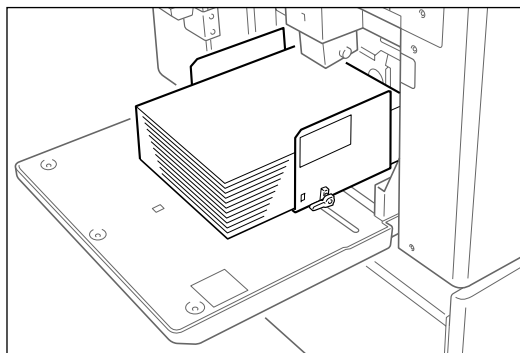

4 Set up the Paper Receiving Tray.

See [p.33](#) for details on how to set up the Paper Receiving Tray.


5 Place the original.

Note:

- The procedures for “Separation Sheet” are different.
See [p.54](#) for details.

◆ When placing on the Platen Glass

Place the original face down on Platen Glass. Align centre on the top edge, and close Platen Cover.

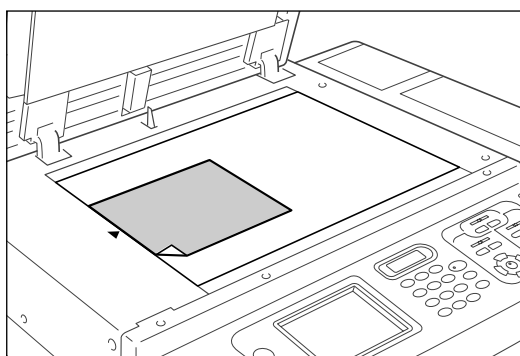

Important!:


- Do not remove the original until a 2-Colour proof copy has been printed (step 9).

Note:


- Scrap books, etc. should be placed on Platen Glass.

Tip:**Using the Gauge Cover**

The Gauge Cover allows you to align original images precisely on the Platen Glass even if they are not squared on the sheet. Shift the original sheet along the grid lines printed on the cover, touching it through the openings on the cover.

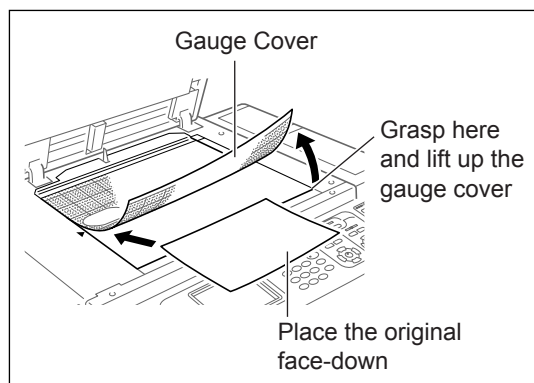**6 Select “Easy 2Colour”.**

1) Touch [Functions].

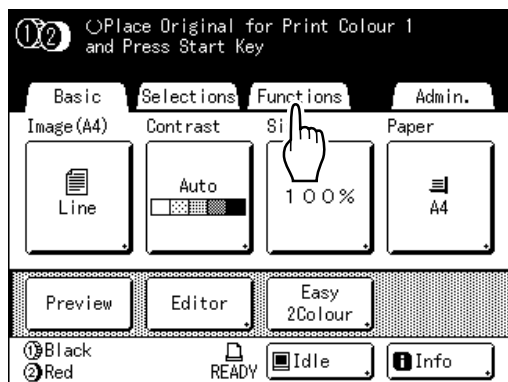


The Functions screen appears.

2) Touch [Easy 2Colour].



The Easy 2Colour screen appears.

3) Touch the button of the separation to use.

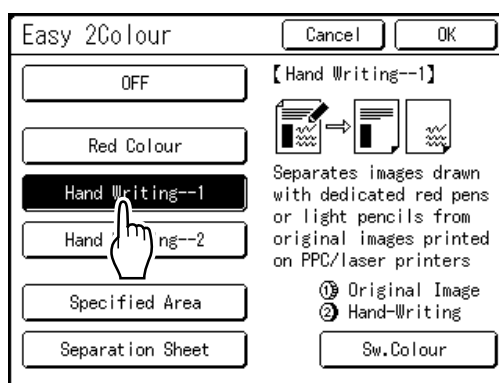**Note:**

- The part for which a master is being made (either the “Original Image” portion or the “Hand-Writing” portion) is displayed in the lower right section of the screen at Drum 1 (①) and Drum 2 (②). Touch [Sw.Colour] to switch the colour separations.


4) Touch [OK].


The Functions screen appears.

7 Configure print functions.

Make various settings as needed.

For further information, see the section for each print function.

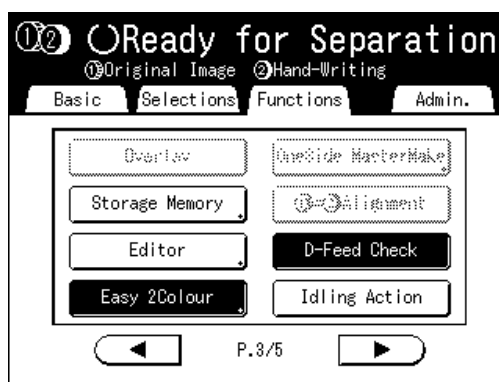


If it is not displayed, press  to display the Master Making Basic Screen.

Note:

- Set “Preview” to confirm the colour separation.
p.107




8 Press the key.

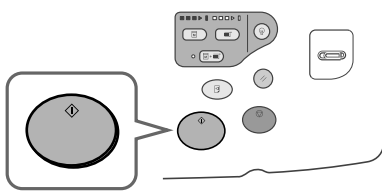


The machine scans the original, separates colours, then creates masters in a sequence.

Note:

- If you set "Preview" in step 7, the print process will temporarily stop once separation is complete.
p.107

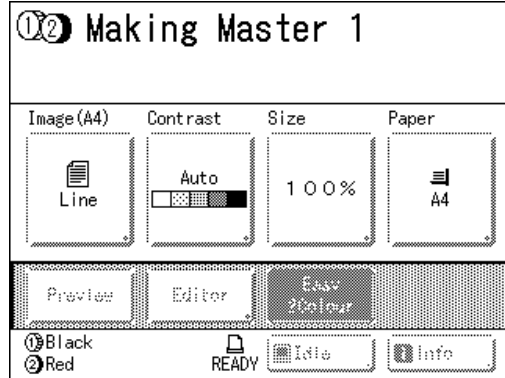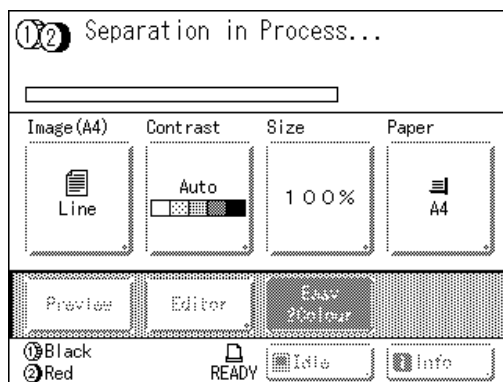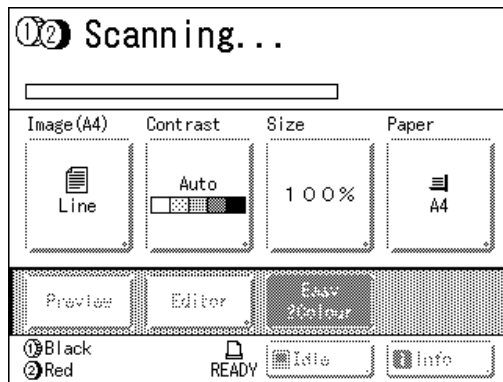

Once the master is made on Drum 1, one proof copy will print from Drum 1 only. A master will then be made on Drum 2.

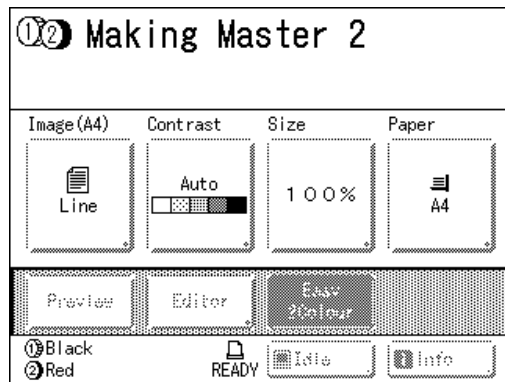

Once the master is made on Drum 2, a single 2-colour proof copy will print from Drum 2.

When a proof copy copy is printed, the Print Basic Screen appears.

Tip:

Auto Idling

Wait for a moment if "Idling" is displayed. Once idling has stopped, making of the master begins. Factory default is set to idle automatically at the beginning of the master-making when the machine is inactive for over 12 hours.


p.150

9 Check the proof copy result.


When a proof copy is printed, the Print Basic Screen will be displayed automatically. Check the proof copy; e.g., print position and density.

If necessary, change print position and density.

- Print Position (p.113)
- Print Density (p.112)

After adjustment, press the  key to print a proof copy.


Important!:

- When the machine has not been used for a long period of time, the print quality may suffer due to dry ink on the Print Drum. Press the  key to print proof copies several times.

Note:


- You can also adjust the print position, the density, and the speed while print process is in progress.

10 Enter the number of copies using the Print Quantity Keys.


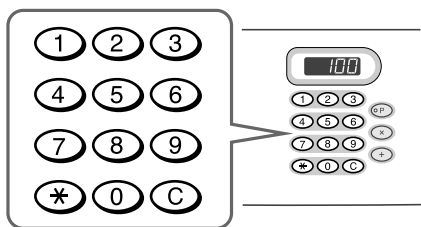


The specified number is displayed on the Print Quantity Display.

Note:



- To change the number, press the  key, then re-enter the correct number.

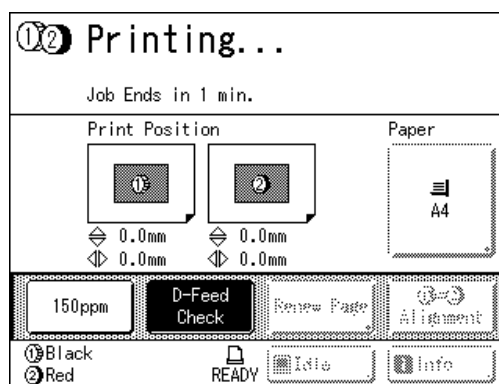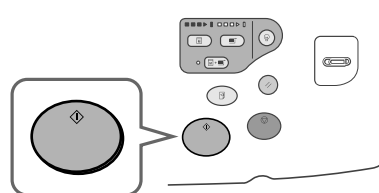11 Press the key.




The specified number of copies will be printed.

Note:

- Press the  key to interrupt printing operation currently underway.
- If the machine is inactive for a certain period of time, it determines that the current job is completed, even if the actual printing is still in progress. When the machine is connected to a computer, and if another person accidentally sends a job from the computer, this causes a new master to be made, discarding the current one. To prevent this from occurring, you may set a "Reserve Period". We recommend that you activate the "Reservation" setting when printing leaflets etc. to prevent interruption. p.149
- Easily restore current settings by saving them into memory. Saved settings can be retrieved even when the  key is pressed, or after turning the power off. p.140

12 Press the key when print job is complete.

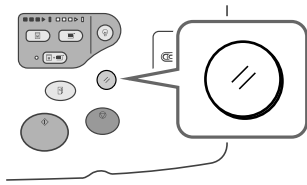


The setting returns to its default value.

Note:

- After printing is completed, the master remains on the Print Drum. To protect confidential documents from unauthorised duplication, use the Confidential feature to discard the master after printing.
p.152

13 Remove the printed paper.

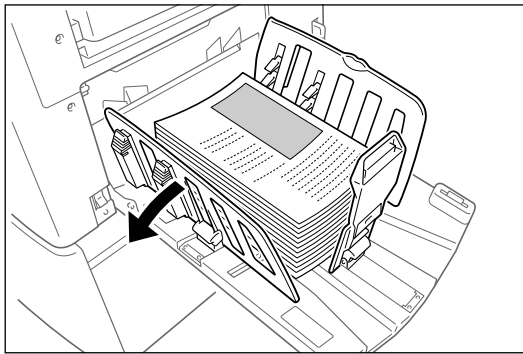

Open the Receiving Tray Paper Guides and remove the paper.


Setting an Original with the Separation Sheet

For the “Separation Sheet”, you must scan the Area Specification Sheet prior to scanning the original.

1 Place the Area Specification Sheet.

◆ When placing on the Platen Glass


Place the original face down on Platen Glass. Align centre on the top edge, and close Platen Cover.

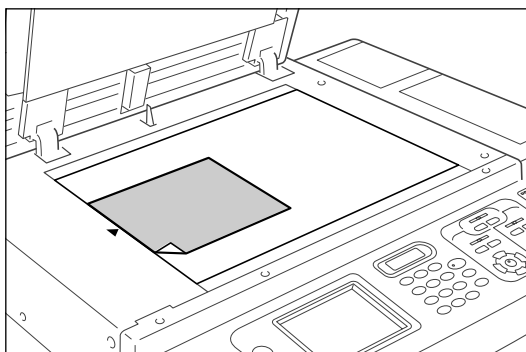

Tip:


Using the Gauge Cover

The Gauge Cover allows you to align original images precisely on the Platen Glass even if they are not squared on the sheet. Shift the original sheet along the grid lines printed on the cover, touching it through the openings on the cover.

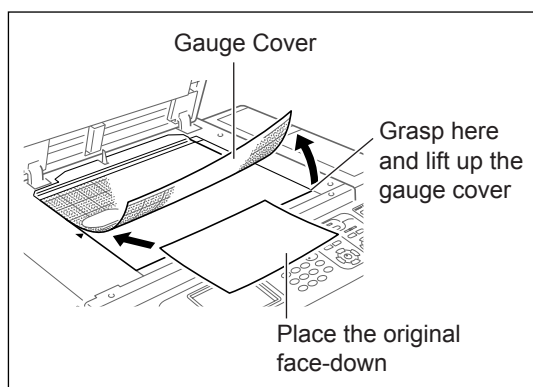

◆ When placing in the ADF unit (Option)

Place originals face-down and then adjust the ADF Original Guides to the width of the originals. Insert the originals as far into the ADF unit as possible.

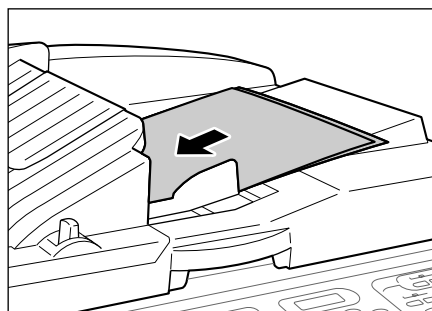


If you are using the ADF unit, you can set the original and the Area Specification Sheet at the same time. If you do so, place the sheet on top of the original.

Important!:

- See “Originals” (p.16) for the types of paper that you can use with the ADF unit.

2 Select “Easy 2Colour”.

1) Touch [Functions].

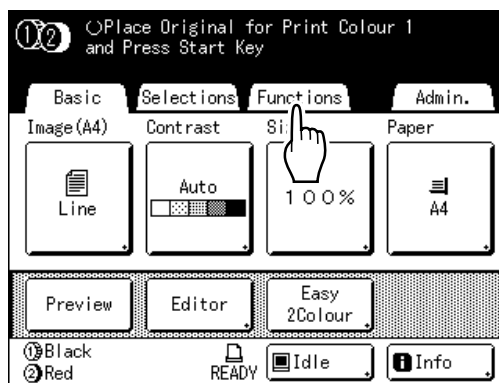


The Functions screen appears.

2) Touch [Easy 2Colour].



The Easy 2Colour screen appears.

3) Touch the button of the separation to use.

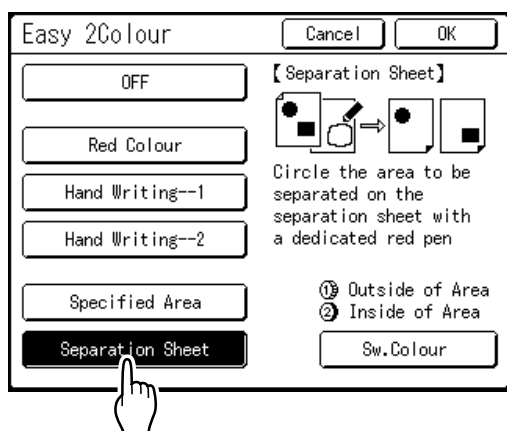

Note:

- The part for which a master is being made (either the "Outside of Area" or the "Inside of Area") is displayed in the lower right section of the screen at Drum 1 (①) and Drum 2 (②).

Touch **[Sw.Colour]** to switch the colour separations.


4) Touch [OK].

 
The Functions screen appears.

3 Configure print functions.


Make various settings as needed.

For further information, see the section for each print function.

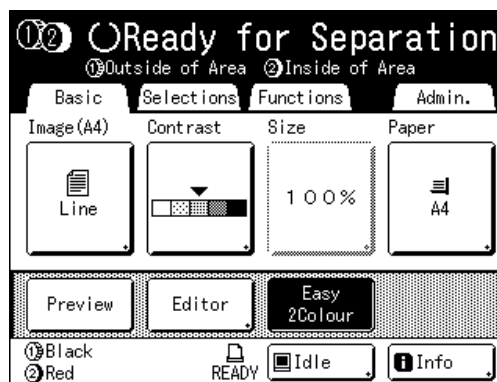


If it is not displayed, press  to display the Master Making Basic Screen.

4 Press the key.

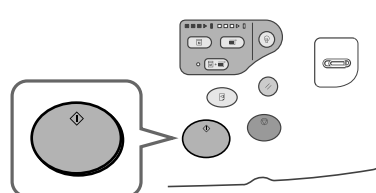

A scan of the Area Specification Sheet begins.

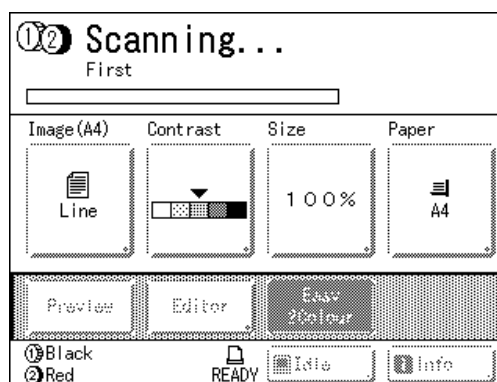

Once the scan has completed, the Master Making Basic Screen appears. The original is next scanned.

5 Place the original.

◆ When placing on the Platen Glass

Remove the Area Specification Sheet from the platen glass and place the original as described in step 1.

Note:

- Scrap books, etc. should be placed on Platen Glass.

◆ When placing one sheet at a time into the ADF unit:

Place the original as described in step 1.

◆ When placing two sheets together into the ADF unit:

You are not required to do anything. The original is automatically scanned.

6 Follow from step 8 of “Operation Procedure for Easy 2Colour” (p.51).

Printing with 1-Colour

Either Drum 1 or Drum 2 is used to print one colour.






Important!:

- For 1-colour printing, either Drum 1 or Drum 2 may be used, but we recommend using mainly Drum 1.

1 Turn the power ON.

Note:



- If the  key is lit, the machine is in Energy Saving mode. Press the  key to cancel Energy Saving mode.

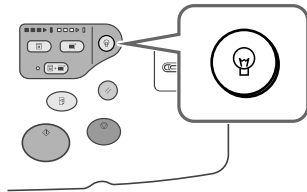


2 Select 1 Colour Printing.



  
- Touch the button of the drum to use.

Note:

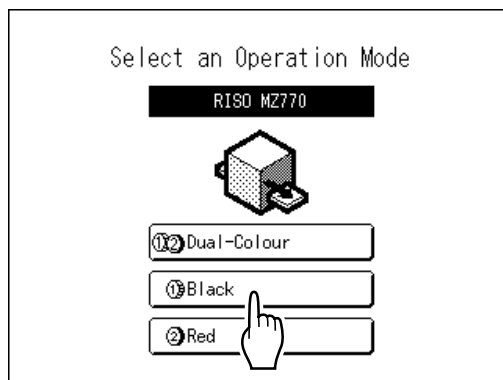
- The  button uses Drum 1 for 1-Colour printing, the  button uses Drum 2 for 1-Colour printing.
- Printing with Drum 1 is explained here. To use Drum 2, see "1-Colour Printing with Drum 2" (p.61).



 Note:

- If the 1-Colour printing basic screen is not showing, press the  key to display the Mode Screen.
- The colours currently set for Drum  and Drum  is displayed correctly on this screen.


- Touch **[MasterMake]** on the Operation Selection Screen.

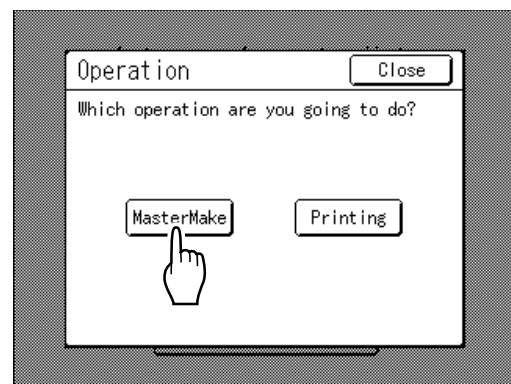

The Master Making Basic Screen appears.

3 Load paper.

See p.31 for details on how to load the paper.

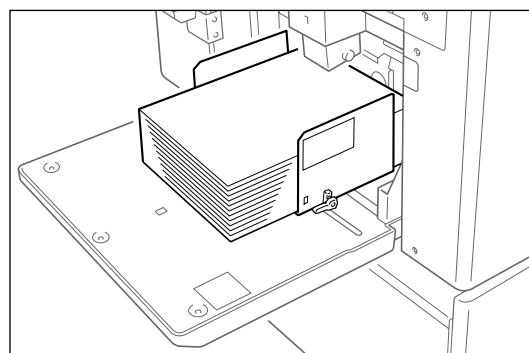


4 Set up the Paper Receiving Tray.

See p.33 for details on how to set up the Paper Receiving Tray.

5 Place the original.

◆ When placing on the Platen Glass

Place the original face down on Platen Glass. Align centre on the top edge, and close Platen Cover.

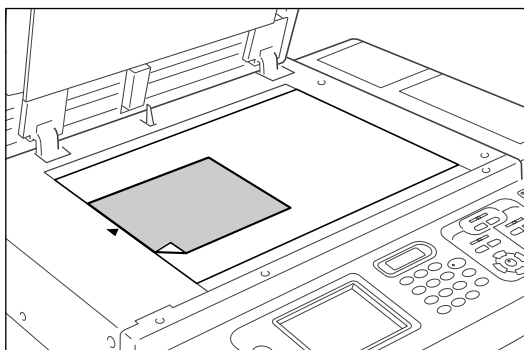


Note:

- Scrap books, etc. should be placed on Platen Glass.

Tip:


Using the Gauge Cover

The Gauge Cover allows you to align original images precisely on the Platen Glass even if they are not squared on the sheet. Shift the original sheet along the grid lines printed on the cover, touching it through the openings on the cover.

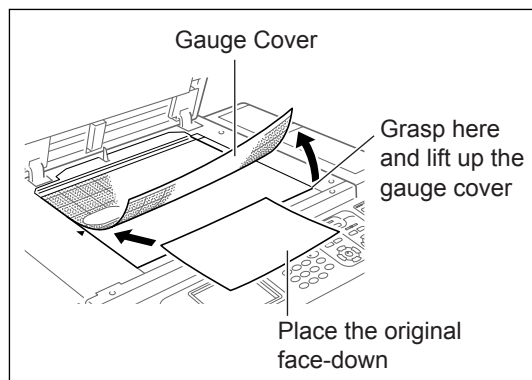

◆ When placing in the ADF unit (Option)

Place originals face-down and then adjust the ADF Original Guides to the width of the originals. Insert the originals as far into the ADF unit as possible.

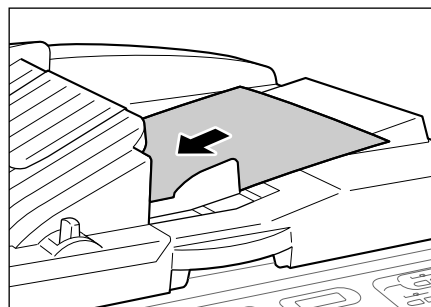

Important!:

- See "Originals" (p.16) for the types of paper that you can use with the ADF unit.

Note:


- Up to 50 sheets of 64g/m² paper can be placed in the ADF unit.

6 Configure print functions.


Make various settings as needed.

For further information, see the section for each print function.




If it is not displayed, press  to display the Master Making Basic Screen.

7 Press the key.

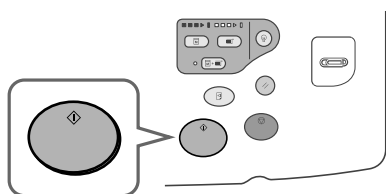

The original is scanned, separated, and a master made.

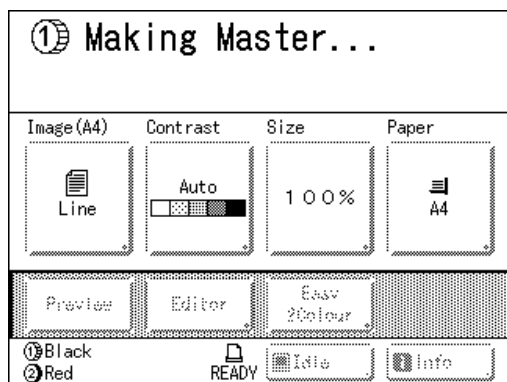

Tip:


Auto Idling

Wait for a moment if "Idling" is displayed. Once idling has stopped, making of the master begins. Factory default is set to idle automatically at the beginning of the master-making when the machine is inactive for over 12 hours.

☞ p.150

When a master is made, a proof copy will be printed.

When a proof copy is printed, the Print Basic Screen appears.

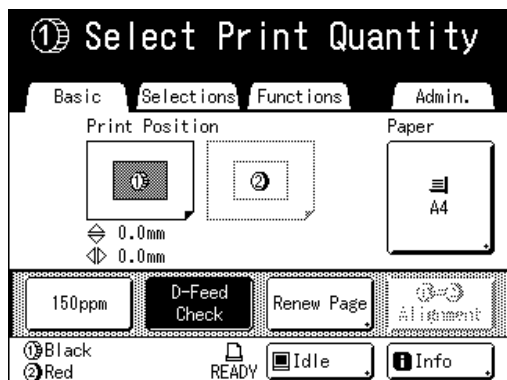


8 Check the proof copy result.


Check the proof copy; e.g., print position and density.

If necessary, change print position and density.

- Print Position (☞ p.113)
- Print Density (☞ p.112)

After adjustment, press the  key to print a proof copy.


Important!:

- When the machine has not been used for a long period of time, the print quality may suffer due to dry ink on the Print Drum. Press the  key to print proof copies several times.

Note:


- You can also adjust the print position, the density, and the speed while print process is in progress.

9 Enter the number of copies using the Print Quantity Keys.


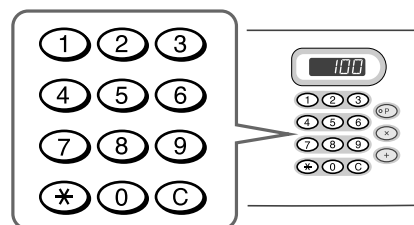


The specified number is displayed on the Print Quantity Display.

Note:


- To change the number, press the  key, then re-enter the correct number.

10 Press the key.

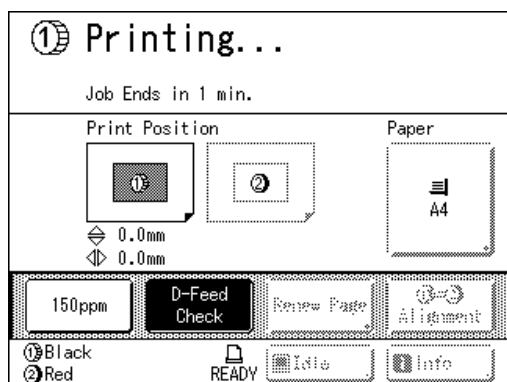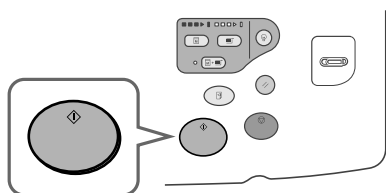


The specified number of copies will be printed.

Note:

- Press the  key to interrupt printing operation currently underway.
- If the machine is inactive for a certain period of time, it determines that the current job is completed, even if the actual printing is still in progress. When the machine is connected to a computer, and if another person accidentally sends a job from the computer, this causes a new master to be made, discarding the current one. To prevent this from occurring, you may set a "Reserve Period". We recommend that you activate the "Reservation" setting when printing leaflets etc. to prevent interruption.
p.149

11 Press the key when print job is complete.

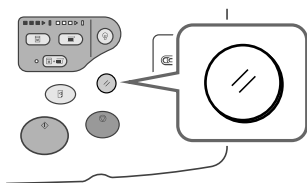


The setting returns to its default value.

Note:


- After printing is completed, the master remains on the Print Drum. To protect confidential documents from unauthorised duplication, use the Confidential feature to discard the master after printing.
p.152

12 Remove the printed paper.

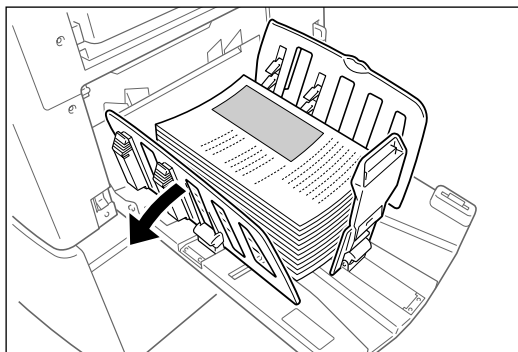

Open the Receiving Tray Paper Guides and remove the paper.

Note:

- Easily restore current settings by saving them into memory. Saved settings can be retrieved even when the  key is pressed, or after turning the power off.
p.140

Tip:**1-Colour Printing with Drum 2**

We generally recommend that Drum 1 be used for 1-Colour printing, but you can also use only Drum 2. However the procedure differs slightly from Drum 1. The following restrictions apply:

When removing Drum 1 and using only Drum 2:

The following paper sizes cannot be used.

- Standard sizes: A4 landscape, card
- Custom sizes: Paper smaller than 182 mm × 257 mm (B5)
- Do not use paper smaller than 257 mm × 364 mm (B4) when using the high-speed function (150ppm).


When leaving in Drum 1 and only using Drum 2:

- Drum 1 is automatically set to “Confidential” when a master is made (the master wrapped around the current drum is discarded and replaced by a dummy master).
- If a non-confidential master is placed on Drum 1 for printing, a warning message is displayed. Follow the instructions on the screen.

Printing from a Computer Data

[Direct Print]

The machine can receive and print the original data created on a computer.
The data will be digitally processed, thus achieving high quality prints.

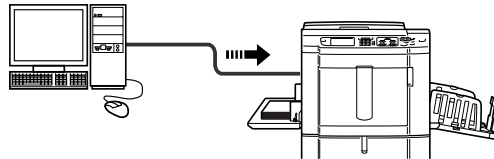

Important!:

- First, install a proper printer driver on your computer. See the RISO Printer Driver User's Guide for installation details.

Note:

- You can save original data created on a computer in the storage memory of the machine.
☞ p.176

Auto Process and Stop Timing


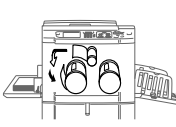
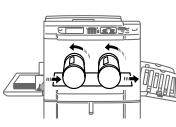
Auto Process: Auto Process is a combined automated steps of receiving data from the computer, making a master, and printing.

Stop Timing: During each process, in order to adjust settings or to change paper, you can stop the operation.

To activate "Auto Process", open the printer properties dialog box on the computer and select "Full Auto". (When "Full Auto" is activated, however, proof copy printing and subsequent adjustment steps will be disabled.)

To temporarily halt an operation during the creation of a master or during print process, select one of the following three options for "Process" in the printer properties dialog box.

- Semi-Auto(Print)
Halts the operation before master-making:
To change settings, to change paper and to change Print Drum
- Semi-Auto(Master)
Halts the operation before printing:
To print proof copy, to adjust ink density, to adjust positioning and to change printing speed
- Manual
Stops twice; before making a master, and again before printing.

	Receive data from computer	Stop before making a master	Master Making	Stop before printing	Printing
Full Auto		---		---	
Semi-Auto(Print)		Yes		---	
Semi-Auto(Master)		---		Yes	
Manual		Yes		Yes	

Note:



- The stop timing can also be specified from the machine.
☞ p.67
- This manual provides only a summary of functions available when printing from a computer.
See Riso Printer Driver User's Guide for further details on sending data and other settings.


Printing Computer Data

1 Make sure the machine is ON.

Check the Control Panel.


Note:

- When the power is OFF, both the Display and the  key are off. Turn the power ON.
p.31
- If the  key is lit, the machine is in Energy Saving mode. The machine automatically wakes up from Energy Saving mode when data is sent from a computer, and it starts processing the data.

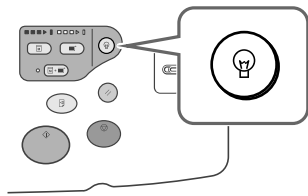

- If you are using RISORINC-NET (Option), you can check the machine status (power ON/OFF, paper settings, etc.) remotely from your computer monitor.

2 Check for printing paper.

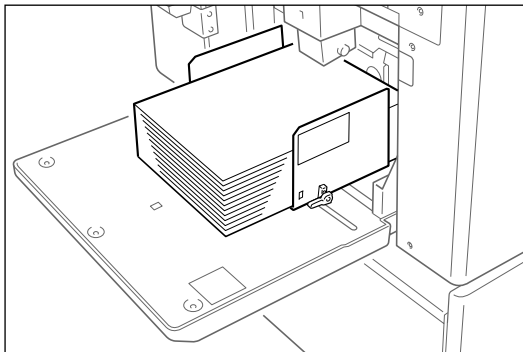

Make sure paper is loaded.


To load or to change the paper, see the following page:

p.31


After replacing with paper of a different size, adjust the position of the Receiving Tray Paper Guides and Paper Stopper.

p.33

3 Set printing options from your computer screen.

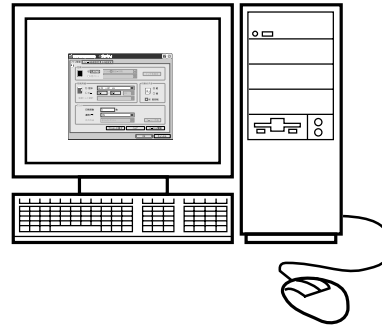

Important!:

- Make sure to uncheck the "Collate" option in the Print dialog box.
- When the machine has not been used for a long period of time, the print quality may suffer due to dry ink. Before printing, either perform an Idling Action (p.150) (especially when using Full Auto mode) or press the  key to print proof copies several times.

4 Click [OK] on the print dialog box.

Data is sent from the computer.



When the machine receives data, a print job automatically starts in accordance with the printer driver settings.

Continue to step 5 if you are printing in the Semi-Auto (Print) mode or in the Manual mode.

Skip to step 7 if you are printing in the Semi-Auto (Master) mode.


Skip to step 10 if you are printing in Full Auto.

Note:



- If the data contains multiple pages, all pages are printed at once.
- To manually stop a job during master-making or printing operation, press the  key. In master-making process, the machine will stop after the master is made. In the printing process, the machine will stop printing. Press the  key to resume the job.
- You can also adjust Print Position, the density, and the speed while Print process is in progress.
- Entering the number of copies from the Print Quantity Keys will override the number specified in the printer driver dialog.

5 Check the Display.

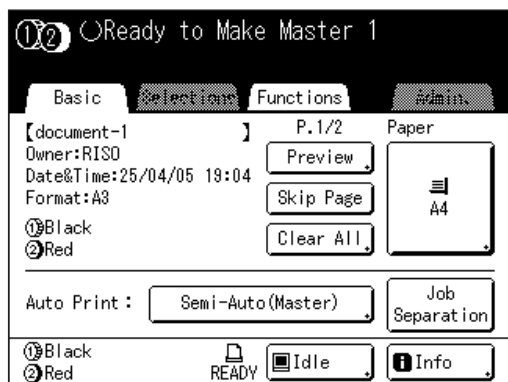
Check the owner name and preview to make sure that the received data is the data to be printed. Set other functions as needed.




Note:


- The following functions can be used here:
 - Preview
 - Skip Page
 - Clear All
 - Paper Size
 - Auto Print
 - Sorter
 - Job Separation
 - 150ppm
 - Renew Page
 - Rotate
 - Programme (1-Colour original only. “Combination” can be used when 2-Colour printing)
 - Job Memory
 - Max. Scan
 - ① = ② Alignment (only for 2-Colour printing)
 - D-Feed Check
 - Idling Action
 - Confidential
 - Interval
 - Auto Page Renewal
- After developing a job, press the  key or the  key to display the screen for deleting the developed job.

Tip: Job List Screen

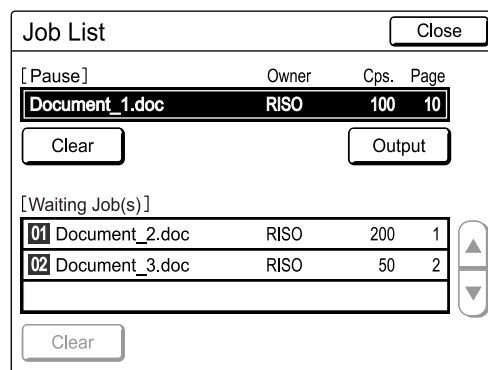

Once the data is received, touch  on the Basic Screen to review current Job List. From the Job List screen, you can initiate output for jobs pausing for output, or cancel jobs that are “Paused/Data-Mapping/Waiting”.

6 Press the key.


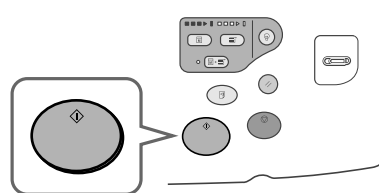



A master is made, and a proof copy will be printed.

7 Check the proof copy result.


When a proof copy is printed, the Print Basic Screen will be displayed automatically. Check the proof copy; e.g., print position and density.

  If necessary, change print position and density.

- Print Position (, p.113)
- Print Density (, p.112)

After adjustment, press the  key to print a proof copy.

Important!:

- When the machine has not been used for a long period of time, the print quality may suffer due to dry ink on the Print Drum. Press the  key to print proof copies several times.

Note:

- You can also adjust the print position, the density, and the speed while print process is in progress.
- Entering the number of copies using the Print Quantity Keys will override the number supported by the print driver.

8 Press the key.

The job prints using the specified printer driver settings.

When “Destination” is set to “Print Only”, original data is automatically deleted after printing.


9 For jobs with multiple pages, data from the 2nd page prints.

Data from the 2nd page on prints in accordance with “Auto Print” settings.

Subsequent steps are the same as printing from the 1st page.

Use the Received Data screen to change settings from the 2nd page on.

10 Remove the printed paper.

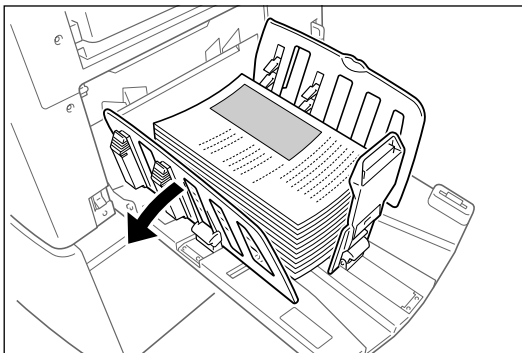

Open the Receiving Tray Paper Guides and remove the paper.

Note:

- After printing is completed, the master remains on the Print Drum. To protect confidential documents from unauthorised duplication, use the Confidential feature to discard the master after printing.


☞ p.152

Tip:**When using a Linked Printer (sold separately)**

When “Auto Process” is activated, “Online Auto-Link” can be selected to specify output device in accordance with the print quantity.

☞ p.163

☞ p.196

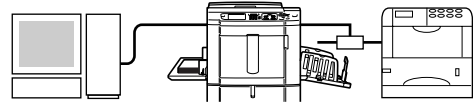

Changing Output Directions

Output can be controlled from the Master Making/Print Basic Screens.


◆ Master Making Basic Screen

- **[Preview]**

You can check the master making image of the page currently awaiting creation.

Note:

- In “Preview”, all received original data is displayed as a master making image. Portions outside the print area do not actually print.
- **[Skip Page]**
Cancels a pending page, and start processing the next page. Use this button when current file has extra, unwanted pages.
- **[Clear All]**
Deletes all currently queued jobs. Use this button to delete a job sent by a mistake, or pending jobs no longer needed.

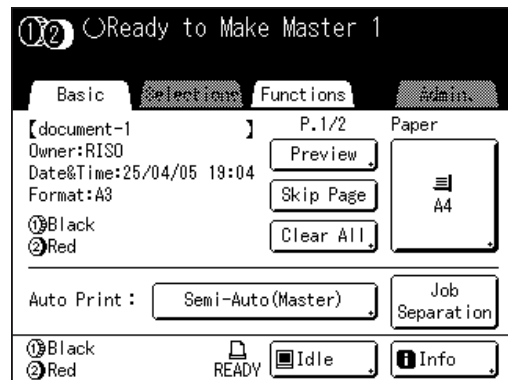

◆ Print Basic Screen

- **[Renew Page]:**


You can recreate another master when the current one is damaged without having to receive original data from the computer.

Note:



- When 2-Colour printing, you can select the drum on which to recreate the master. When 1-Colour printing, the current drum is used to recreate the master.
- When recreating masters for 2-Colour printing, Drum1 and Drum 2 can be switched by selecting “Sw.Colour”.
- If multiple pages exist, only the last page will be processed.
- “Rotate” can also be specified.

The confirmation screen for each respective button appears when touched. Touch **[OK]** to implement the instructions.

Important!:

- **[Skip Page]** and **[Clear All]** are disabled during master-making or printing processes.
Press the  key to modify directions while master-making or printing is in progress.
(In master-making process, the operation will stop after the master is made. In print process, the print job is halted.)


Note:

- Pressing either the  key or the  key while waiting for a command (under Ready to Make Master/Ready to Print screens) will delete the pending job.


Changing Stop Timing

Stop timing as set on the printer driver takes priority by default.
However, the settings can be changed on the machine while the machine is halted.

Note:


- If “Auto Print” is set to ON on the machine driver, press the  key to stop the operation and to make changes.

1 Touch the “Auto Print” function button.

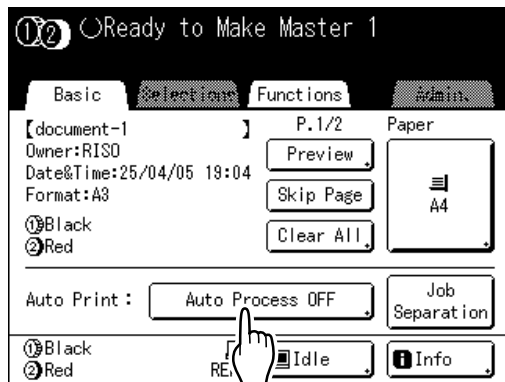

The Auto Print screen appears.

2 Select the desired function.

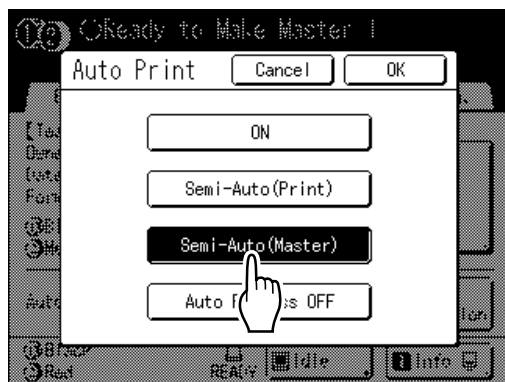


- **[ON]**: Makes a master then automatically prints.
- **[Semi-Auto(Print)]**: After the data is received, the operation stops before making a master.
- **[Semi-Auto(Master)]**: After a master is made and a proof copy is printed, the operation stops.
- **[Auto Process OFF]**: Stops before making a master, and then again before printing.


Note:

- See p.62 for details regarding operations after each stop.

3 Touch [OK].

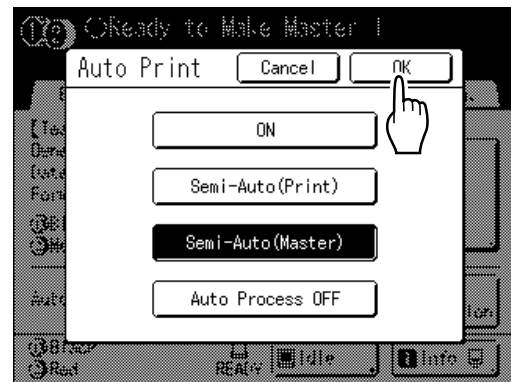

The following screen appears.

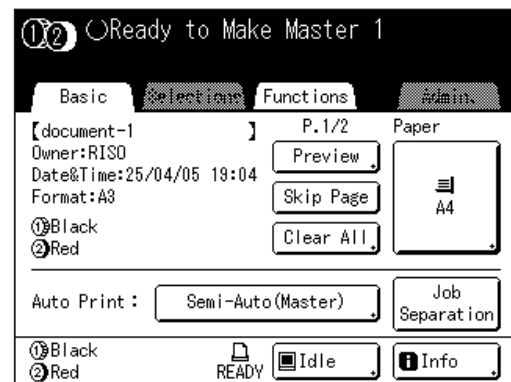

Returns to Basic Screen. Auto Print setting is updated.

Functions for Master-Making


Selecting Image Processing Mode [Image]

In order to make a master best suited for the original document, select an appropriate mode depending on whether original contain only text (Line), photo, or both of them.


Note:

- Default Image Processing mode can be set on the Admin. screen.
p.159

1 Touch [Image] on the Master Making Basic Screen.

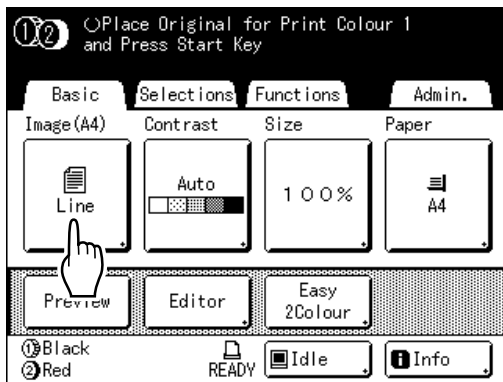


2 Select the appropriate Image Processing mode for the original.

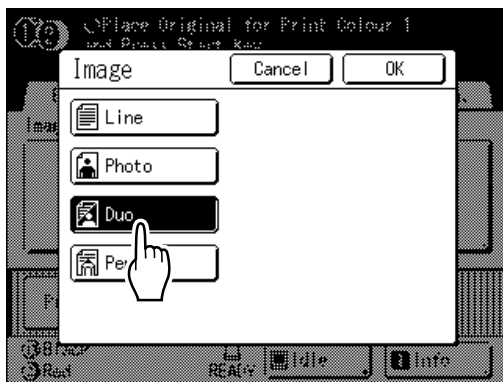


- **[Line]:** Only text contained; e.g., text document, newspaper
- **[Photo]:** Only photos contained
- **[Duo]:** Both text and photos contained
- **[Pencil]:** pencil drawings or lightly printed documents

Touch **[Photo]** to select the type of photo.

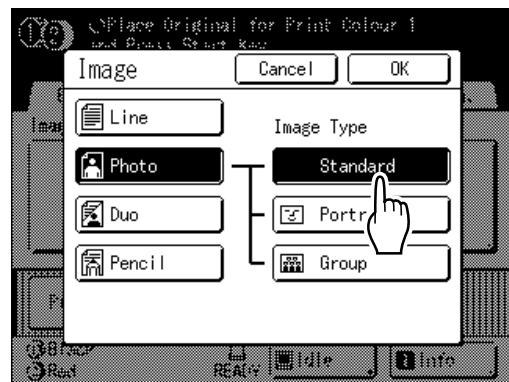

- **[Standard]:** Select for photos other than **[Portrait]** or **[Group]**.
- **[Portrait]:** Use this setting for pictures of one or two individuals from the bust up. This type of image processing is particularly good for printing photos of faces.
- **[Group]:** This setting is for group photos that are over-exposed. This process is effective for restoring facial features that have become washed out by a flash.
The Group setting is not for photos with faces that are overly dark. It may be more effective to select **[Standard]** for such photos.

3 Touch [OK].

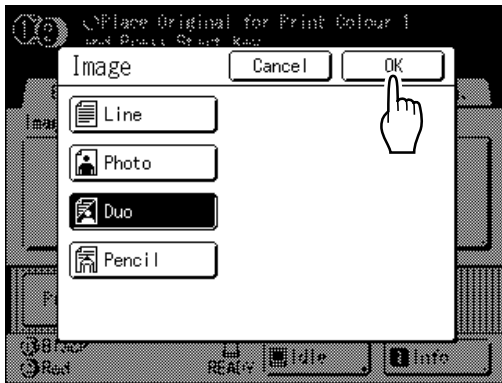

The following screen appears.



Returns to the Master Making Basic Screen.
Image Processing mode is updated.

Note:

- Some functions are not available in certain Image Processing mode settings.

	Line	Photo	Duo	Pencil
Dot Process	—	✓	✓	—
Contrast (Auto)	✓	—	—	—
Contrast (1-5)	✓	✓	✓	✓
Contrast Adj	—	✓	—	—
Tone Curve	—	✓	✓	✓

✓ : available — : not available

Processing Photos with Dot Screen


[Dot Process]

“Dot Process” function processes photo originals with dot screening in order to print more clearly. Select from four types of dot patterns.

Note:

- “Dot Process” is not available when Image Processing mode has been set to “Line” or “Pencil”.


1 Touch [Functions] on the Master Making Basic Screen.

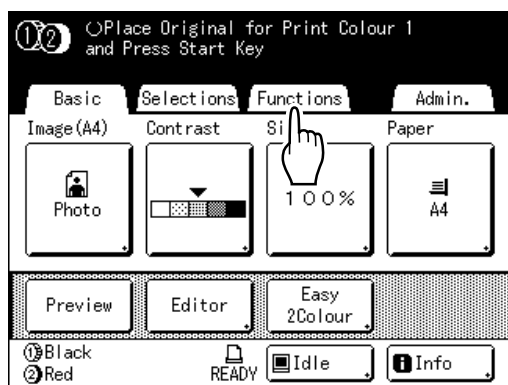

2 Touch [Dot Process].



3 Select a dot pattern.

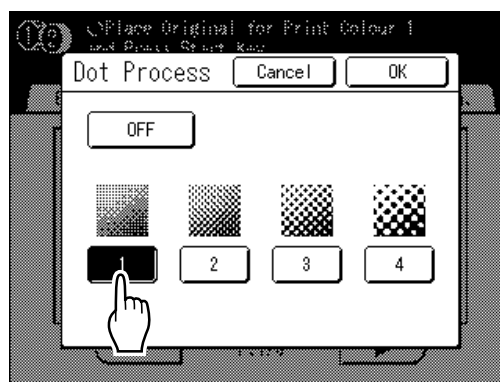


Message				
Number	1	2	3	4
Equivalent Lpi	106	71	53	34


Note:

- Touch [OFF] to cancel the “Dot Process”.

4 Touch [OK].

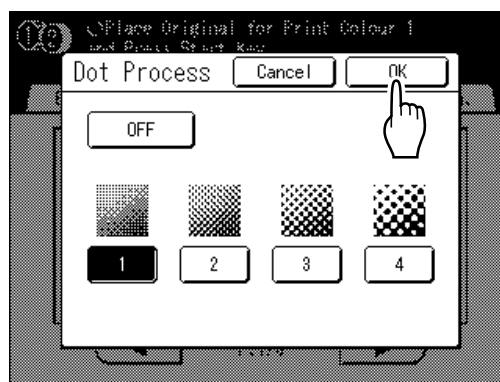

The following screen appears.

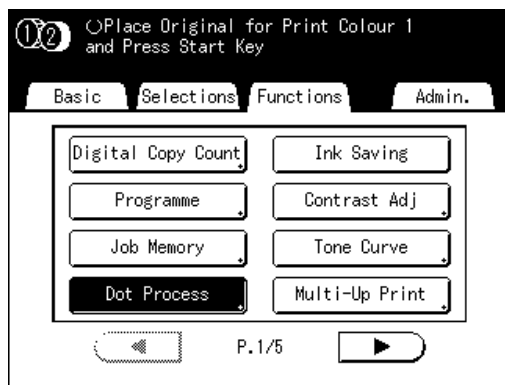

Returns to the Functions screen. Dot Process setting is updated.

Adjusting Photo Contrast [Contrast Adj]

For originals that have ill-defined photos, adjust the contrast to print more clearly. There are two ways to adjust contrast.

Important!:

- If the "Image" is set to "Line", "Duo" or "Pencil", "Contrast Adj" cannot be used.


1 Touch [Functions] on the Master Making Basic Screen.



2 Touch [Contrast Adj].




3 Touch the button of the contrast to use.

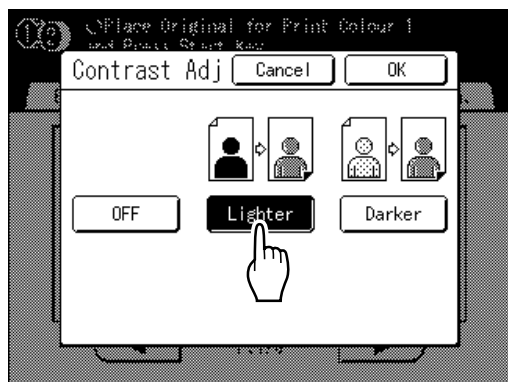

- **[Lighter]**: Lightens dark sections. Use this setting if the entire photo is underexposed and the target subject of the photo is ill-defined.
- **[Darker]**: Clarifies lighter portions. Use this setting if the entire photo is overexposed and the target subject of the photo is ill-defined.

4 Touch [OK].

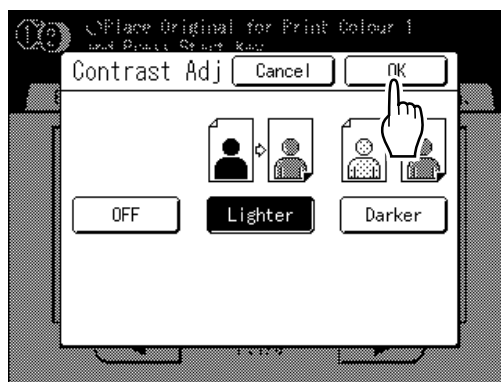

Returns to the Functions screen. Contrast Adj setting is updated.




Adjusting Photo Gradation [Tone Curve]

You can adjust the light and shadow portions of a photo by 3 tones respectively.


Important!:

- If the "Image" is set to "Line", "Tone Curve" cannot be used.

1 Touch [Functions] on the Master Making Basic Screen.

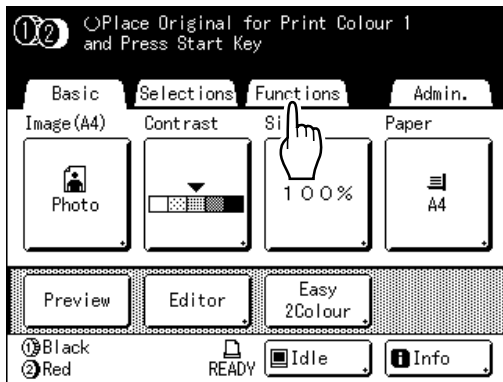


2 Touch [Tone Curve].

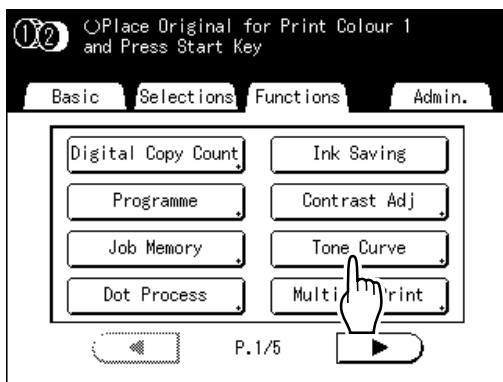


3 Touch the "Lights" and "Shadows" adjustment buttons.

Use [+1] or [-1] to strengthen or weaken each respectively.

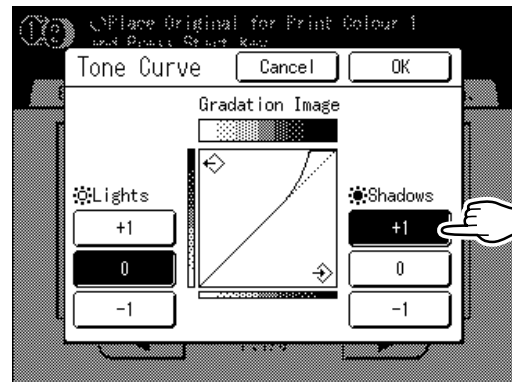


- **Lights:** Adjusts the portion of the picture most exposed to light.
- **Shadows:** Adjusts the portion of the picture least exposed to light.

4 Touch [OK].

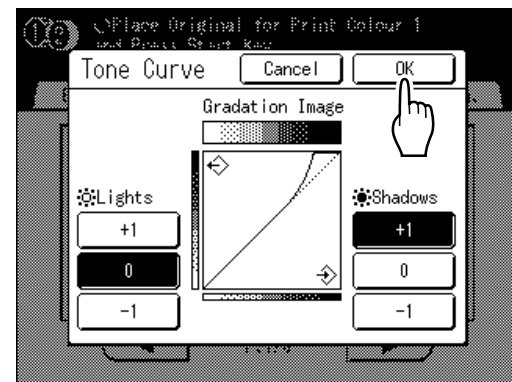

Returns to the Functions screen. Tone Curve setting is updated.

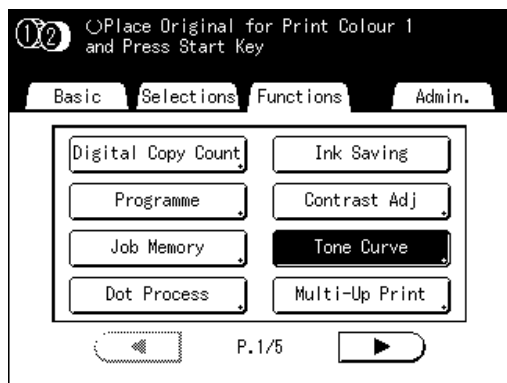

Selecting Scanning Contrast for the Original [Contrast]

Scanning contrast can be adjusted to accommodate background colour or ink density of the original.

Specify by selecting Auto or numeric levels (1-5).

In the Auto mode, "Contrast" is automatically adjusted to the background colour of the original for printing.

Important!:

- "Auto" is available only when Image Processing mode has been set to "Line".


☞ p.68

Note:


- Default Scanning Contrast can be set on the Admin. screen.

☞ p.159

1 Touch [Contrast] on the Master Making Basic Screen.

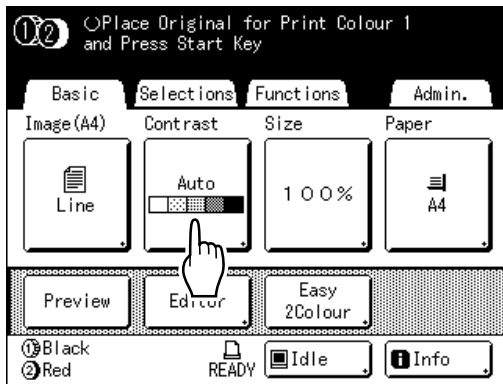


2 Touch the desired contrast or [Auto].

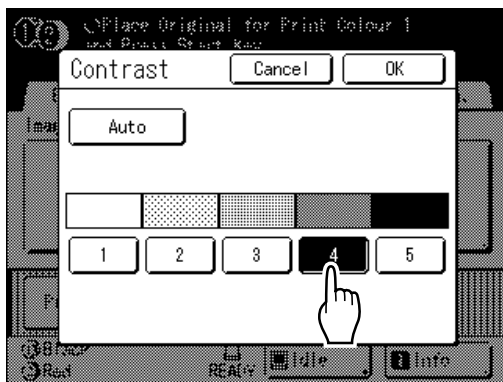


Levels of scanning contrast

- 1) : Very Light
- 2) : Light
- 3) : Standard
- 4) : Dark
- 5) : Very Dark

3 Touch [OK].

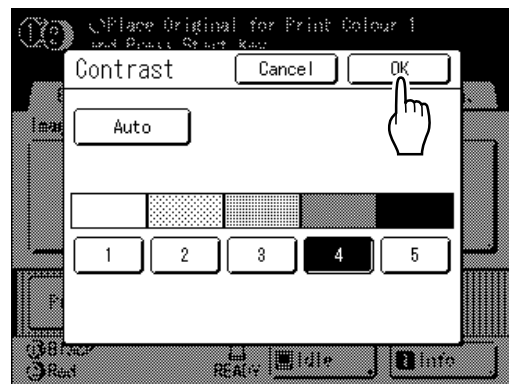

The following screen appears.

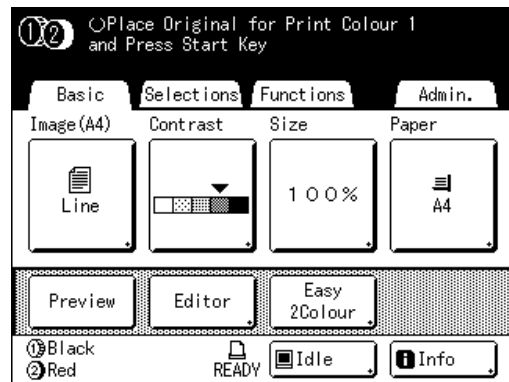

Returns to the Master Making Basic Screen. Contrast is updated.

Enlarging/Reducing Originals

[Standard Ratio] [Free] [Margin+] [Zoom]

The document can be printed enlarged or reduced. The following methods can be used to enlarge/reduce the original.

◆ Auto

Automatically adjusts zoom ratio to accommodate the paper size in the Paper Feed Tray.

◆ Standard Ratio

Enlarging or reducing a standard-sized original (A4, B5 etc.) to print in another standard size.

◆ Margin+

Reducing the original slightly. This feature is useful when allowing binding margins, or when text or diagram extends beyond the printing area.

☞ p.17

Specify reduction rate of 90%-99% on the Admin. screen.

☞ p.160

◆ Free

The top/bottom and left/right of the original can be magnified or reduced and printed as desired.

Specify the zoom ratio between 50% and 200% in increments of 1%.

◆ Zoom

Allows you to specify numerical resize ratio.


Specify the zoom ratio between 50% and 200% in increments of 1%.

Note:

- Blank margins on edges are necessary in order to avoid paper jam and ink smudges on the back side. The machine will not print without margins. The top edge in particular needs 5 mm of margin space.

☞ p.17

5 mm wide area on the top edge (marked ▲) of the Platen Glass (or the ADF unit) cannot be scanned, regardless of enlargement or reduction settings.

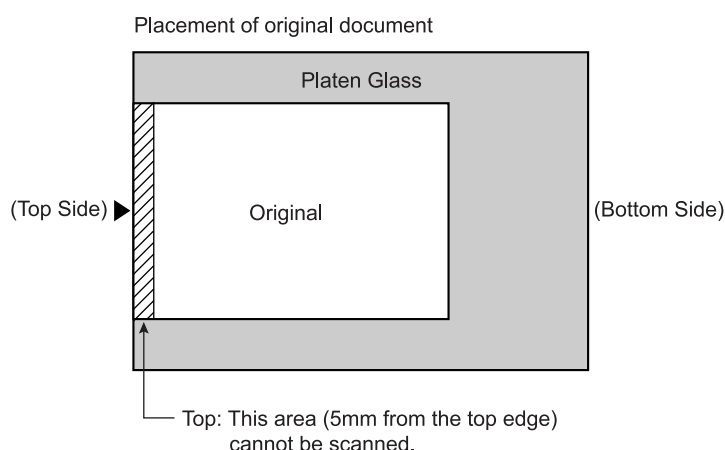


- Do not position the original within 5 mm of the top edge, or the top edge of its printed image will be cut off. This 5mm margin will remain even in the "Max. Scan" setting.
☞ p.99
- If the original document has no margin on its top edge, the top 5mm of its print will be cut off even when **[Margin+]** is selected. Move the original about 5 mm inwards from the top edge of the platen glass and reduce the size.


Enlargement and Reduction by Standard Ratio

[Standard Ratio] [Margin+]

1 Touch [Size] on the Master Making Basic Screen.

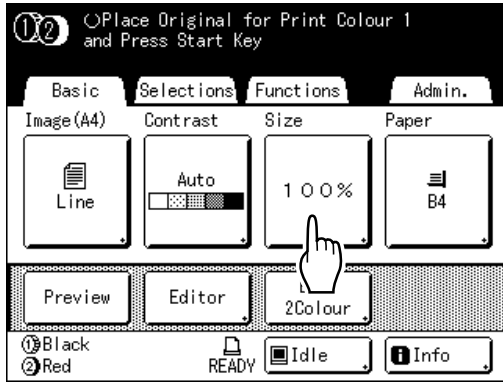

2 Touch the button corresponding to the desired size.

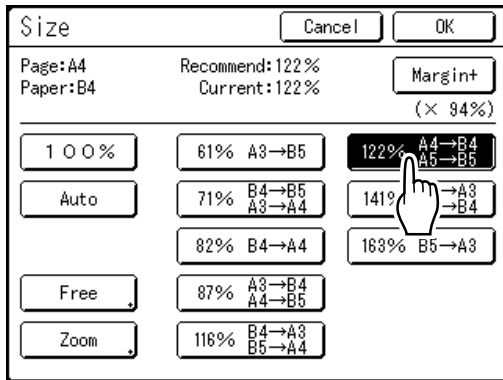


Touch [100%] to restore the original size.

Important!:


- The "Margin+" setting is not available when "Auto", "Zoom" or "Free" is selected.

Note:

- "Standard Ratio" and "Margin+" can be selected at the same time. The "Current" field will indicate the combined result of "Standard Ratio" × "Margin-Plus Rate" when both are selected.

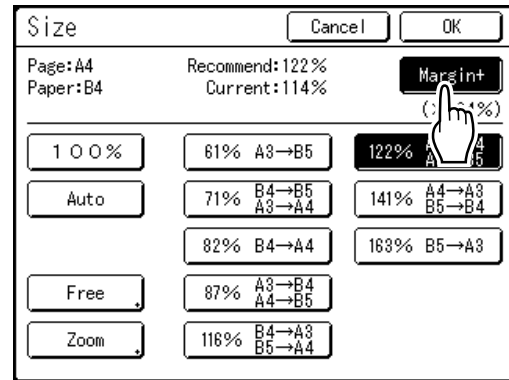

3 Touch [OK].

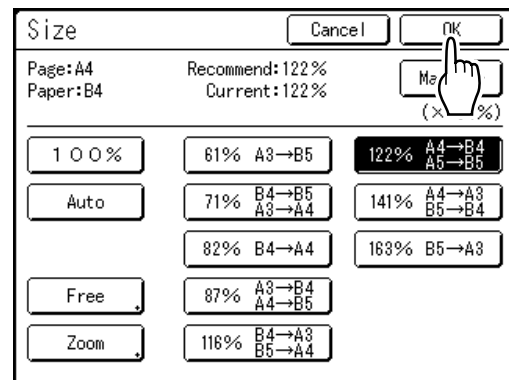


The following screen appears.




Returns to the Master Making Basic Screen. Size is updated.

Magnification/Reduction of a Changed Aspect Ratio [Free]


1 Touch [Size] on the Master Making Basic Screen.

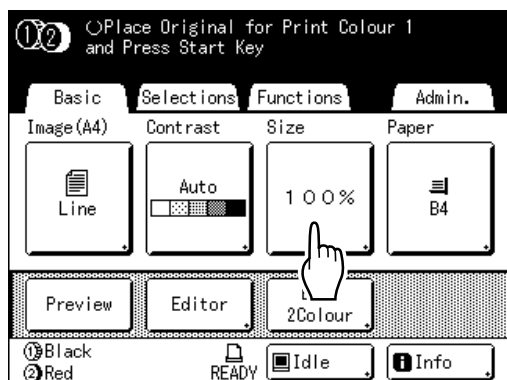

2 Touch [Free].

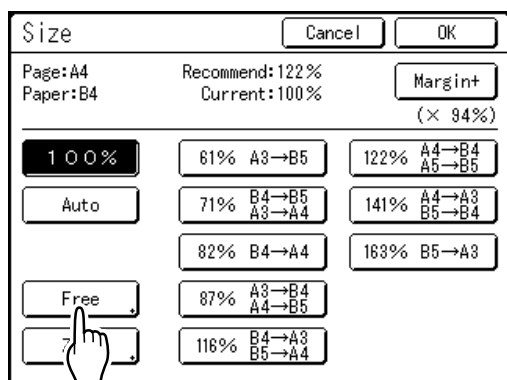

3 Touch ▲ or ▼ to adjust zoom ratio in horizontal or vertical directions.

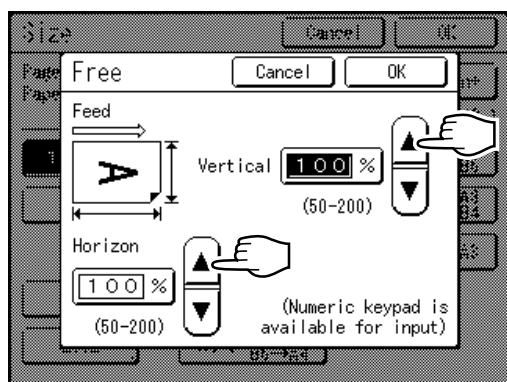


The reproduction size can be increased/decreased in increments of 1%.

Note:

- Print Quantity Keys can also be used to enter numbers.
- Press the **C** key to restore the original size (100%).

4 Touch [OK].

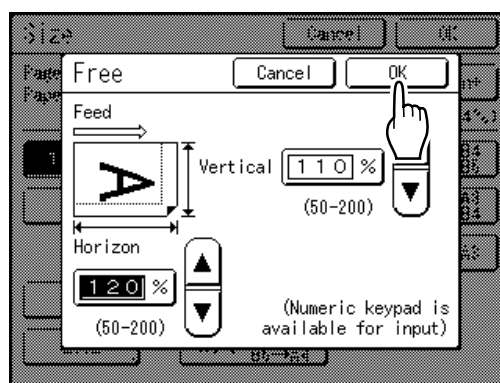


Returns to the Master Making Basic Screen. Size is updated.




Enlarging and Reducing with the Zoom Function [Zoom]


1 Touch [Size] on the Master Making Basic Screen.

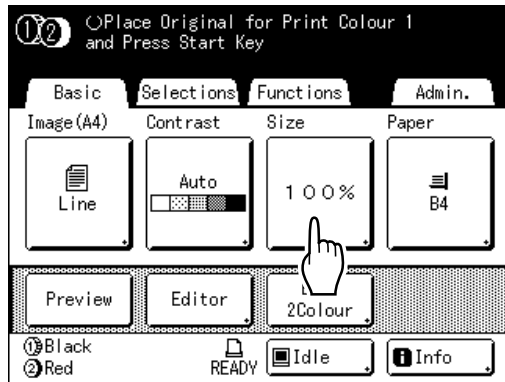

2 Touch [Zoom].

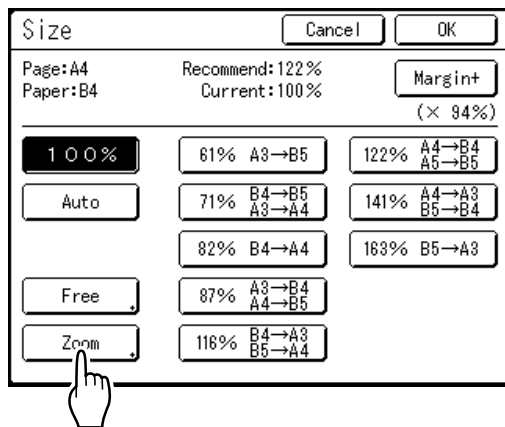

3 Touch ▲ or ▼ to change ratio.

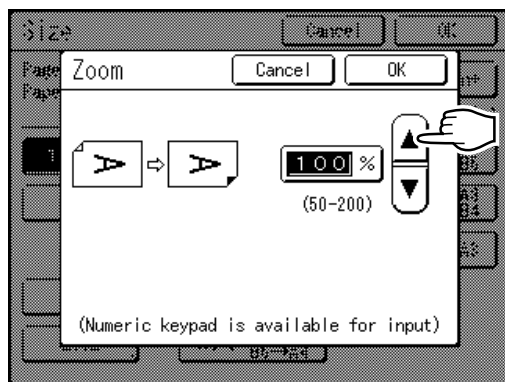


The reproduction size can be increased/decreased in increments of 1%.


Note:

- Print Quantity Keys can also be used to enter numbers.
- Press the **C** key to restore the original size (100%).

4 Touch [OK].

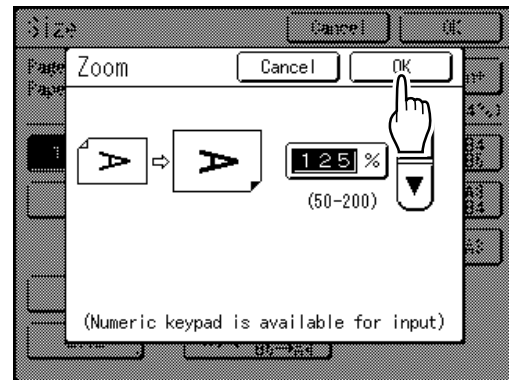

The following screen appears.

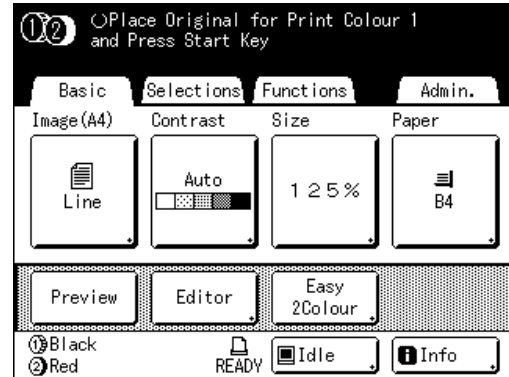

Returns to the Master Making Basic Screen. Size is updated.

Using Custom-Sized Paper [Paper]

The machine automatically detects standard-sized paper in the Paper Feed Tray to create a correct size master for printing. However, because non-standard paper sizes cannot be detected, they must be manually specified before a master can be made.


Important!:

- Custom paper size must be registered on the Admin. screen. Failure to do so may make an incomplete master.
p.171

1 Touch [Paper] on the Master Making Basic Screen.



2 Touch the desired paper size.

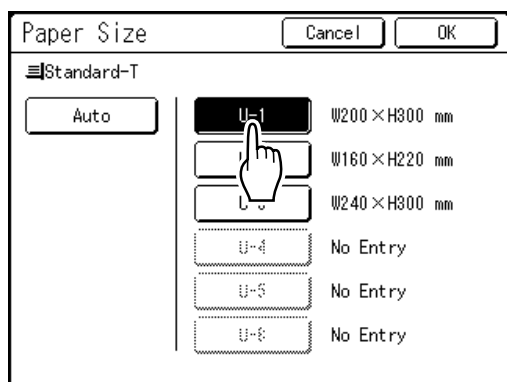


Note:

- Touch [Auto] to use standard-size paper.

Important!:

- Previously recorded custom paper sizes is displayed on this screen. Make sure to register any custom sizes not displayed here prior to use.
p.171

3 Touch [OK].

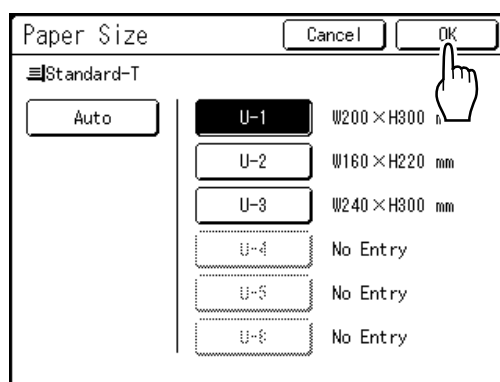


The following screen appears.



Returns to the Master Making Basic Screen.
Paper size is updated.

Automatic Printing [Auto-Process]

Master-making and printing can be performed automatically in sequence.

When "Auto-Process" is selected, simply enter number of copies to print, then press the  key.


Important!:

- If you are using the ADF unit (option) for 2-Colour printing, pay close attention to the order in which you place the original.
p.40


Note:

- On the Admin. screen, you can make such a setting that "Auto-Process" is always set to ON when you reset or start the machine.
p.159
- "ADF Semi-Auto" is another handy function when using the ADF unit (option).

1 Press the key.

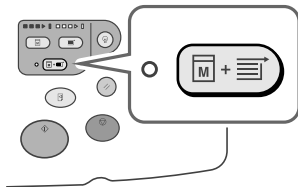


The Auto-Process Indicator turns on, and "Select Print Quantity" is displayed on the Master Making Basic Screen.

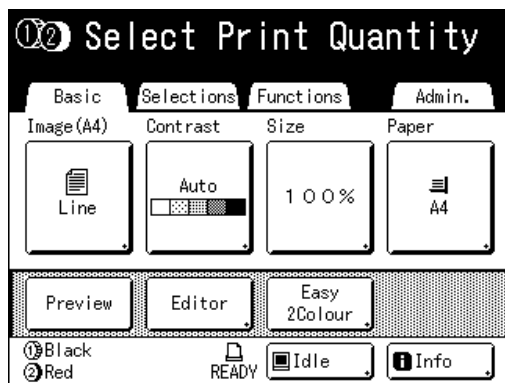


Input the number of copies prior to creating the master, because when "Auto-Process" is set, the job will be printed as soon as the master is created on Drum 1 or Drum 2.


2 Enter the number of copies using the Print Quantity Keys.

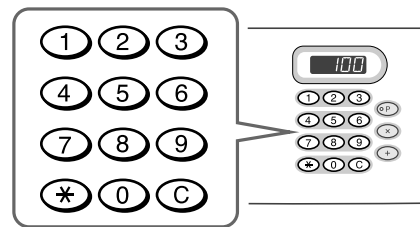

Note:

- To change the number, press the  key, then re-enter the correct number.


3 Press the key.

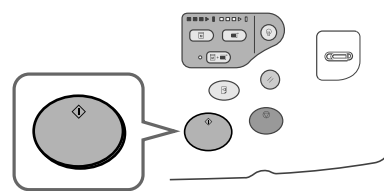

Creation of the master starts.

Once the masters are made on Drum 1 and Drum 2, printing automatically starts, and the number of copies indicated prints.

Note:

- To cancel "Auto-Process", press the  key again. The indicator turns off.
- When printing is completed, Print Quantity will restore the number originally entered.
- If multiple originals are placed on the ADF unit (option), "Auto-Process" is automatically set to "ON" by default, and all the originals are printed using "Auto-Process". This setting can be changed in "Admin."
p.159

Printing from Bound Documents


[Book Shadow]

This function erases the shadows appearing in the binding “spine” in the centre as well as in the peripheral area when printing from magazines and books.


The printer automatically determines the area to delete.

Important!:


- If “Book Shadow” is selected during colour printing, the settings are applied to both Drum 1 and Drum 2 (the setting cannot be applied to just Drum 1 or just Drum 2).
- The original must be placed as shown below. Align centre on the top edge. The shadows will be erased.

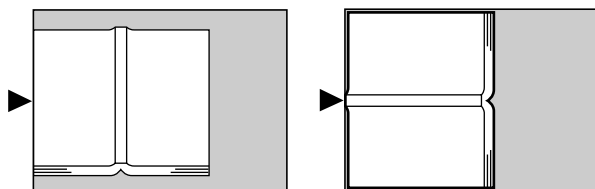

- “Book Shadow” is not available for bound books or magazines with images placed on the edge of the page or on the binding as shown below.
 - A continuous black image area (non-white) from the edge of the original

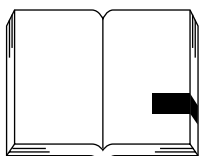


- A continuous black image area from the centre of the original

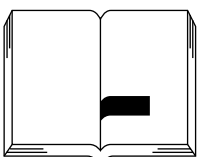


- “Ink Saving”, “Contrast” and “Easy 2Colour” functions are not available when “Book Shadow” is selected.


1 Touch [Functions] on the Master Making Basic Screen.

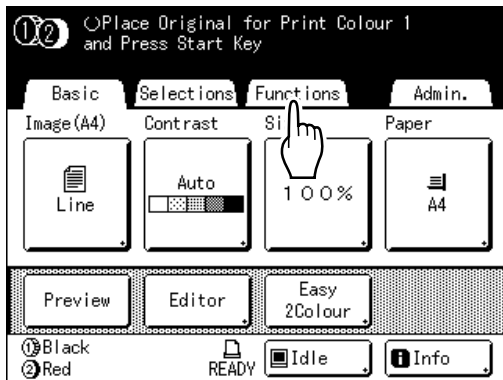

2 Touch [Book Shadow].

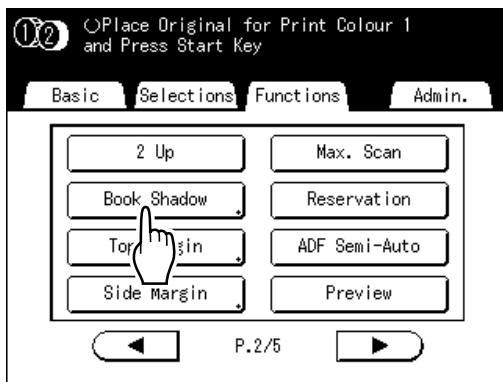


3 Touch the shadow processing method.

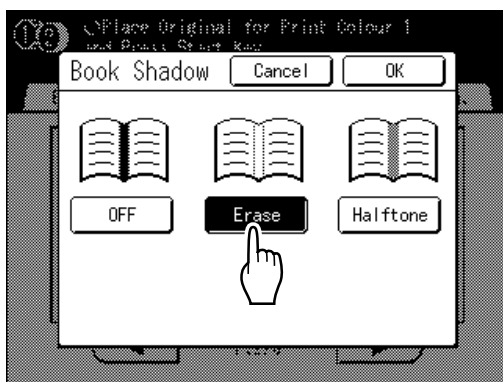


- **[Erase]:** Erases shadows near the centre and around the original.
- **[Halftone]:** Photo processes the centre shadow for a natural feel and deletes shadows that it can around the original.

4 Touch [OK].

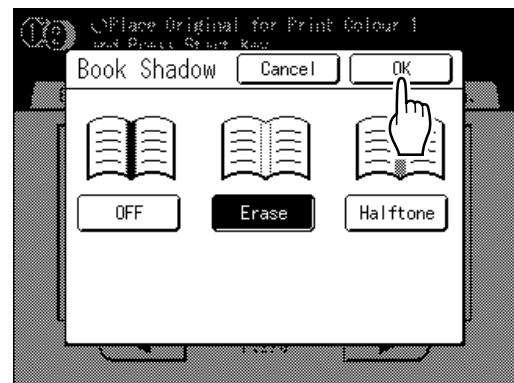


The following screen appears.

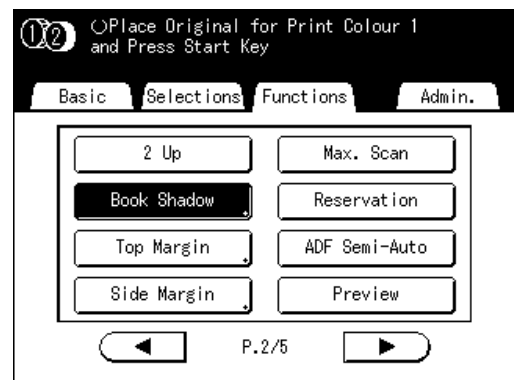

Returns to the Functions screen. Book Shadow setting is updated.

Note:

- If you are scanning a thick book such as an encyclopedia, raise the hinge of the platen glass cover and press down for best results.

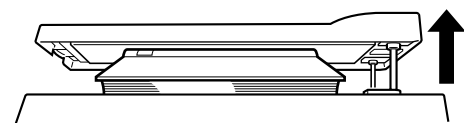


Saving Ink [Ink Saving]

Selecting “Ink Saving” makes a master that requires less ink when printing.


Important!:

- The ink conservation process may result in lighter prints than usual.
- “Contrast” and “Print Density Adjustment” functions are not available when **[Ink Saving]** is selected.
- This function is not available when printing the data from a computer.

1 Touch [Functions] on the Master Making Basic Screen.

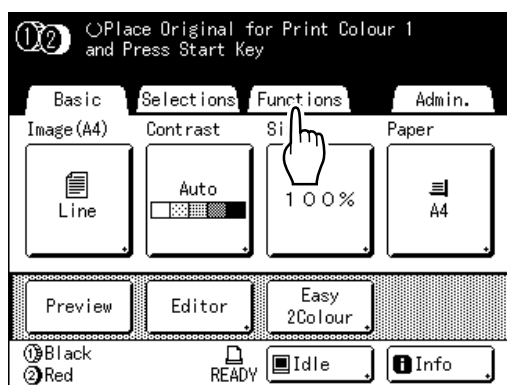

2 Touch [Ink Saving].

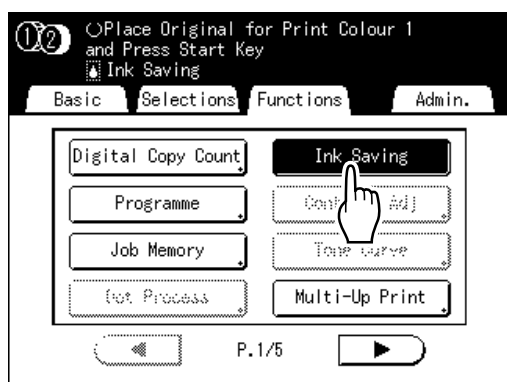

“Ink Saving” is set.

“ Ink Saving” will appear in the message area.

Printing Side-by-Side on One Sheet

[2 Up] [Multi-Up Print]

“Multi-Up” function prints multiple originals on one sheet.

◆ 2 Up

Prints two copies of the same original side-by-side on one sheet of paper.

◆ Multi-Up Print

One or multiple originals (up to 4) can be printed on a single sheet of paper.

“Multi-Up Print” has the following three types:

- Single-Original: A single original is printed multiple times.
- Multiple-Original: Multiple originals are printed multiple times.
- Multi-Up Tickets: You can print multiple long, thin custom originals such as tickets.

Single-Original and Multiple-Original can print in quantities of 2, 4, 8 and 16 respectively.

Important!:

- Use standard-sized paper when using the “Multi-Up” function. With custom size paper placed, you cannot perform “Multi-Up” printing even when the size is stored on the Admin. screen.
- If you change “Image” between originals in Multiple-Original, you cannot use “Ink Saving”.

Note:

- These functions cannot be used with the following functions.
 - Link-Free Volume
 - Top Margin
 - Book Shadow
 - Side Margin
 - Size (Auto)
 - Format (Auto) (in Scan Mode)


Original Orientation and Print Results

The orientation of the original differs depending upon the number of images.
The orientation and print results for each possibility is shown below.

Important!:

- Leave a margin of at least 5mm on the top edge of the Platen Glass. Allowing a proper margin is critical in well-balanced Multi-Up positioning.
👉 p.14

2 Up

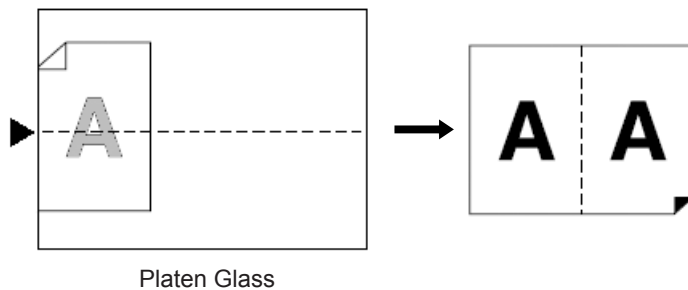


Prints two copies of the same original side-by-side on one sheet of paper.

Multi-Up Print

For Single-Original and Multiple-Original:


◆ 2 Up (2 on 1)

Prints two images of the original on one sheet of paper.

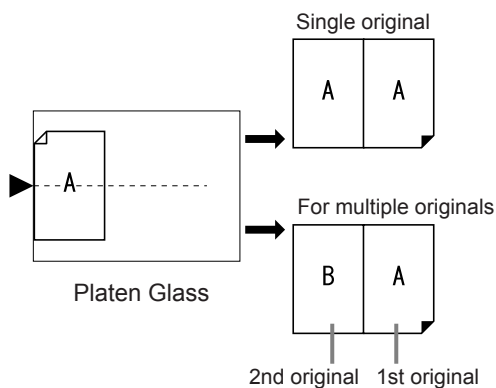


◆ 4 Up (4 on 1)

Prints four images of the original on one sheet of paper.

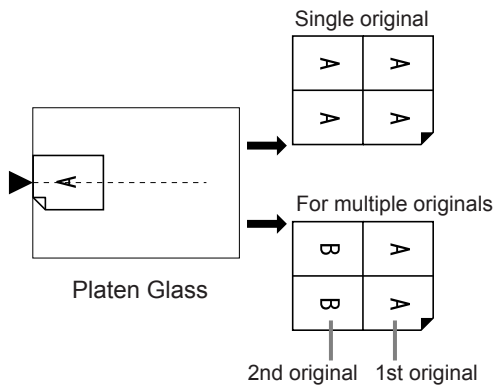


◆ 8 Up (8 on 1)

Prints eight images of the original on one sheet of paper.

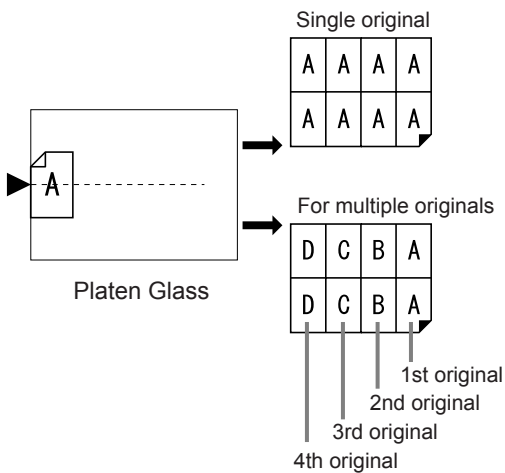


◆ 16 Up (16 on 1)

Prints 16 images of the original on one sheet of paper.

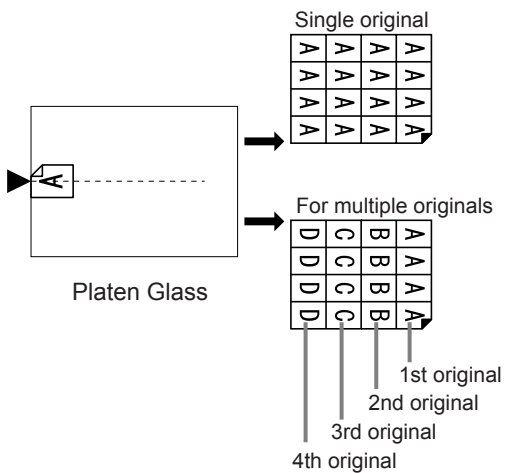


◆ **For Multi-Up Tickets:**

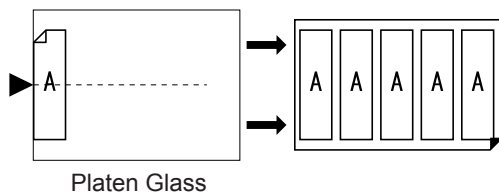

“Multi-Up Tickets” cannot be used with multiple originals.
The number of images printed is determined by the width of the ticket.


Orientation of Print Paper

Always place paper in the Paper Feed Tray as shown below.

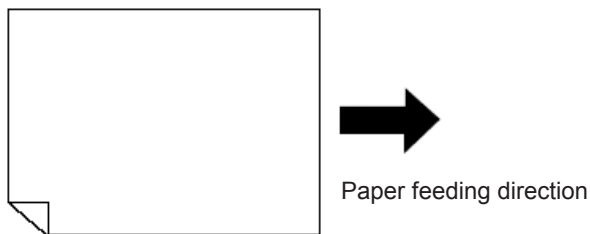


Multi-Up Interval

For Multiple-Original, the number of originals is scanned. There is a limit to the time interval for replacing the first scanned original with the next original. This time restriction is called the “Multi-Up Interval”. You can set the “Multi-Up Interval” to “30s” and “15s” (the factory setting is “15s”).

You must change the original and make any necessary settings during the “Multi-Up Interval”. If the  key is not pressed within the “Multi-Up Interval”, masters are not made for subsequent originals.

Note:

- Default “Multi-Up Interval” can be set on the Admin. screen.
 p.160

Enlargement/Reduction Ratio

For “Multi-Up Print”, the magnification/reduction ratio of the original differs depending upon the original size and the multi-up type, as well as the size of the print paper. The side-dependent change ratios are shown below.

◆ 2 Up

		Original							
		A4	B5	A5	B6	A6	B7	A7	B8
Printing Paper	A3	100%	116%	141%	163%	200%	---	---	---
	B4	87%	100%	123%	142%	173%	200%	---	---
	A4	71%	82%	100%	116%	138%	163%	200%	---
	B5	61%	71%	87%	100%	122%	141%	173%	200%

◆ 4 Up

		Original									
		A3	B4	A4	B5	A5	B6	A6	B7	A7	B8
Printing Paper	A3	50%	58%	71%	82%	100%	116%	141%	163%	200%	---
	B4	---	50%	61%	70%	87%	100%	122%	141%	173%	200%
	A4	---	---	50%	58%	71%	82%	100%	115%	142%	164%
	B5	---	---	---	50%	61%	71%	87%	100%	123%	142%

◆ 8 Up

		Original							
		A4	B5	A5	B6	A6	B7	A7	B8
Printing Paper	A3	50%	58%	71%	82%	100%	116%	141%	163%
	B4	---	50%	61%	71%	87%	100%	123%	142%
	A4	---	---	50%	58%	71%	81%	100%	116%
	B5	---	---	---	50%	61%	70%	87%	100%

◆ 16 Up

		Original					
		A5	B6	A6	B7	A7	B8
Printing Paper	A3	50%	58%	71%	81%	100%	116%
	B4	---	50%	61%	70%	87%	100%
	A4	---	---	50%	57%	70%	81%
	B5	---	---	---	50%	60%	70%

Note:

- See p.94 for information about Multi-Up Tickets.

2 Up Operation

1 Select a colour mode.

Select 1-Colour or 2-Colour print.

Note:


- See p.23 for how to select a colour mode.

2 Place an original and load paper.


- When 2-Colour printing with 2 originals p.38
- When printing with 1 colour p.57

Important!:


- Pay attention to the orientation of the original.
For "2 Up", make sure to place the original as the diagram demonstrates.
The same is true when using the ADF unit.

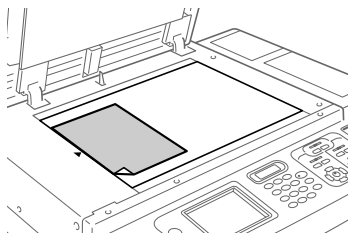

3 Touch [Functions] on the Master Making Basic Screen.

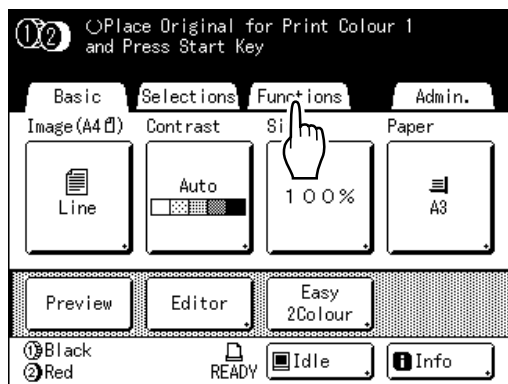

4 Touch [2 Up].

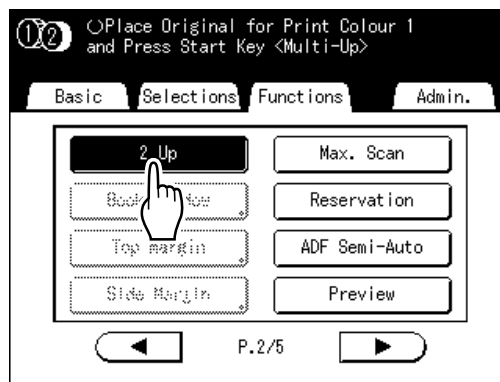


5 Make necessary settings.

Make various settings as needed.

After this, please follow the same operations for normally making a master and 1-Colour and 2-Colour printing.

6 Press the key.

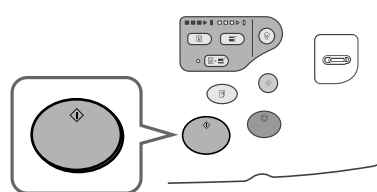

Starts scanning of the original.

Operation for Multi-Up Printing

1 Select a colour mode.

Select 1-Colour or 2-Colour print.

Note:

- See p.23 for how to select a colour mode.

2 Place an original and load paper.

If you set the original and print paper prior to setting "Multi-Up Print", the printer will automatically set the size ratio.

See an explanation of the various modes for information on the respective ways to set the original.

- When 2-Colour printing with 2 originals p.38
- When printing with 1 colour p.57

Note:

- Pay attention to the orientation of the original. p.86

◆ Placing an original when setting is "Single-Original"

When using 2 originals for 2-colour printing, place the original to be printed in the colour of Drum 1 face down

◆ Placing an original when setting is "Multiple-Original"

When scanning 2 originals in 2-Colour mode, follow the steps below.

- 1) Original 1 being printed in the colour of Drum 1
- 2) Original 2 being printed in the colour of Drum 1
- 3) Original 1 being printed in the colour of Drum 2
- 4) Original 2 being printed in the colour of Drum 2


After scanning all of the originals noted above, masters are created one after the other on Drum 1 and Drum 2.

◆ When placing original on the platen glass:


Place "Original 1-1" being printed in the colour of Drum 1" face down.

◆ When placing within ADF unit (option):

You can place all originals together. To do so, place face down in the order shown below.

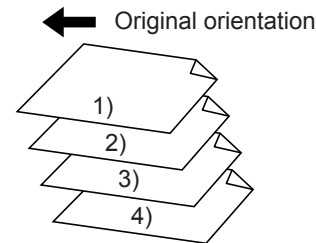


3 Touch [Functions] on the Master Making Basic Screen.

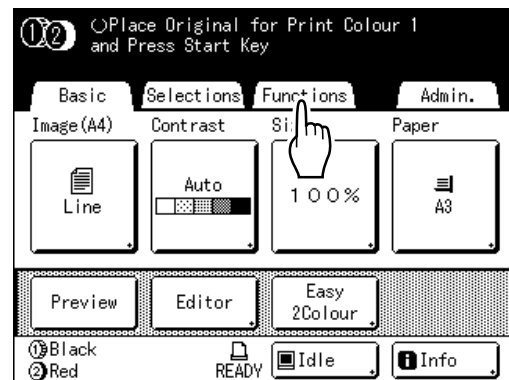

4 Touch [Multi-Up Print].




5 Touch [Single] for Single-Original, touch [Multiple] for Multiple-Original.

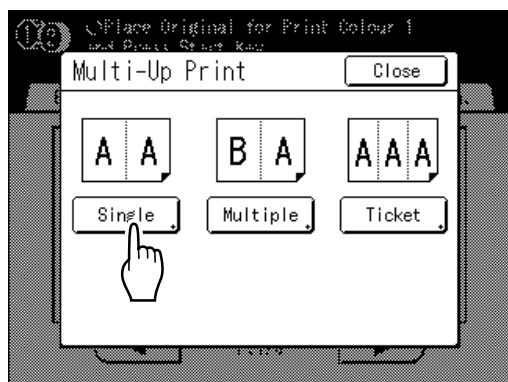


Except for the original placement method, operations for “Single-Original” and “Multiple-Original” are basically the same. This example is for “Single-Original”.

6 Touch the button of the number of images to use.

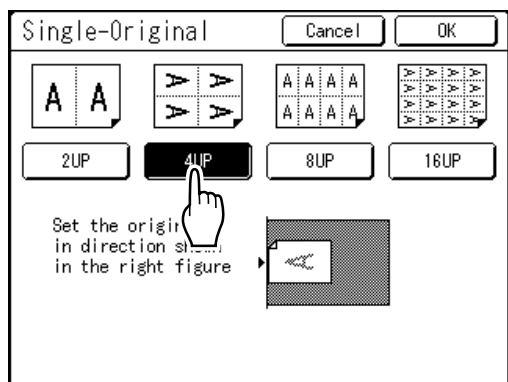

To cancel the “Multi-Up Print” settings, return to the previous screen and touch **[Cancel]**.

7 Touch [OK].

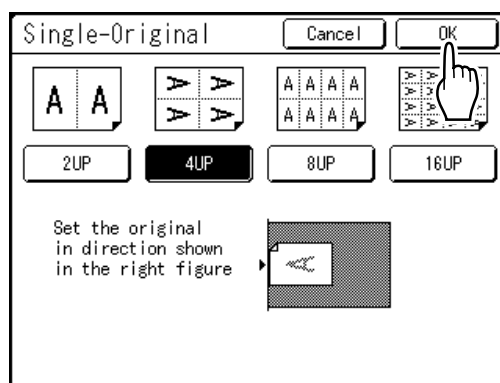

The following screen appears.



Returns to the Functions screen. Multi-Up Print setting is updated.

An error will occur in the following instances.


Following the instructions on the screen.

- An original is not set
- Paper is not set
- The correct size paper is not set

8 Make necessary settings.

Make various settings as needed.


9 Press the key.

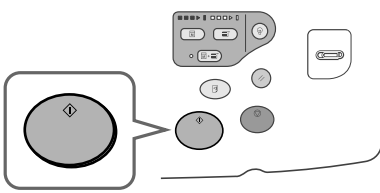

Starts scanning of the original.

After this, please follow the same operations for normally making a master for 1-Colour and 2-Colour mode.

Important!:

- To change the original, replace it within the "Multi-Up Interval" and press the  key. A master will not be made of the original if the "Multi-Up Interval" is exceeded.

Operation for Multi-Up Tickets

For “Multi-Up Tickets”, the specification of the short edge size of the original (the width) is used to calculate the number of images that can be printed on one sheet of paper (print paper size divided by short edge size of the original). A ticket width of between 50 mm and “print paper size divided by 2 (remainder is eliminated)” mm can be specified.


Ex.)

Short edge of the original 50 mm

Long edge of the print paper 297 mm (A4 size)

$297 \div 50 = 5$ with a remainder of 47

In this example, 5 images print on one sheet of paper.

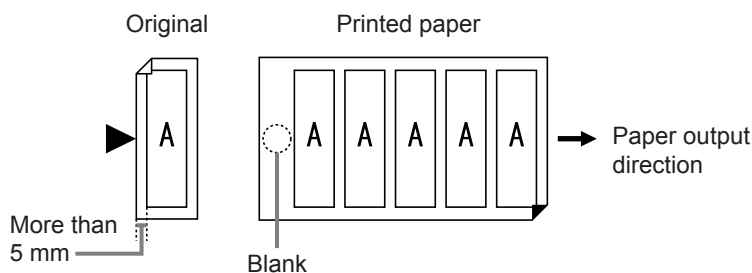

1 Select a colour mode.

Select 1-Colour or 2-Colour print.

Note:

- See -p.23 for how to select a colour mode.

2 Place an original and load paper.

Place the original on the Platen Glass.

For 2-Colour printing, place the original for Drum 1.

Important!:

- Pay attention to the orientation of the original.


3 Touch [Functions] on the Master Making Basic Screen.




4 Touch [Multi-Up Print].



5 Touch [Ticket].

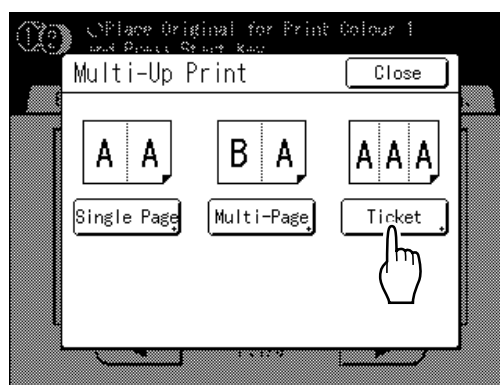


6 Touch or to specify the short edge size of the original (the width).

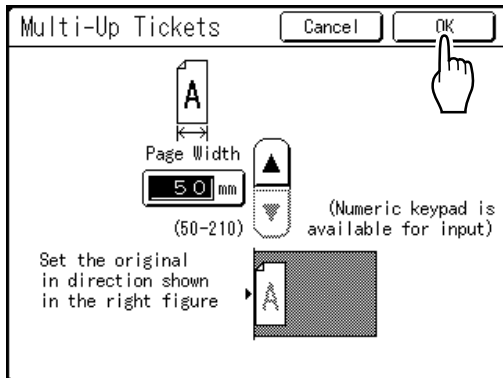

Important!:

- If you have enlarged/reduced size in step 8 (setting print functions), be careful about the following points.
- Specify the ticket width after enlarging/reducing.
- If you magnified the size, make sure that the bigger size does not exceed the specified "Page Width" or the short edges of the print paper.
- When magnifying, make sure to prepare paper that fits the enlarged size.

7 Touch [OK].

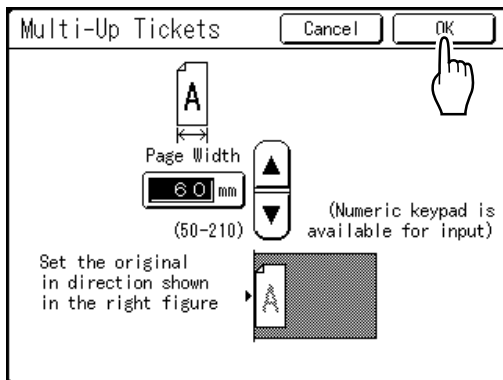

The following screen appears.



Returns to the Functions screen. Multi-Up Tickets setting is updated.


An error will occur in the following instances. Following the instructions on the screen.

- An original is not set
- Paper is not set
- The correct size paper is not set

8 Make necessary settings.

Make various settings as needed.

9 Press the key.

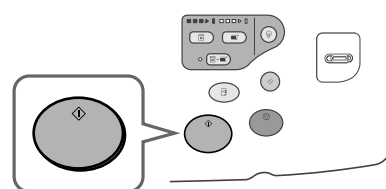

Starts scanning of the original.

For 2-Colour printing, place the original for Drum 2.


After this, please follow the same operations for normally making a master for 1-Colour and 2-Colour mode.

Switching Masters of Just One Drum

[OneSide MasterMake]

When 2-Colour printing, you can switch just one of the two originals and print.

This is a handy function when printing different letters using the same letterhead. Simply create another master for the text, retaining the original master for the letterhead.

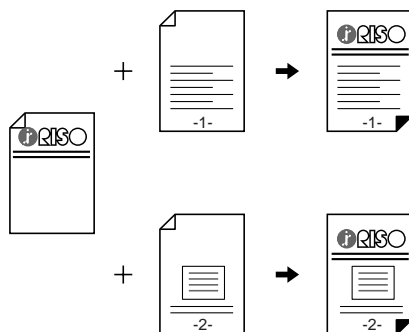


1 The first of the 2-Colour print is executed.

“2-Colour Printing with 2 Originals” (p.38)


Note:

- If you are connecting the printer with a computer, we recommend that you set “Reservation”. The master in use will be discarded if data is received from the computer during a print job. You can prevent this type of interruption from occurring.
p.149


2 Once the initial printing is completed, touch [Functions] on the Print Basic Screen.

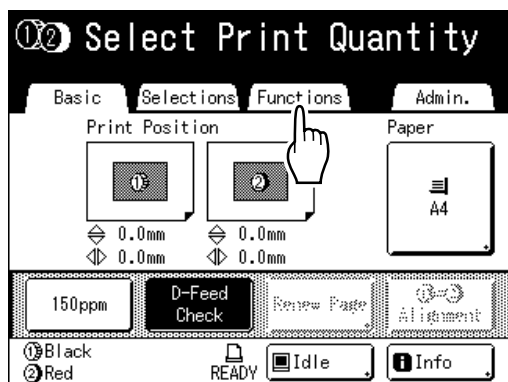

3 Touch [OneSide MasterMake].

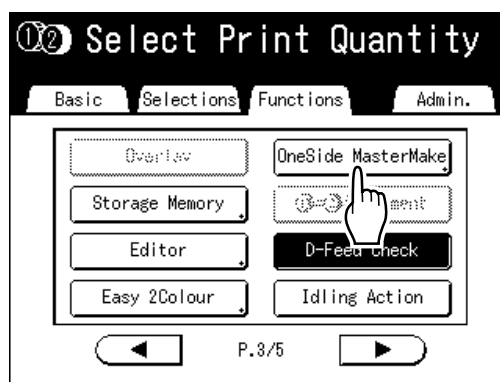

4 Touch the button of the drum for which you are changing the original.

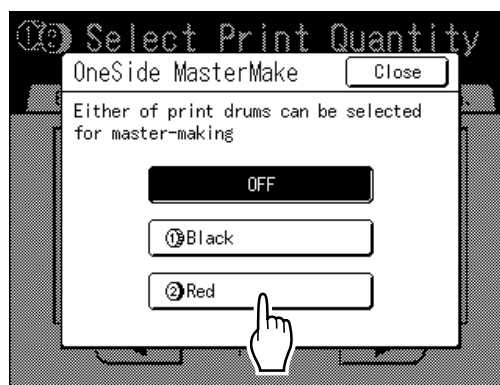

The following screen appears.



Returns to the Functions screen. OneSide MasterMake setting is updated.


5 Place the changed original.

Place on Platen Glass or in ADF unit (option).
See "2-Colour Printing with 2 Originals" (p.38).


6 Make necessary settings.

You can configure functions to apply to the new original as needed.
If you make no settings, the same settings as the first print are used.

7 Press the key.

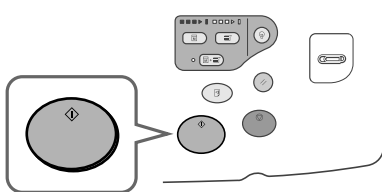


A master is made on the drum specified in step 4.

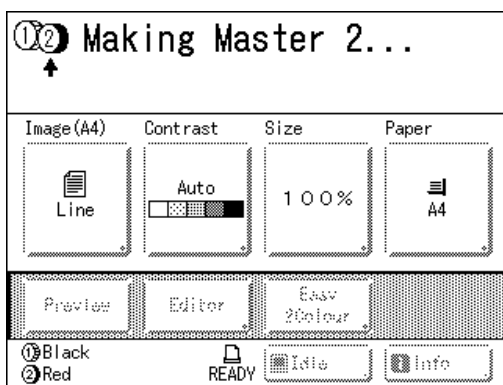

Once the master is made, a proof copy using only Drum 2 is printed, and then a 2-Colour proof copy is printed.

When a proof copy is printed, the Print Basic Screen appears.

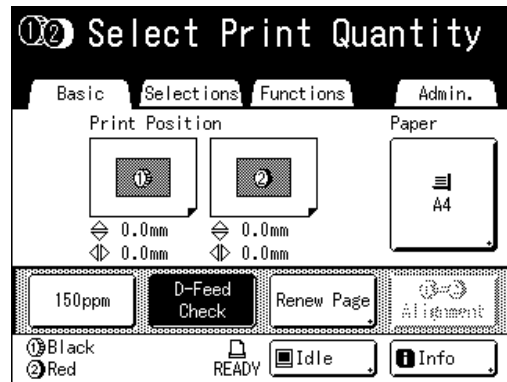


8 Check the proof copy result.

Check the proof copy; e.g., print position and density.

If necessary, change print position and density.


- Print Position (p.113)
- Print Density (p.112)
- Interval Printing (p.118)
- Eject Wing Control (p.120)

After adjustment, press the  key to print a proof copy.

Note:


- You can also adjust the print position, the density, and the speed while print process is in progress.

9 Enter the number of copies using the Print Quantity Keys.


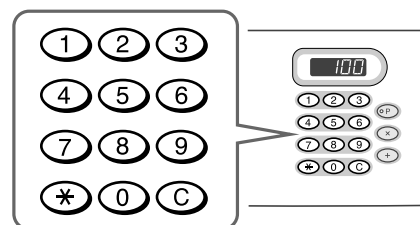


The specified number is displayed on the Print Quantity Display.

Note:


- To change the number, press the  key, then re-enter the correct number.

10 Press the key.

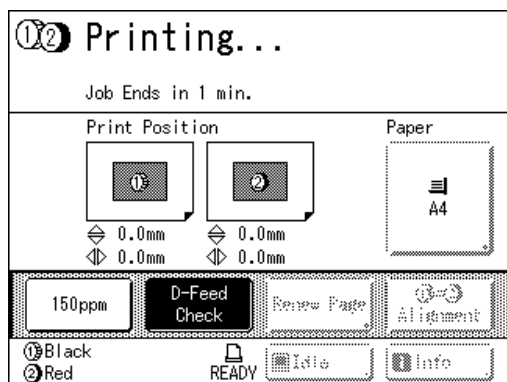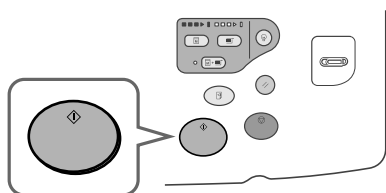

The specified number of copies will be printed.

Note:

- Press the  key to interrupt printing operation currently underway.

Making a Master that Utilizes the Maximum Printing Area [Max. Scan]

When a master is made, automatic paper size detection and image size adjustment applies to allow appropriate print margins. This is to prevent paper jams, and to keep internal roller free of ink stains.

By selecting “Max. Scan”, maximum printing area will apply to the scanned image, regardless of the print paper size or original document size.

Maximum Printing Area: 291 mm × 413 mm


Important!:

- Be sure to check the sizes of the original document and the printing paper first.
p.14
- The 5mm margin on the top cannot be scanned even in the “Max. Scan” setting.
- Do not use print paper smaller than the area of the image made on the master.
- The entire surface of the Platen Glass must be clean.
By scanning the maximum size, dirt found outside the original document area will also be included in the master.
This may cause the internal roller to be stained with ink.

1 Touch [Functions] on the Master Making Basic Screen.



2 Touch [Max. Scan].

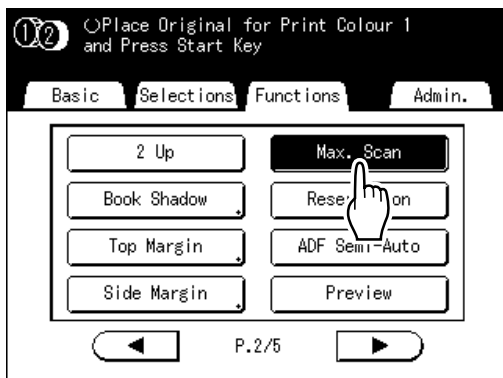

“Max. Scan” is selected.

Reproducing the Master [Renew Page]


The data from the last master-making process is temporarily stored on the machine.

Using this data, another master can be reproduced without repeating steps to scan the same original.

“Auto Page Renewal” is a function that automatically recreates a master when a specified number of pages are printed. If you are printing a high-volume job of thousands or tens of thousands of copies, the master may degrade before the job is completed.


If you set “Auto Page Renewal” to “ON” prior to starting a large-volume print job, a master will be automatically recreated when the specified number of copies is reached (Auto Renewal Point). This allows you to maintain a consistent print quality from start to finish.

Note:


- When 2-Colour printing, you can select the drum on which to recreate the master. When 1-Colour printing, the current drum is used to recreate the master.
- When 2-Colour printing, you can change Drum 1 and the master on Drum 2 and recreate the master (change print colour).
- “Renew Page” works with data sent from a computer as well. However, if multiple pages exist, only the last page will be processed with “Renew Page”.
- When direct printing, you can “Rotate” the original and recreate a master.
- “Renew Page” function is not available:
 - immediately after startup
 - after pressing the  key
 - after performing “Confidential”
 - after master-making for Data Output Mode (when the optional Key Card Counter is installed.)
 - when an error has occurred during master-making
 - after performing “Link Print”

Recreating a Master

1 Touch [Functions] on the Print Basic Screen.

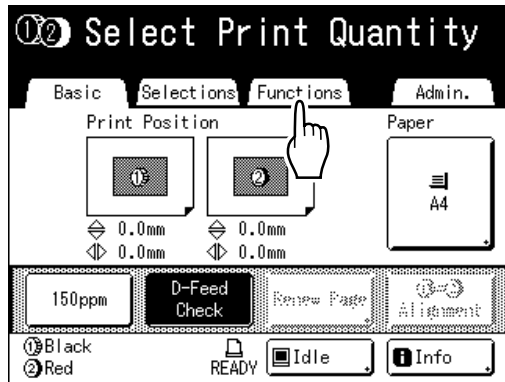

2 Touch [Renew Page].

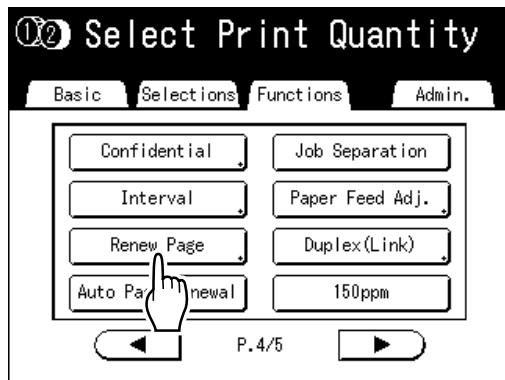


The display screen for 2-Colour and 1-Colour printing are different.

◆ For 2-Colour Printing

The Drum selection screen appears.
Touch the button of the drum used to recreate the master.


Note:

- If you touch and select [Sw.Colour], you can change the masters on Drum 1 and Drum 2 (a handy function if you've inadvertently misplaced the original order).

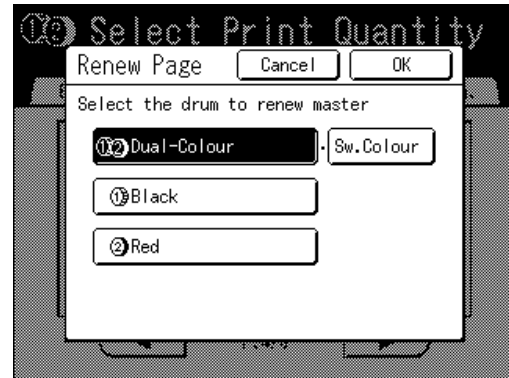


◆ For 1-Colour Printing

The following screen appears.

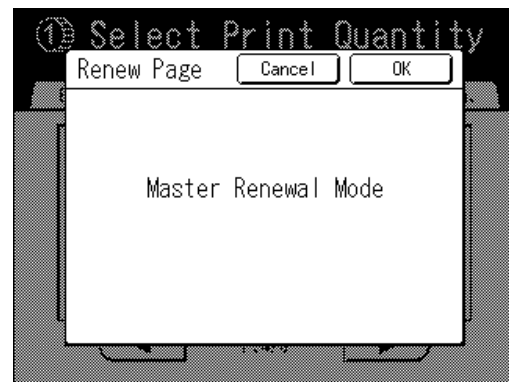

3 Touch [OK].

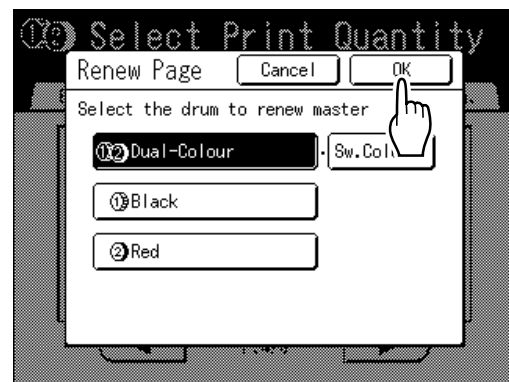


"Renew Page" begins reproducing the master.

Using Auto Page Renewal

In order to use “Auto Page Renewal”, you must enable it in “Admin.” prior to use.

If “Auto Page Renewal” is activated and “Auto Page Renewal” is set to “ON”, “Auto Page Renewal” can be executed during a print job.

Important!:


- If “Auto Page Renewal” is not activated in “Admin.”, “Auto Page Renewal” cannot be set to “ON”.
p.161
- The “Auto Page Renewal” is set to “OFF” in the following instances.
 - When printing with “Programme”
 - When the  is pressed
 - When attempting to process the next job with direct print

Note:

- The factory settings are such that a master is recreated every 1000 copies, with a setting to print 3 proofs. This setting can be changed in “Admin.”.


Turning ON “Auto Page Renewal”

1 Touch [Functions] on the Print Basic Screen.

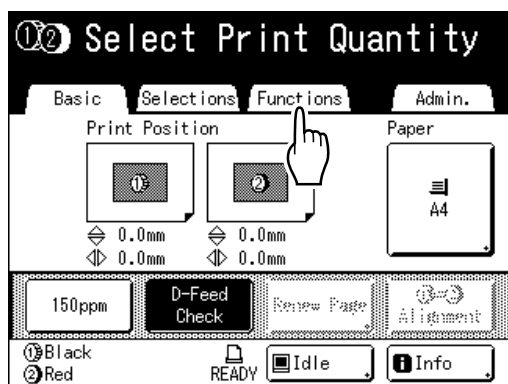

When you print with these settings, “Auto Page Renewal” will be executed after the specified number of copies are printed.

2 Touch [Auto Page Renewal].

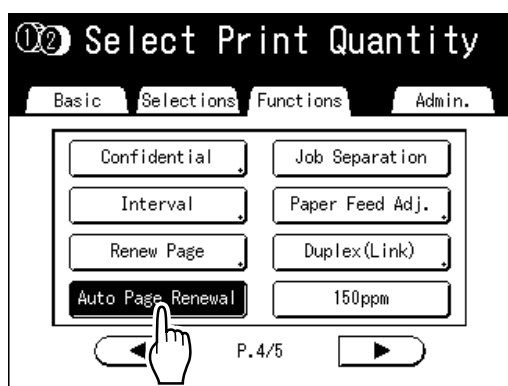

“Auto Page Renewal” is activated.

Cutting the Top Margin of the Original and Printing [Top Margin]

You can cut the top portion of the margin to between 0 to 99 mm and make a master.

This feature enables you to skip the registration marks* on the original and print on the finish-sized paper without any of these marks.

* About the Registration Mark

In the field of commercial printing, it is normal to print on paper that is larger than the finished size and then cut down to the finished size afterwards. The symbol that indicates the position to cut in this event is known as the registration mark.

Important!:

- When you are setting the “Size”, magnify/reduce using the area that skips the set value.
Do not use “Auto”.

Note:

- This function cannot be used with “2 Up”.


Drum 1 is used for the “Top Margin” when 2-Colour printing. You can set Drum 2 to be used for individual originals. Multiple settings are available depending upon the drum's ink colour and print aim. For example, you can set both originals or just one original.

1 Place an original and load paper.


Place the original face down on the Platen Glass. Align centre on the top edge, and close Platen Cover.

Important!:


- An ADF unit (option) cannot be used with “Top Margin”.

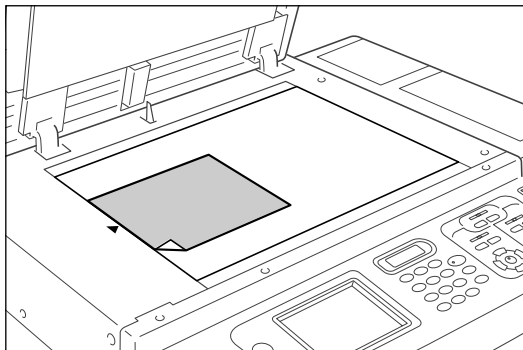


2 Touch [Functions] on the Master Making Basic Screen.

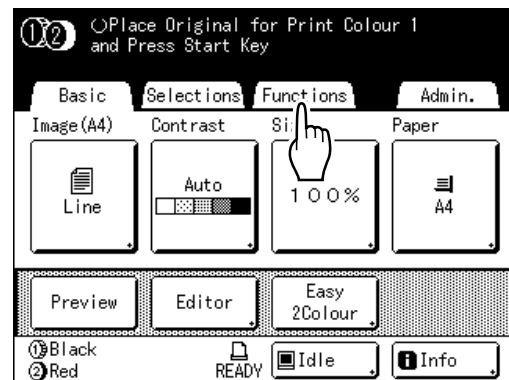


3 Touch [Top Margin].

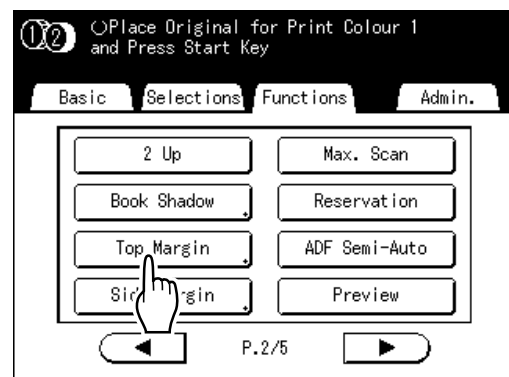

4 Touch [ON].

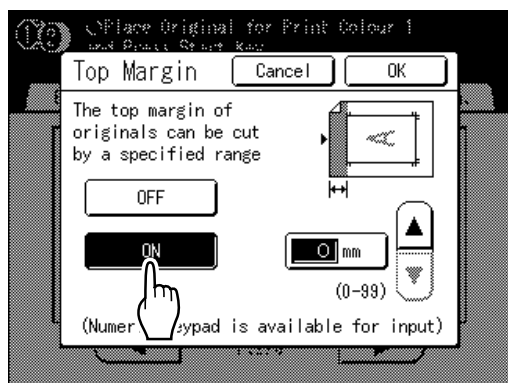

5 Touch ▲ or ▼ to specify the cut width.

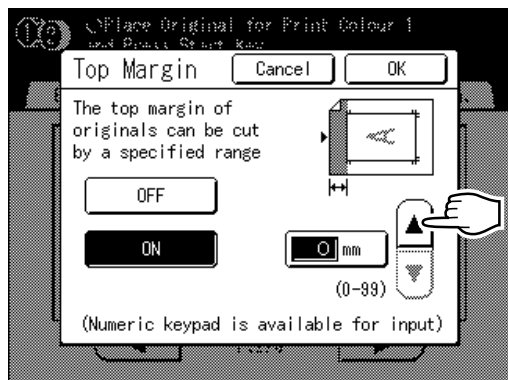


You can set from 0 to 99 mm.


Note:

- Print Quantity Keys can also be used to enter a value.

6 Touch [OK].

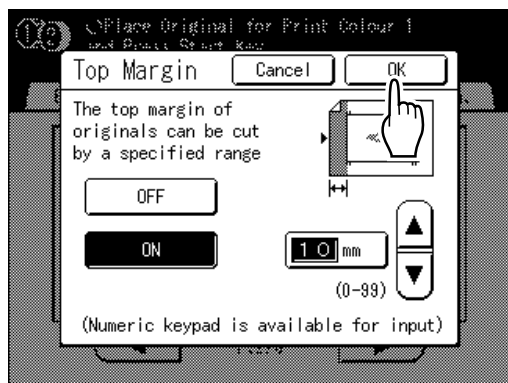

Returns to the Functions screen. Top Margin setting is updated.

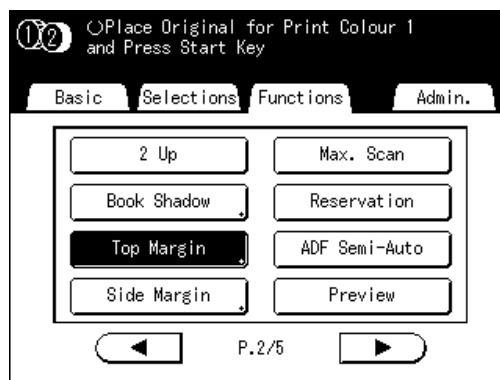

Adjusting the Side Margins of the Master

[Side Margin]

If you are using the ADF unit to print multiple originals and need to move the left and right margins to make a master, use "Side Margin" for one simple operation to offset the margins for all the originals (up to 10 mm left/right). You can also use "Side Margin" to create side margins when printing an original from the platen glass.


Important!:

- "Side Margin" is a function intended to adjust the location of the master.
If there are no white margins on the left or right of the original, a margin will not be created (the function is not intended to add and print a margin).


Note:

- This function cannot be used with the following functions.
 - Multi-Up Print
 - 2 Up
- If "Side Margin" and the print location controls on the control panels are used together, the final print location of the original can be adjusted up to 20 mm.


1 Touch [Functions] on the Master Making Basic Screen.

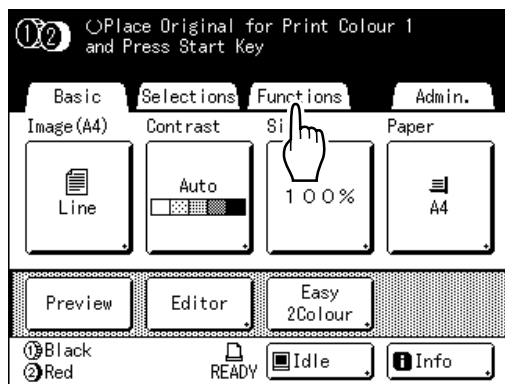


2 Touch [Side Margin].

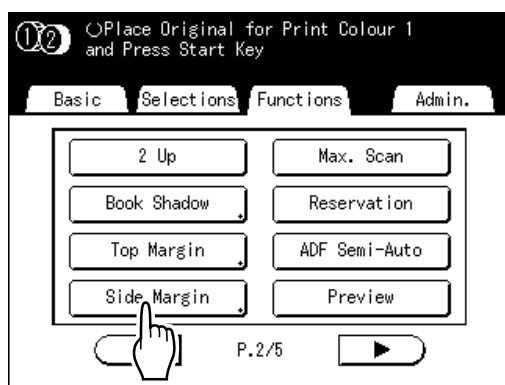

3 Touch [Left] or [Right] to adjust.

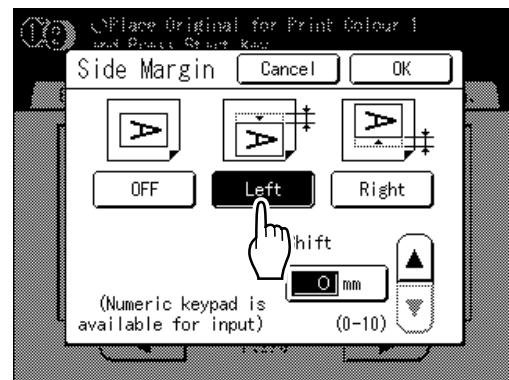

4 Touch ▲ or ▼ to specify the shift distance.

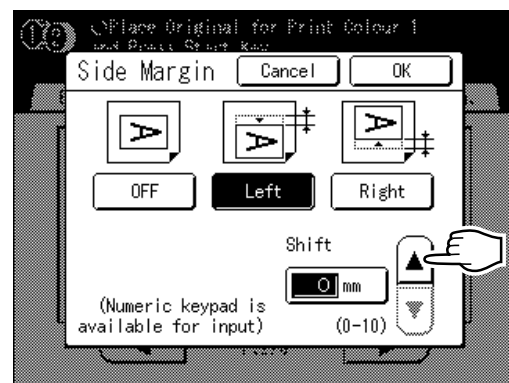


You can set from 0 to 10 mm.


Note:

- Print Quantity Keys can also be used to enter a value.

5 Touch [OK].

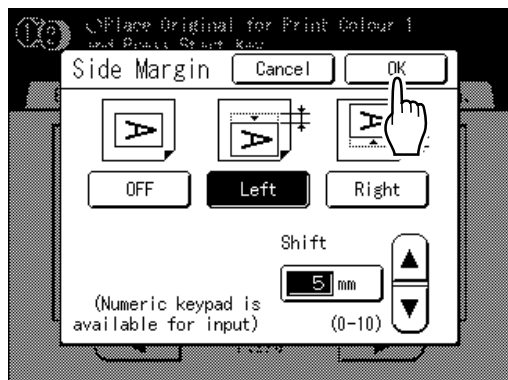

Returns to the Functions screen. Side Margin setting is updated.

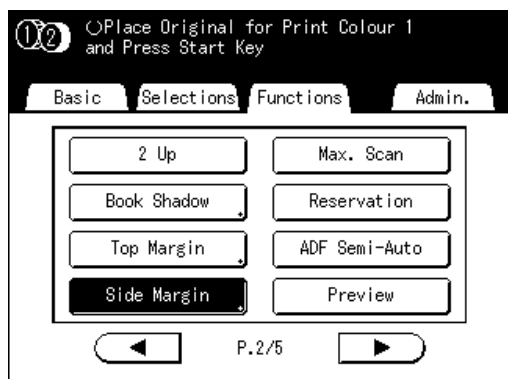

Important!:

- By using “Side Margin”, the opposite side of the side margin may be pushed out of the print area and not print. Check the margins of the original prior to setting


Checking the Print Image Prior to Making Master [Preview]

You can check what the actual master will look like by previewing an image of the scanned original or an image of data sent from a computer. This function is handy for making sure that the “Easy 2Colour” separation was successful, and for checking the layout or final image of a Multi-Up job.


The operation and display timing differ depending upon the mode.

Mode name (original type)	When set	When to display	If “Auto Processing” is ON
Printing from the Original Document	When setting functions related to Master Making (settings from Functions)	After Scanning the Original	Scans the original, then temporarily stops to display preview.
Scan Mode	When setting functions (master making functions) related to Scanning (setting from Functions)	After Scanning the Original	When in scan mode, an original is scanned and then saved, so there is no “Auto Process” operation. However, if multiple originals are placed in an ADF unit, you can touch [Continue] after reviewing the preview to start the scan of the next original.
Printing Original Data from a Computer	Stopping the print job prior to making a master (Semi-Auto(Print)/Auto Process OFF), after the machine has received the original data	Displays when touched	A preview is not shown if data is sent from the printer driver with “Auto Print” “ON”.
Retrieving Stored Data and Printing	When retrieving stored data (set on the Storage Basic Screen)	Displays when touched	If you touch [Preview] , it displays immediately. Touch [Continue] to make a master/print with “Auto Process”.

Note:

- Preview shows an image oriented towards output after printing.
- It shows the scanned original as-is. A margin is required when actually printing. Check to make sure that the margins are sufficient.
- If you are 2-Colour printing, a 2-Colour preview will be displayed after the original has been scanned on Drum 1 and Drum 2.
- Even if a single original has been separated using the “Easy 2Colour” function, each of the separated results is displayed.
- In “Direct Print” operation, **[Preview]** will be displayed on the Master Making Basic Screen when data is received from the computer.
 p.66
- When in Link mode (when a linked printer (sold separately) is connected), the original image after scanning and prior to output from the linked printer is previewed.

Actions Available on the Preview Screen

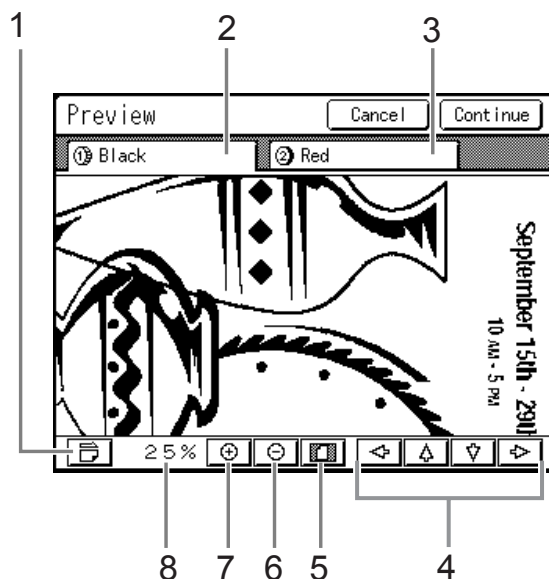


- | | |
|---|--|
| <p>1) Rotate Image Button
Allows you to rotate the displayed image 90 degrees.</p> <p>2) Drum 1 Original</p> <p>3) Drum 2 Original</p> <p>4) Scroll Button
The image moves in the direction of the displayed arrow.</p> | <p>5) Show All Button
Shows the entire image.</p> <p>6) Reduce Button
Shrinks the preview display each time it is touched.</p> <p>7) Magnify Button
Magnifies the preview display each time it is touched.</p> <p>8) Displays the size of the current display.</p> |
|---|--|


Setting and Printing the Preview Display

The operational procedures for “Printing Hardcopy” are explained below.

- 1 Place an original and load paper.**
- 2 Touch [Functions] on the Master Making Basic Screen.**

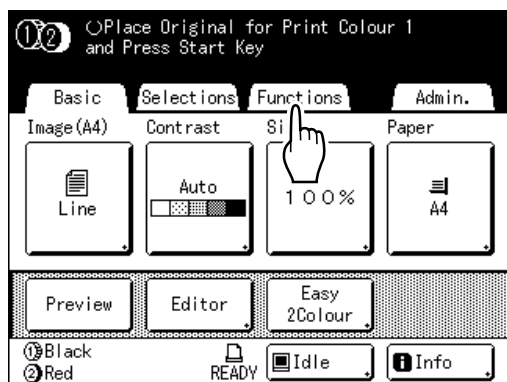

- 3 Touch [Preview].**

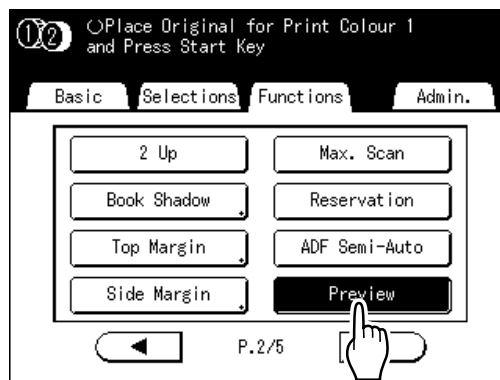


Preview setting is updated.

4 Make necessary settings.


You can configure print functions to apply to the new original as needed.

5 Press the key.

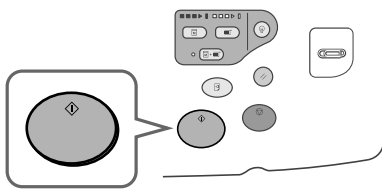


A scan of the original begins, and can be pre-viewed on the Preview screen.

6 Check the preview image.

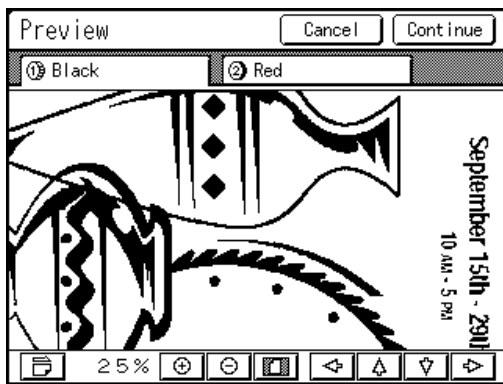

7 Touch [Continue].

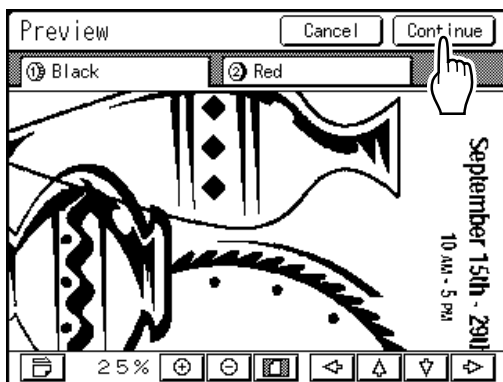

A master is created using the settings configured in step 4.

After this, please follow the same operations for normally making a master for 1-Colour and 2-Colour mode.

Note:

- Touching **[Cancel]** will cancel the image, returning to the Master Making Basic Screen. To resume preview operation, repeat from step 4.

Functions for Printing

Changing the Print Speed


[Print Speed Adjustment]

You can select the print speed from five levels; from 60 to 120 copies/minute.
The print speed may be adjusted while printing is in progress.

Note:

- Set the default print speed on the Admin. screen.
The factory default is level 3 (approximately 100 copies/minute).
p.159

Press the ◀ or ▶ key to adjust the print speed.

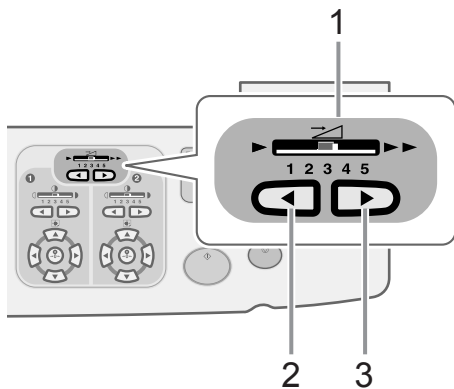

- 1) Print Speed Indicator**
Shows the current print speed.
- 2) ▶ Key**
Increases the print speed incrementally.
- 3) ◀ Key**
Decreases the print speed incrementally.

Indicator level and print speed

Indicator Level	1	2	3	4	5	150 ppm ^{*2}
Print Speed ^{*1} (copies/minute)	60	80	100	110	120	150

^{*1}: These are approximate ppm values.

^{*2}: High-speed printing is set from "Functions" on the display.

Printing at High Speed [150ppm]

By using “150ppm”, you can print faster than if you were to simply adjust the “Print Speed”.

Setting “150ppm”

By registering to the Direct Access area, you can set “150ppm” by a single touch during a printing process.

☞ p.167

“150ppm” cannot be used in the following cases:

- When Printing with A4, B5, Letter sizes, using only Drum 2 for 1-Colour printing
- When used in an environment in which the temperature is less than 15°C.

Important!:

- Use the normal print speed adjustment (1 to 5) until the internal temperature of the machine is higher than 15°C. The time it takes for the internal temperature to rise depends upon the machine environment.


1 Touch [Functions] on the Master Making Basic Screen or the Print Basic Screen.



Note:

- To slow down printing speed from “150ppm”, press the ◀ key on “Print Speed” adjustment keys/indicator.

2 Touch [150ppm].

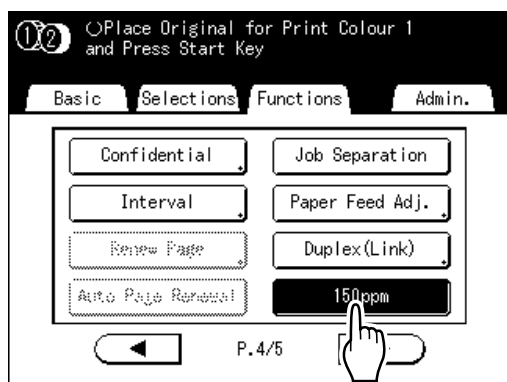

150ppm setting is updated.

Adjusting the Print Density

[Print Density Adjustment]

You can select the print density from five levels, by each drum.
The print density may be adjusted while printing is in progress.


Important!:

- “Print Density” is not available when **[Ink Saving]** is selected.
p.84

Note:

- The default print density can be set on the Admin. screen.
The factory default is set at level 3 (Standard).
p.159

Press the ◀ or ▶ key to adjust the print density.

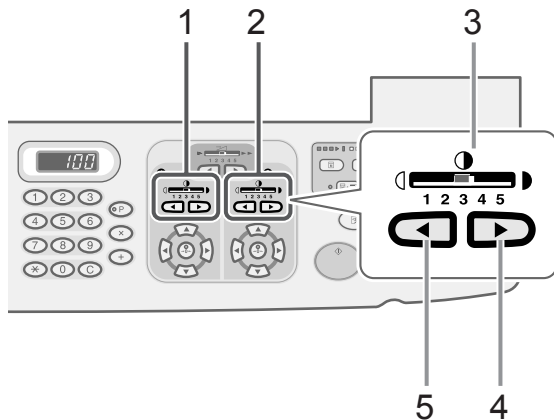

- 1) **Adjusting the print density used for Drum 1**
- 2) **Adjusting the print density used for Drum 2**
- 3) **Print Density Indicator**
Shows the current print density.
- 4) ▶ **Key**
Increases the print density incrementally.
- 5) ◀ **Key**
Decreases the print density incrementally.

Adjusting the Print Position


[Print Position Adjustment] [1=2 Alignment]

The print position on the paper can be adjusted for each drum.


Adjustment range Vertical direction: $\pm 15\text{mm}$ Horizontal direction: $\pm 10\text{mm}$

The positioning may be adjusted while Printing is in progress.

Note:

- After adjusting the print position, print a proof copy to check the result.
p.116
- The numerical value formed by "Print Position Adjustment" is the target. Set the actual position by verifying and adjusting the printed material.
- Just after adjusting the print position of only one drum, traces of the previous print position remain, which may cause blurred printing. If this occurs, make several proofs until the remaining image disappears.
p.116
- When adjusting the print position of both drums to the same location, you can do so by simply adjusting one drum. The other will be adjusted to the same print position.
p.114
- Print position adjustment values for each drum are retained after printing is completed, to be applied for subsequent master making processes. The values will be retained until the  key is pressed or power is turned off.

Press the , ,  or  key to move up or down.

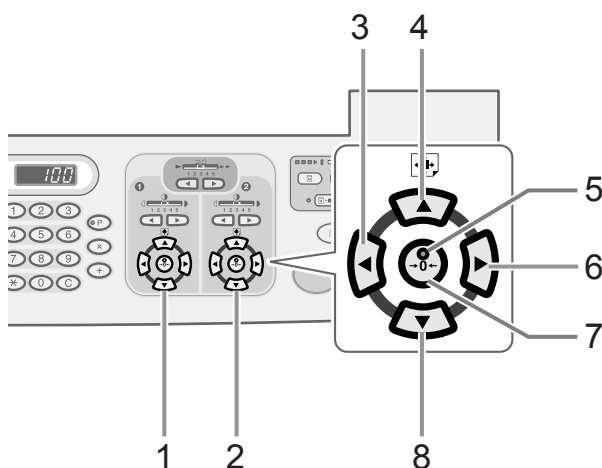


1) Adjusting the print location for Drum 1

2) Adjusting the print location for Drum 2


3)  Key

Each press shifts the print position downward in steps of about 0.5 mm.

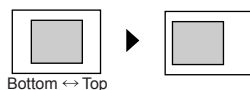

4)  Key

Press the key to move the print image about 0.5 mm to the left on the paper.

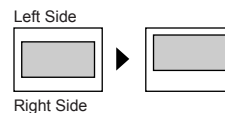



5) **Original Position Indicator**

Indicates when positioning has not changed.

6)  Key

Each press shifts the print position upward in steps of about 0.5 mm.

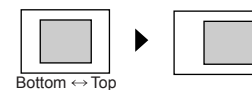


7)  Key


Press to return to original position.

8)  Key

Press the key to move the print image about 0.5 mm to the right on the paper.

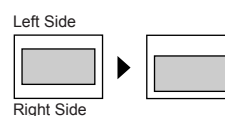

The Print Basic Screen shows current vertical/horizontal adjustment.

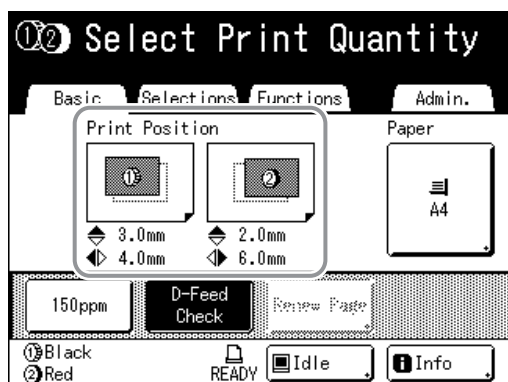


Adjusting the Print Position of Both Drums Together

1 Adjust the print position of one of the drums.


The adjustments display on the Print Basic Screen.

2 Touch [Functions] on the Print Basic Screen.

Ex: When adjusting Drum 1

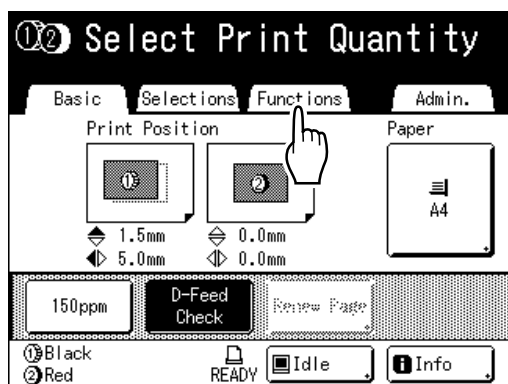


3 Touch [①=② Alignment].

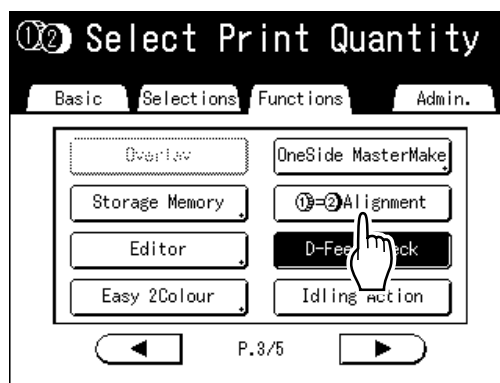

The other drum is adjusted to the same print position.

4 Touch [Basic] to check the Print Basic Screen.

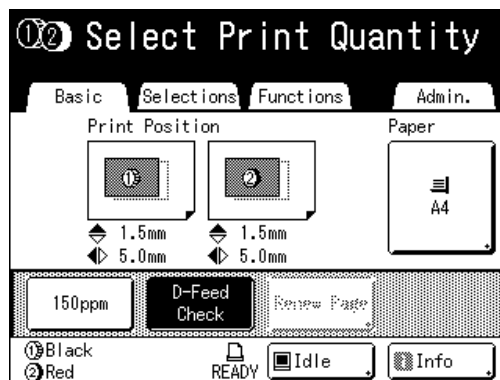

Note:

- If both drums were adjusted separately, it is adjusted to match the position of the last-adjusted drum.

Tip:**Making Fined Adjustments to the Print Position**


If the settings are such that "Fine Adjust Mode" can be set, the print position can be finely adjusted in 0.1 mm increments (the normal increment is 0.5 mm).

Note:

If you want to use "Fine Adjust Mode", please contact your dealer (or service/maintenance provider).

[Fine Adjust Mode] is displayed on the Functions screen if "Fine Adjust Mode" can be used.


If you press and highlight (in b/w) **[Fine Adjust Mode]**, "Fine Adjust Mode" is activated and you can make print position adjustments in increments of 0.1 mm. The increments return to 0.5 mm when set to "OFF".

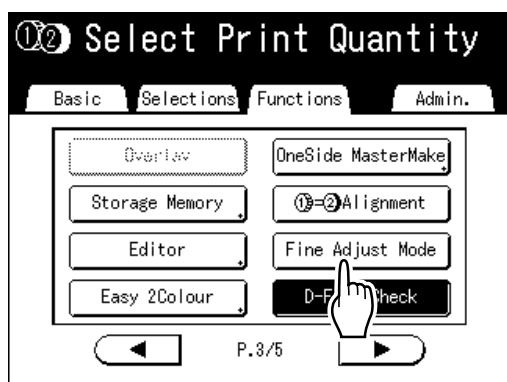


Printing Proof Copies [Proof]

After making adjustments to the print position or density, check the print quality in a proof copy.
Proof copies are not counted towards the number of copies displayed on the Print Quantity Display.

Note:

- The machine will continue to print proof copies if the  key is held down.
- A proof copy cannot be printed from a Linked Printer (sold separately).

Press the  key.

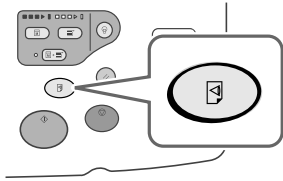

A single proof copy is printed.

Prevent Paper Jams When Using Special Paper [D-Feed Check]

This printer monitors for multiple paper feeds. If a feed of more than one sheet is detected, the print job automatically stops and "D-Feed Check" is executed.


The multiple paper feed detector is calibrated for normal print paper. Paper jams or errors may be displayed depending upon the type of paper used. In the following instances, please set "D-Feed Check" to "OFF".

- When a multi-feed detection message is occasionally displayed, even though no multi-feed has occurred
- When using dark paper (black, red, dark blue)
- When using paper already printed on the back side


Note:

- In the factory setting, "D-Feed Check" is set to "ON".
 ☞ p.159

1 Touch [Functions] on the Print Basic Screen.

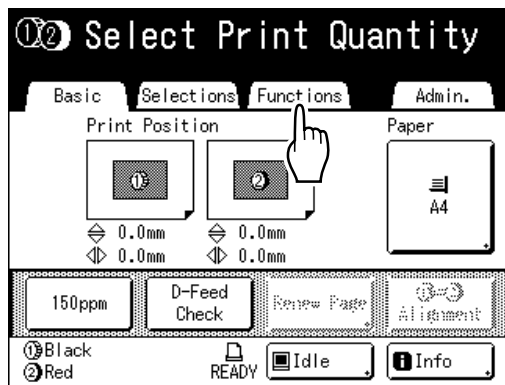

2 Touch [D-Feed Check].

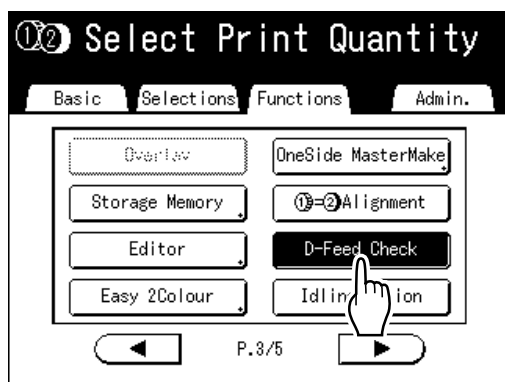


The button changes from being highlighted (b/w) to the normal display, and "D-Feed Check" is set to "OFF".


Keeping Printed Copies Dry [Interval]

By allowing the drum to skip a rotation during printing and extend the printed paper ejection interval, the ink has time to dry, preventing it from leaving marks on the back of the next sheet. Skip Rotation can be set from 1-10.


1 Touch [Functions] on the Print Basic Screen.

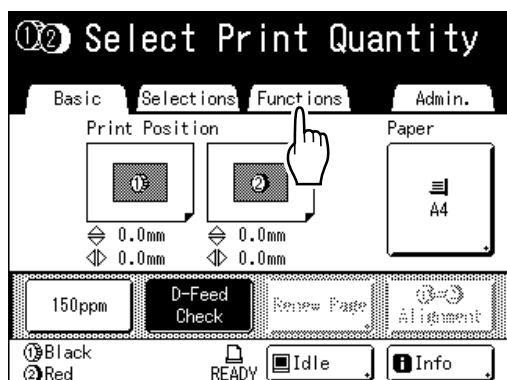


2 Touch [Interval].

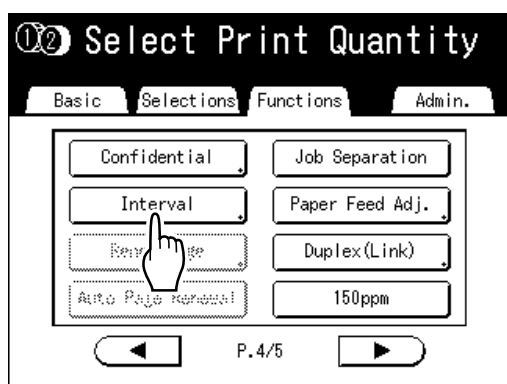

3 Touch [ON].

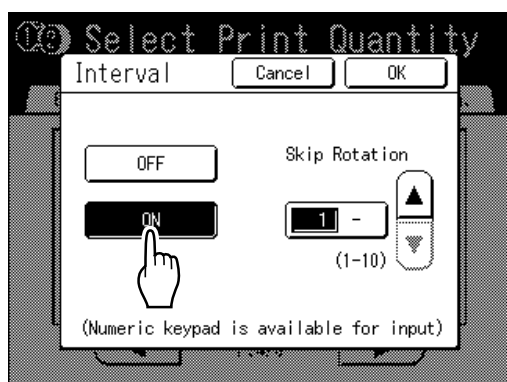


4 Touch ▲ or ▼ to set the number of Skip Rotations for the Print Drum.

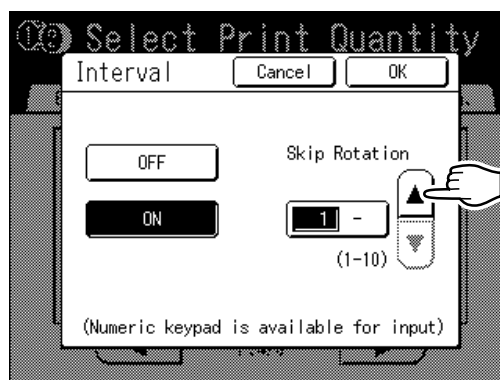


Note:

- Print Quantity Keys can also be used to enter numbers.
- If you are using extended paper and set the drum skip rotation to an odd number, the actual skip rotation is the "Set Number +1".
p.173

5 Touch [OK].

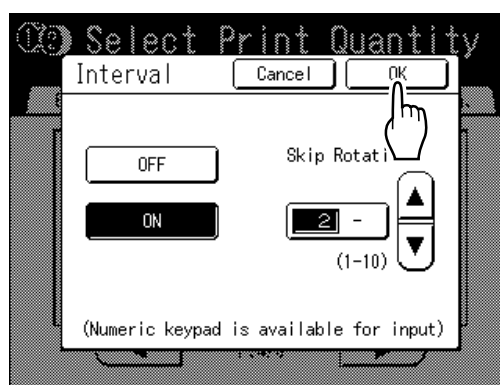

The following screen appears.

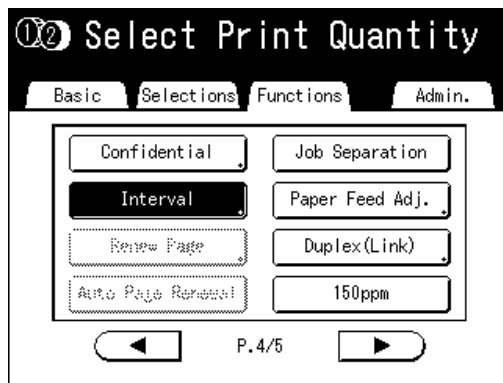

Returns to the Functions screen. Interval setting is updated.

Ejecting Paper Using Pre Configured Setting

[Eject Wing Control]


The following steps retrieves pre-configured custom settings for the Paper Ejection Wing. Use this feature to eject certain printing paper that is hard to eject with automatically adjusted normal Paper Ejection Wing setting.

Important!:

- “Eject Wing Control” feature is not available unless pre-configured.
- Only one setting can be pre-configured.
- To pre-configure or to change settings, please contact your dealer (or authorised service representative).


Note:

- The Paper Ejection Wing is a device which helps eject printed paper onto the Paper Receiving Tray. It automatically adjusts according to the position of the Paper Feed Pressure Adjustment Lever (standard or thick).

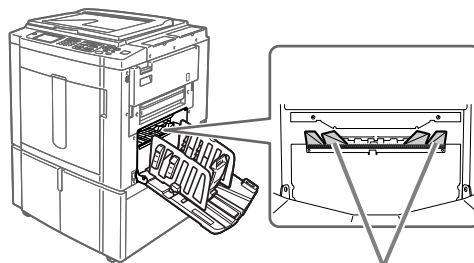


Paper Ejection Wing

1 Touch [Functions] on the Print Basic Screen.

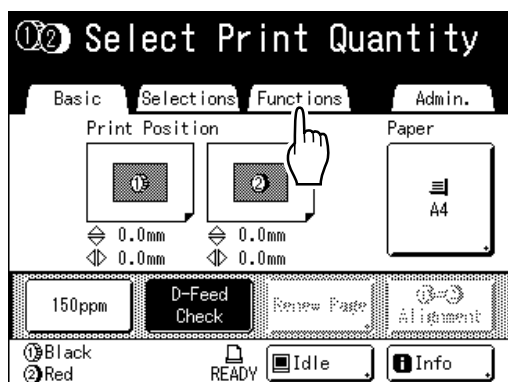

2 Touch [Eject Wing Control].

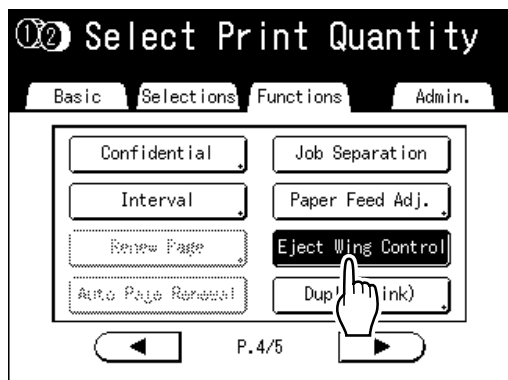

“Eject Wing Control” is selected.


Turning the Air Blower and Separation Fan OFF [Paper Eject Adj]

The machine normally uses an air blower and a separation fan to eject the printed paper from the drum (using a jet of air). When printing flyers, etc., the air blower and/or separation fan may cause the print image to become uneven for certain image locations and types of original, or may cause ghost images. If this occurs, you can adjust the air blower and separation fan when printing.


Note:

- If the air blower or separation fan are turned "OFF", you may experience trouble ejecting the paper. Consult your dealer (or authorised service representative) for further advice.
- The default "Paper Eject Adj" settings can be changed using "Admin.".
p.159


1 Touch [Functions] on the Master Making Basic Screen or the Print Basic Screen.

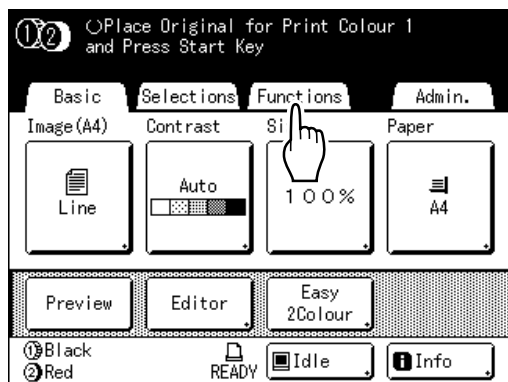

2 Touch [Paper Eject Adj].

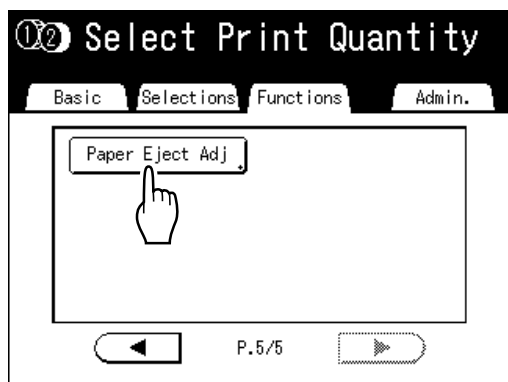


3 Set the [Air Blow] and [Separation Fan].

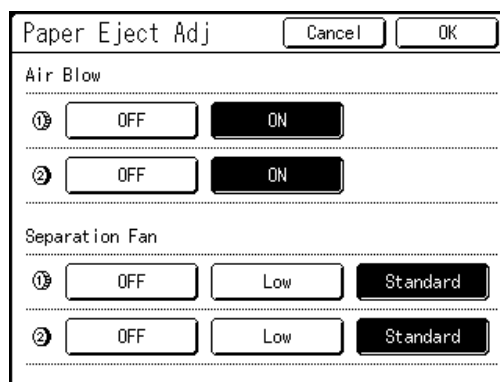

For 2-Colour printing, you can set each drum.
For 1-Colour printing, you can only set the drum being used.

4 Touch [OK].

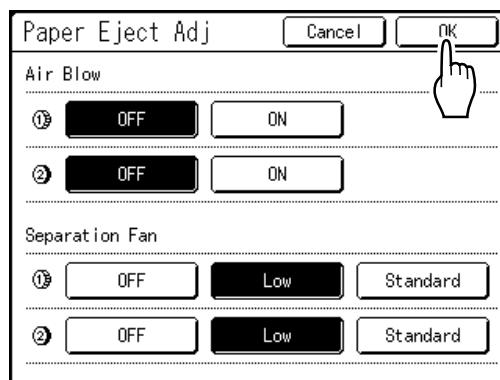

Returns to the Functions screen. Air Blow and Separation Fan settings are updated.


Advanced Features

Automatic Sorting Into Groups [Programme]

You can use “Programme” to divide one original into several groups and programme each group to print a different number of copies or sets. For multiple originals, you can change the number of copies for each original and then print. “Programme” consists of three types: “Single Page”, “Multi-Page”, and “Combination”.

Once a setting has been programmed, it can be registered to the Programme List and can be retrieved and repeatedly used (up to 12 programmes of the combined 3 groups can be stored)

Note:


- After printing with “Programme”, press the  key to deactivate “Programme”.

◆ Single Page Mode

From a single original document, print into multiple groups of sets.

A maximum of 50 groups can be created, each having up to 99 sets. Each set can be up to 9999 copies.

The machine can be configured to specify how many copies (sheets) per set, then how many sets are to be created for each group.

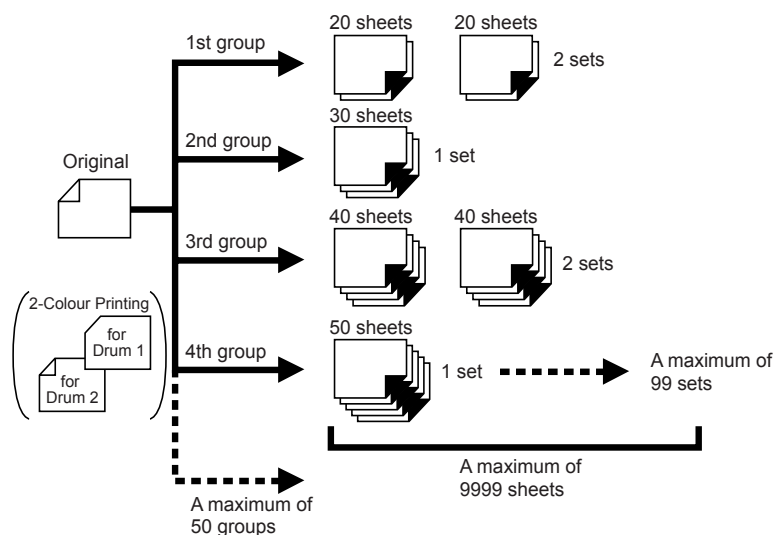

Important!:

- If you are printing multiple originals with “Single Page” programme, place multiple originals (up to 50) in the ADF unit (option), and as long as “Auto Process” is “ON”, the set programme can be repeated and all the originals are divided into groups to print the various number of copies specified.


◆ Multi-Page Mode

For multiple originals (multiple copies for 1-Colour printing, multiple groups of 2 originals for 2-Colour printing), a different number of copies are printed for each original.


From a single original, up to 9999 copies can be made.

Each original can reproduce a pre-assigned number of sheets (up to 20 originals).

1-Colour Printing

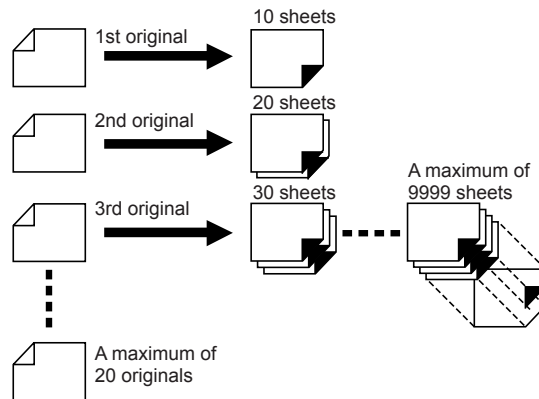

2-Colour Printing with 2 Originals

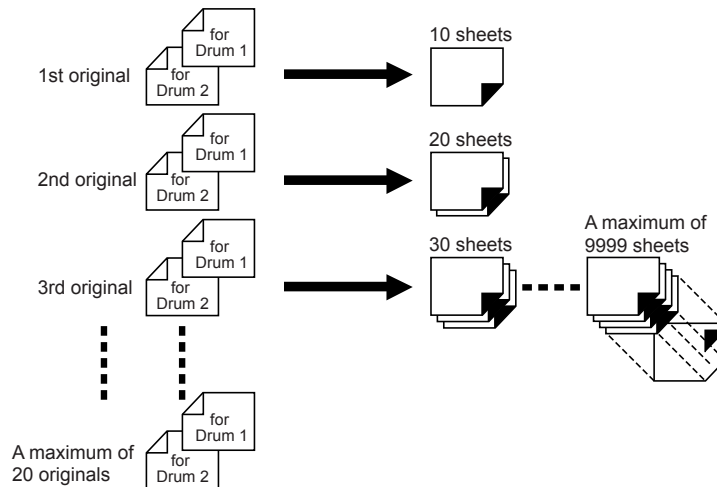

Note:

- This function cannot be used for printing from a computer data (direct print).
- “Programme” may be used in conjunction with the “Easy 2Colour” in 2-Colour printing.


◆ Combination (only possible with 2-Colour printing)

A 2-Colour original is used to make a master on Drum 1 and Drum 2. The 1-Colour print for just Drum 1 is grouped in the same way as for “Single Page” programme and prints. The 2-Colour print object is inserted based upon the copy number set as the group separation.

The “Combination” programme is useful for printing material that has “Questions” and “Answers”.

For example, it can be used to print multiple test questions for students in one colour and then print one copy of the teacher’s answer key in red.

Up to 50 groups can be set, and each group can have a maximum of 9999 copies.

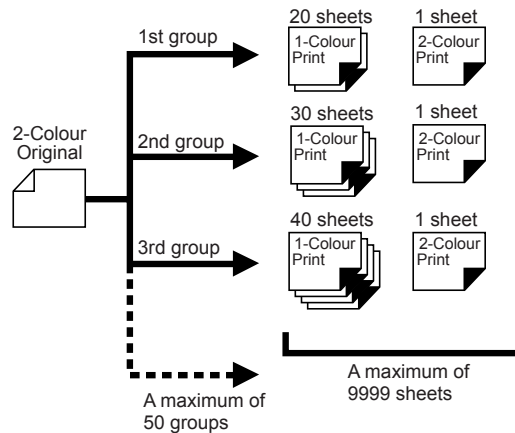

Important!:

- The “Combination” programme is a function for setting the number of print copies. It is not intended to separate colours into red and black. Use “Easy 2Colour” for this. (p.136)

How to Programme Print


There are two ways to print in sets using “Programme” printing feature.

- Programme, then print (without saving the settings)
- Retrieve a saved programme, then print (when programme is registered)

Tip:

Choose from the following actions on the Print Basic Screen.

Touch a button to proceed.

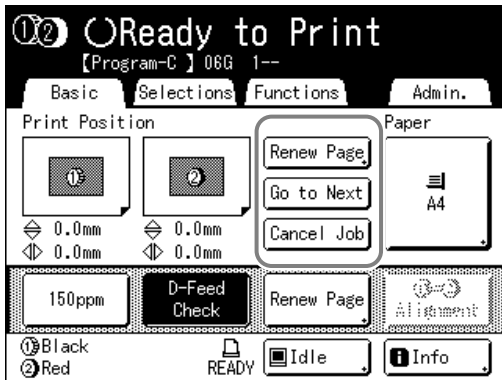

[Renew Page]: Creates a master from the last Master-Making data.

[Next Page] or **[Go to Next]:** Stops current print job, skips to the next original, set or group.

[Cancel Job]: Cancels execution of the Programme.

Note:


- The Job Separator (option) is useful for Programmed Printing.
The Job Separator releases a piece of tape after each set or original document, thereby automatically separating sets or groups. It eliminates the need to manually remove a stack of sheets or insert a marker between sets. Remember to activate “Job Separation” in the Functions screen when printing with the Job Separator. You must remove each stack from the Paper Receiving Tray, or insert a marker during the pause if not using the Job Separator.

Setting Up for Programmed Printing


 
Note:

- Both the Touch Screen and Print Quantity Keys (and related keys) may be used for this operation.


1 Press the key.

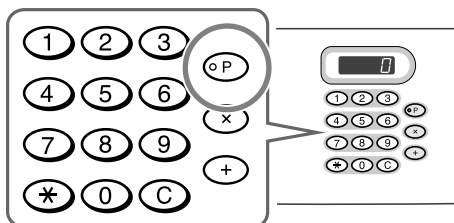

Note:

- Press the  key and skip to step 3) of the "Single Page Mode". Press the  key and skip to step 3) of the "Multi-Page Mode".
- Alternatively, from the Master Making Basic Screen, touch [Functions] then [Programme] to display the Programme Type screen.


2 Touch the button of the programme to set.

 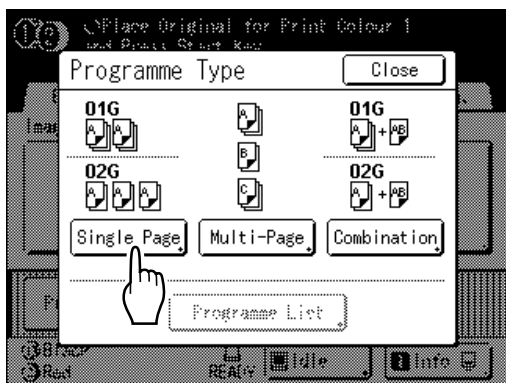





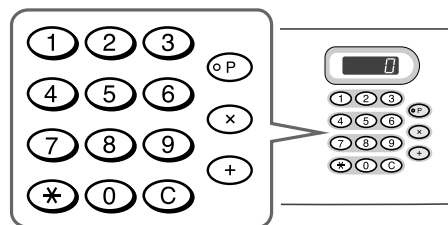
The input screen for that programme displays.

3 Enter the numbers using the Print Quantity Keys.

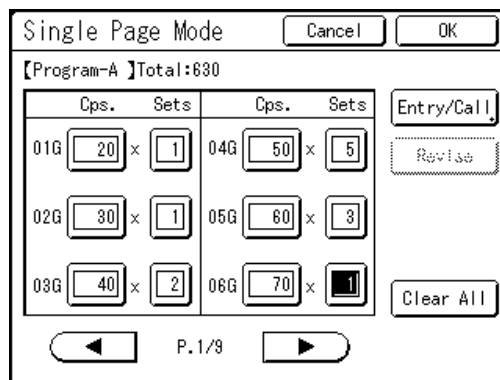◆ For Single Page Mode




- Enter the number of copies using the Print Quantity Keys.
- Press the  key or the  key.
- Enter the number of sets (in the group) using the Print Quantity Keys.
- Press the  key or the  key.



To programme more than one group, repeat steps 1) - 4).

Note:

- Touch the desired input box. You can input the page/set number with the Print Quantity Keys.
- To cancel or change a number, press the  key and enter again.
- To clear all (number of copies and number of sets), touch [Clear All].
- The total number of all copies to be printed is shown on the top of the screen.

Important!:

- To save the current Programmed Printing setting, touch **[Entry/Call]**. Once **[OK]** is touched, the setting cannot be saved. See "Saving Programmes" (p.129) for further information.

◆ For Multi-Page Mode

- Enter the number of copies using the Print Quantity Keys.
- Press the **(+)** key or the **(*)** key.
- Repeat steps 1) and 2) above to enter the number of copies for each original.

Note:

- Touch the desired input box. You can input the page/set number with the Print Quantity Keys.
- To cancel or change a number, press the **(C)** key and enter again.
- To clear all (number of copies and number of sets), touch **[Clear All]**.
- The total number of all copies to be printed is shown on the top of the screen.

Important!:

- To save the current Programmed Printing setting, touch **[Entry/Call]**. Once **[OK]** is touched, the setting cannot be saved. See "Saving Programmes" (p.129) for further information.

◆ For Combination Print

- Enter the number of copies using the Print Quantity Keys.

Note:



- If you specify "Combination" programme when using direct print to print a job with multiple pages, the first page stops prior to printing. Use the control panel to input the number of print copies to print. The remaining pages are handled as follows:


When "Auto Print" is set to "Semi-Auto(Master)" or "Manual" (Auto Process OFF):

Subsequent pages also stop prior to printing. Press the **(C)** key after confirming the settings on display.




When "Auto Print" is set to "Semi-Auto(Print)" or "Full Auto" (ON):
Printing does not stop for subsequent pages. Pages print at the setting specified for the first page.

- When using 2-Colour printing to print two or more copies, touch **[1] [2] Print]**. This operation is not required if you are only printing one 2-Colour copy.

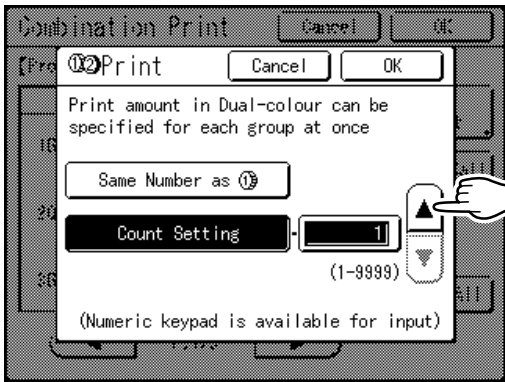- 3) Touch  or  to specify the number of 2-Colour copies to print.



 Note:

- The Print Quantity Keys can also be used to enter a value.
- The number of copies assigned for “  Print” will apply to all groups and cannot be changed from group to group.
- If you are printing the same number of 2-Colour copies as 1-Colour copies, touch **[Same Number as ]**.


- 4) Touch **[OK]** and the Print screen closes.
 5) Repeat steps 1) and 4) above to enter the number of copies for each original.

Important!:

- To save the current Programmed Printing setting, touch **[Entry/Call]**.
 Once **[OK]** is touched, the setting cannot be saved.
 See “Saving Programmes” (p.129) for further information.

Returns to the original screen. Ready to print in accordance with the programme.

Note:

- Alternatively, after entering number of copies or sets, press the  key to start printing without touching **[OK]**.

4 Touch **[OK]**.

The following screen appears.



Saving Programmes


Store frequently-used Programme settings for later retrieval and printing.

A total of 12 settings (Single Page Mode, Multi-Page Mode Mode or Combination Print) can be stored.


1 Create and enter a Programmed Printing settings.

Follow steps 1-3 in "Setting Up for Programmed Printing" (p.126).

2 Touch [Entry/Call] on the Programme screen.

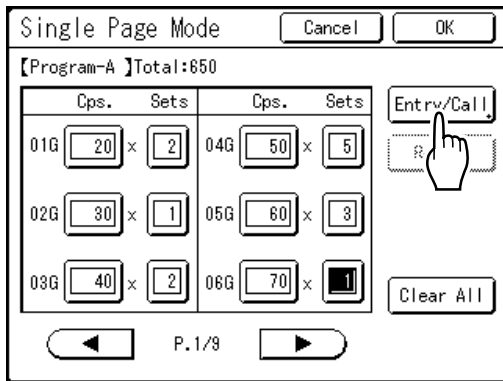

3 Touch an unused button.

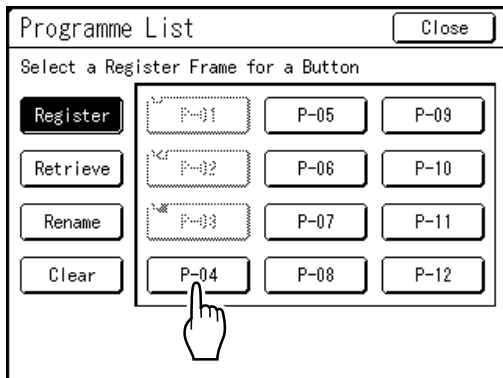


Touch a button displayed with solid lines. Greyed-out buttons are not available (already associated with another programme).

4 Touch [OK].



The following screen appears.

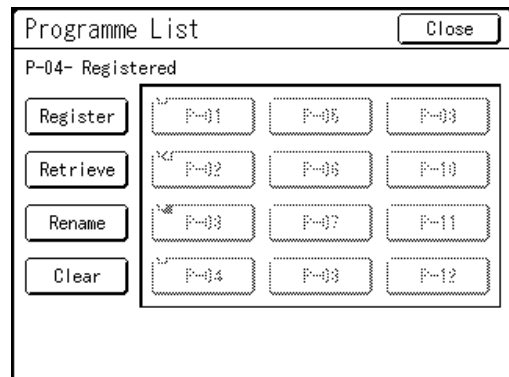

Returns to the Programme List screen. The Programme is stored.

Each Programme can be named for your convenience. See step 3 in "Renaming a Programme" (p.131).

Note:

- After saving the Programme, touch **[Close]** on the Programme List screen to return to the Programme screen.

Touch **[OK]** on the Programme screen to print from a saved Programme.

The screenshot shows a screen titled "Single Page Mode" with a "Cancel" button and an "OK" button. Below the title, it displays "[P-04]" and "Total:650". The main area contains a table with two columns, each with sub-columns for "Cps." and "Sets". The table lists six rows of data, each with a group identifier (01G to 06G), a value in the "Cps." column, and a value in the "Sets" column. To the right of the table are buttons for "Entr.", "Rev", and "Clear All". At the bottom, there are navigation arrows and the text "P.1/9".

	Cps.	Sets		Cps.	Sets
01G	20	2	04G	50	5
02G	30	1	05G	60	3
03G	40	2	06G	70	1

Buttons: Entr., Rev, Clear All

Navigation: P.1/9

Renaming a Programme

Programme names can be changed to better describe their usage or purpose.


1 Touch [Programme] on the Functions screen.




Note:

- If [Programme] is already highlighted, touching it will again display the Programme screen, and not the Rename a Programme screen. Touch [Cancel Job] then [OK] to return to Functions screen. Touch [Programme] again.

2 Touch [Programme List].

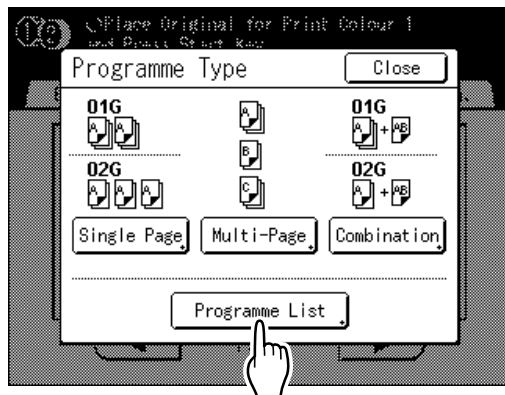


3 Touch [Rename].

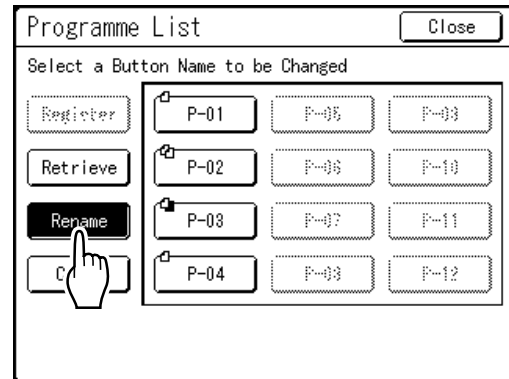

Note:


- Each Programme button has an icon on top left. indicates Single Page Mode Programme, indicates Multi-Page Mode Programme and indicates Combination Print.


4 Select a programme to rename.

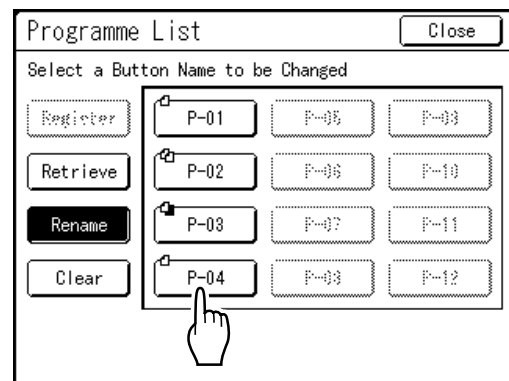

5 Touch to delete the current name

Note:

- You can also press the  key to delete.

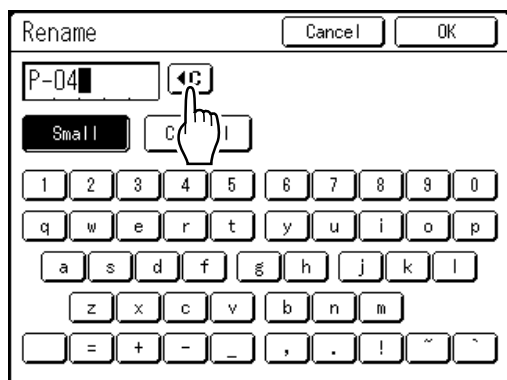


6 Touch character buttons to enter a new name.


Change capitalization by selecting [Small] or [Capital] button.

p.132

7 When entered, touch [OK].

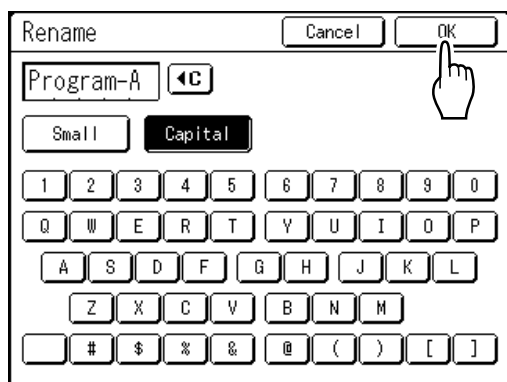


The following screen appears.

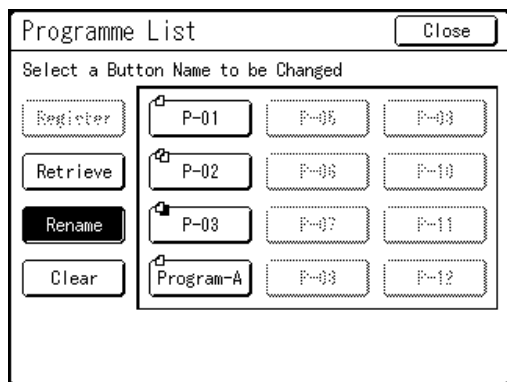


Returns to the Programme List screen. The programme is renamed.

Tip: Rename Screen


◆ Small

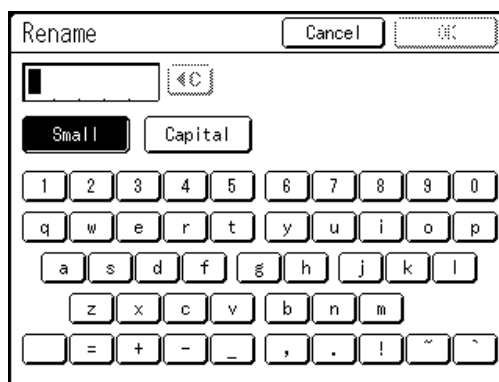

◆ Capital

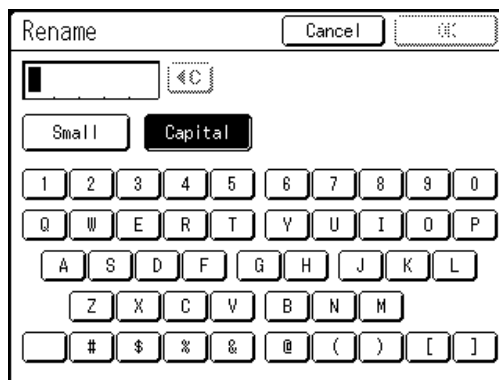


Note:

 - You can enter up to 10 characters.
- Print Quantity Keys may also be used for entering numbers.
-  button clears previously saved or current entry. Touch to clear one character at a time.

Clearing Programmes


- 1 Press the  key.**

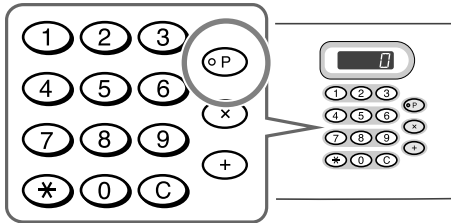


Note:

- Alternatively, from the Master Making Basic Screen, touch **[Functions]** then **[Programme]** to display the Programme Type screen.


- 2 Touch [Programme List].**

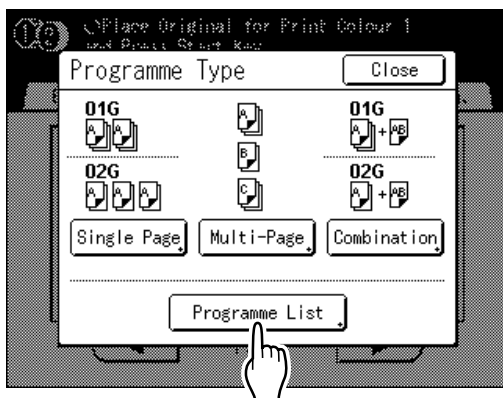

- 3 Touch [Clear].**

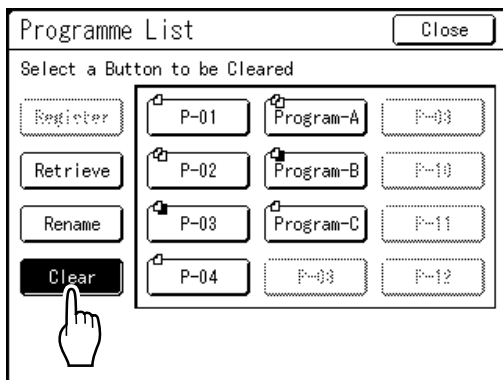


- 4 Select a programme to delete.**

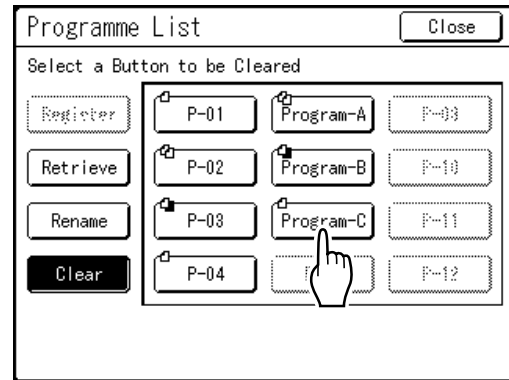

- 5 Touch [OK].**



The following screen appears.

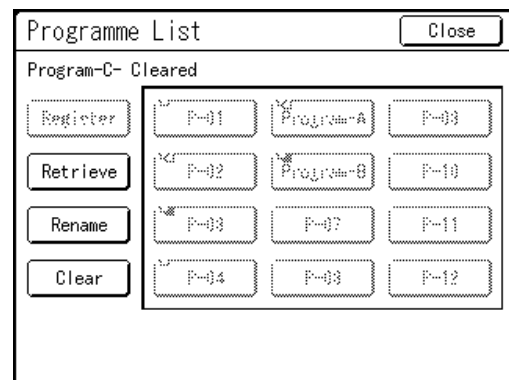


Returns to the Programme List screen. The programme is deleted.

Retrieving a Programme

Retrieve a stored programme and modify its settings.


1 Press the key.

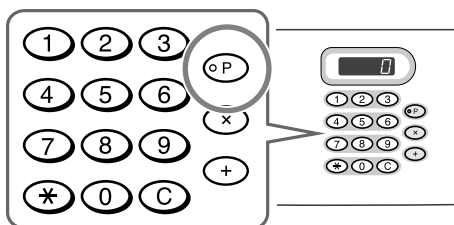


Note:

- Alternatively, from the Master Making Basic Screen, touch **[Functions]** then **[Programme]** to display the Programme Type screen.

2 Touch **[Programme List]**.

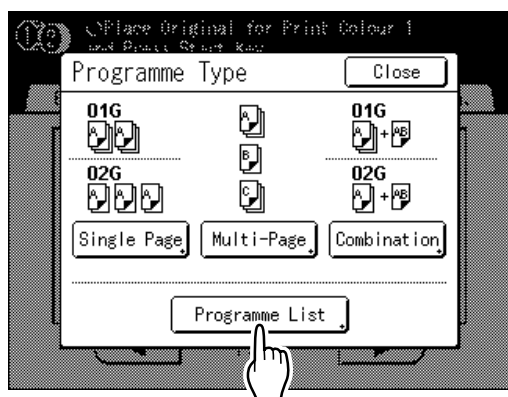


3 Touch a button to select a Programme to retrieve.

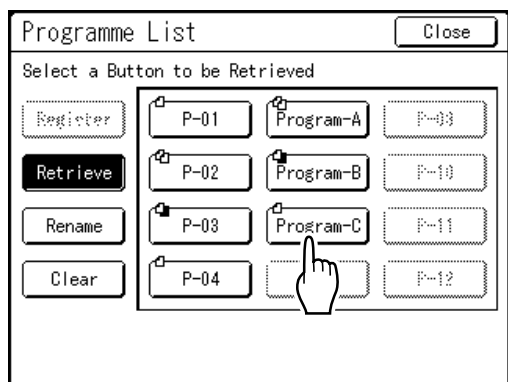


Note:

- When printing with 1-Colour, the "Combination" programme cannot be retrieved.

4 Touch **[OK]**.

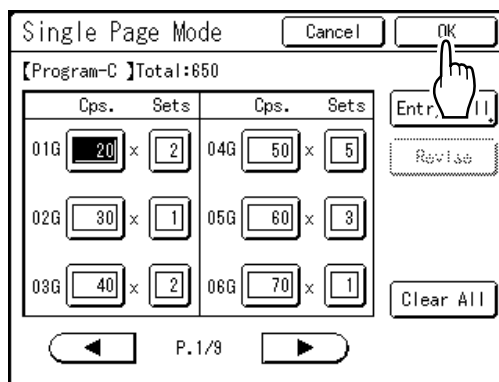

The following screen appears.

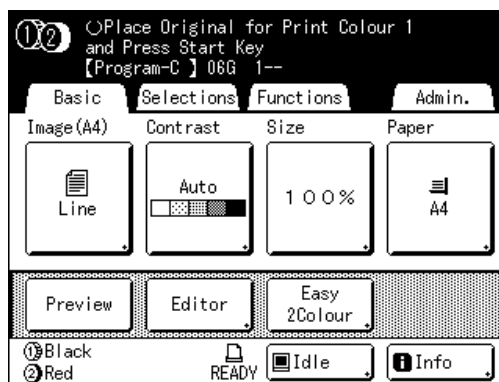

Returns to the original screen. Ready to print using the retrieved programme.

Making changes to Stored Programmes

1 Retrieve a programme to modify.

Follow steps 1 and 3 in “Retrieving a Programme” (p.134).


2 Make changes to the Programme.

Modify number of copies or sets in the current screen.

Note:

- See “Setting Up for Programmed Printing” (p.126) for details on how to set up a programme.


3 Touch [Revise].

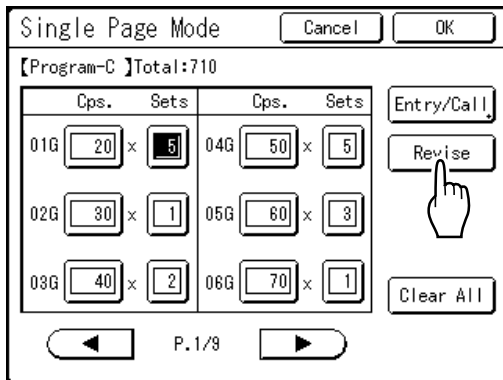

4 Touch [OK].



The following screen appears.

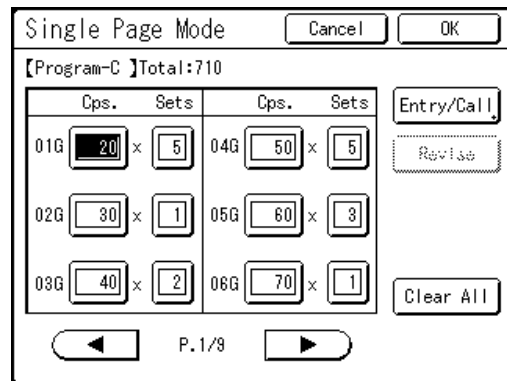

Returns to the Programme screen. Programme settings are updated (overwritten).

Programming Example

Printing questions and answers divided by class

This example uses “Easy 2Colour” and “Programme” together.

The original is a sheet of paper with test questions (black, 1 colour) with the answers written in using a recommended pen. 5 groups are printed using the following conditions.

- For use by the student, by each group (class): Group 1: 50 copies, Group 2: 45 copies, Group 3: 55 copies, Group 4: 52 copies, Group 5: 48 copies. The printed document consists of the one-colour problem sheet.
- 2 copies of the answers written in with the questions (2-Colour Print) are inserted between each set.


The colours are separated using “Easy 2Colour” — “Hand Writing--1” and the job prints as a combination.

1 Place an original and load paper.

“2-Colour Printing with 1 Original [Easy 2Colour]”
(p.44)

2 Setting [Hand Writing--1].


1) Touch [Functions].

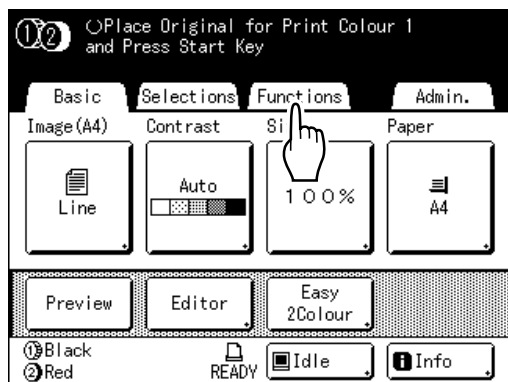


2) Touch [Easy 2Colour].




3) Touch [Hand Writing--1].

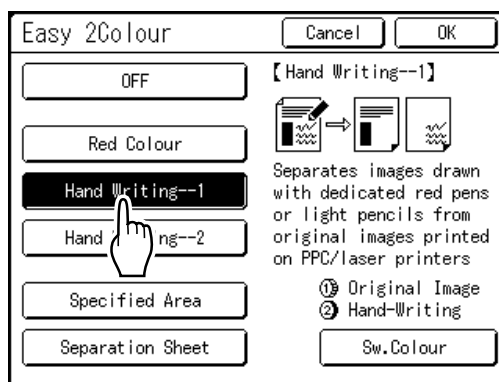

4) Touch [OK].

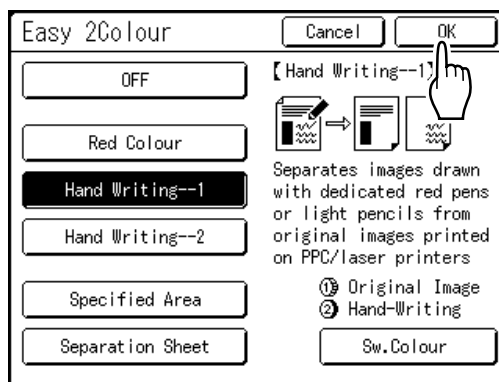


Returns to the Functions screen.

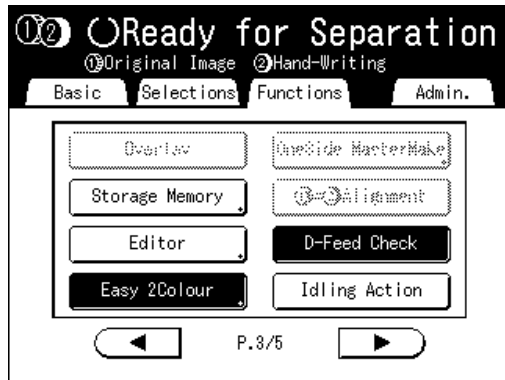

3 Setting [Combination].


- 1) Press the **[P]** key.

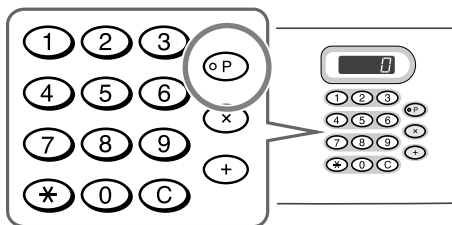


Note:

- Alternatively, from the Master Making Basic Screen, touch **[Functions]** then **[Programme]** to display the Programme Type screen.

- 2) Touch **[Combination]**.

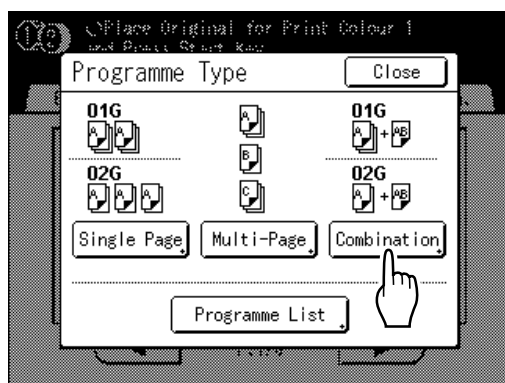


- 3) Input the number of test copies for each 5 groups into the 5 input boxes (1G to 5G)
Touch the input box and use the Print Quantity Keys to enter a value.

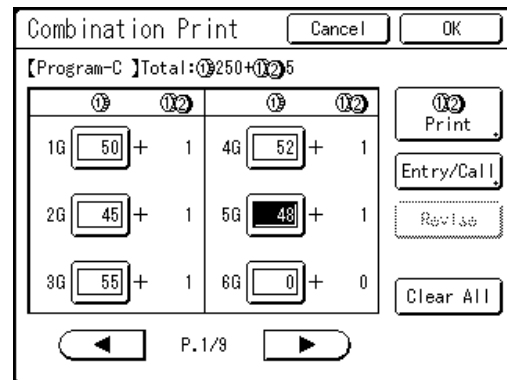


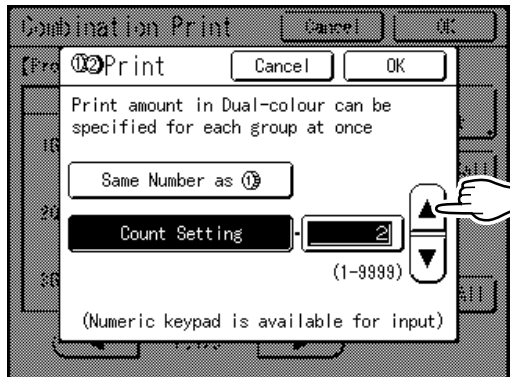
Note:

- The screen above is displayed if a computer is used to send original data. The following steps are performed from the Control Panel.

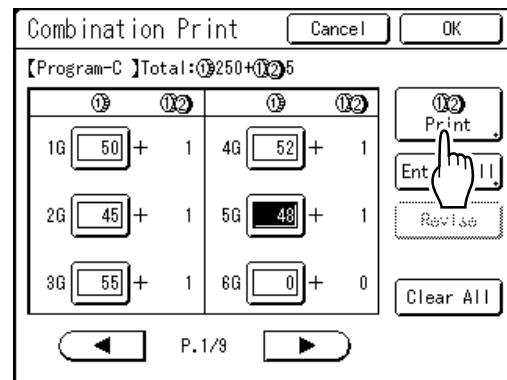

- 4) Touch **[Print]**.



- 5) Touch  and specify "2" (the number of copies for the answer key to each group)



The Print Quantity Keys can also be used to enter a value.


- 6) Touch [OK] and the   Print screen closes.
The screen returns to the Combination Print screen.

Note:


- The settings made here are cleared if "Programme" is used. If you plan on using the same settings on a regular basis, touch [Entry/Call] to save the settings for later use.


See p.129 for details.

- 7) Touch [OK].
Returns to the original screen. Ready to print in accordance with the programme.


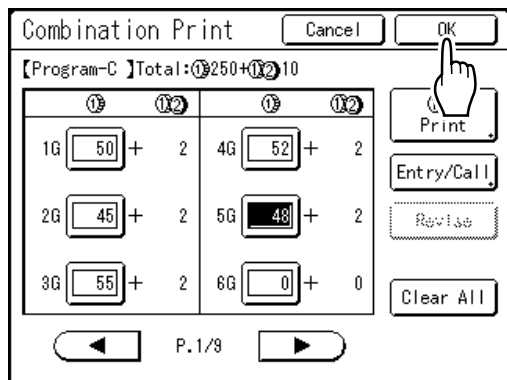



4 Start the printing process.

- 1) Press the  key.

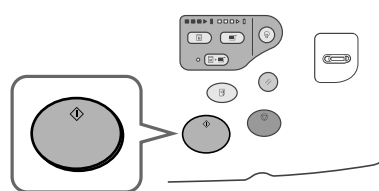


The print job is scanned, separated, and a master created in accordance with "Easy 2Colour" settings.

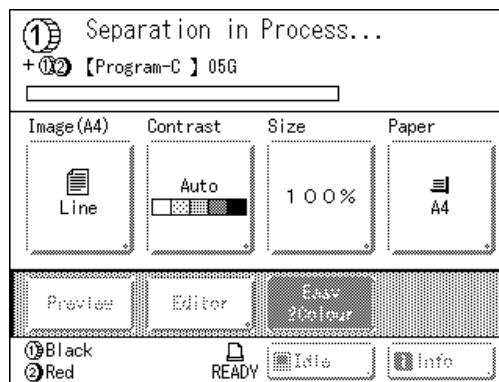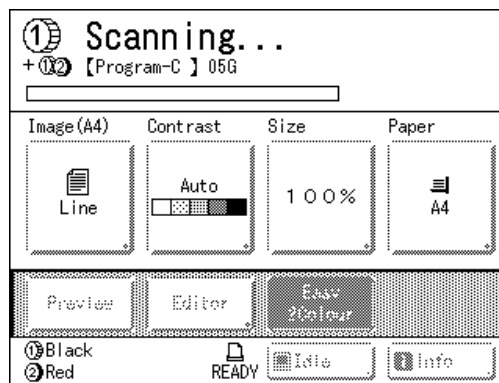


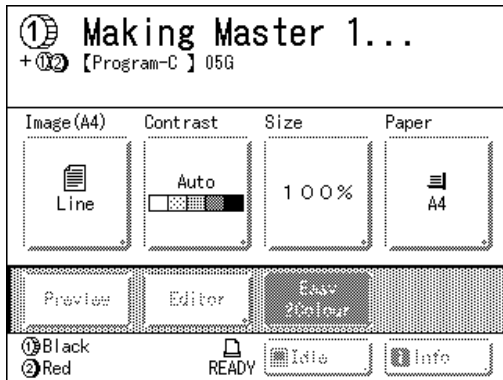

Once the master is made on Drum 1, one proof copy will be printed from Drum 1 only. A master will then be made on Drum 2.

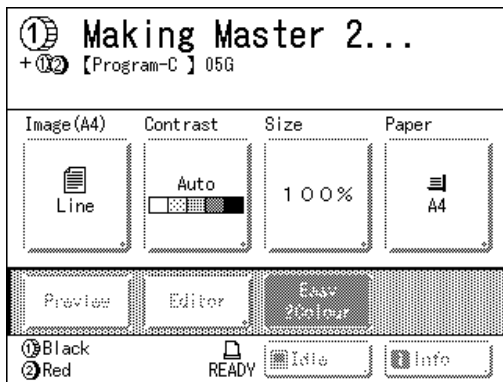


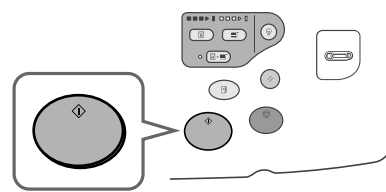
Once the master is made on Drum 2, a single 2-colour proof copy will be printed. After a proof copy has been printed, the Print Basic Screen appears.

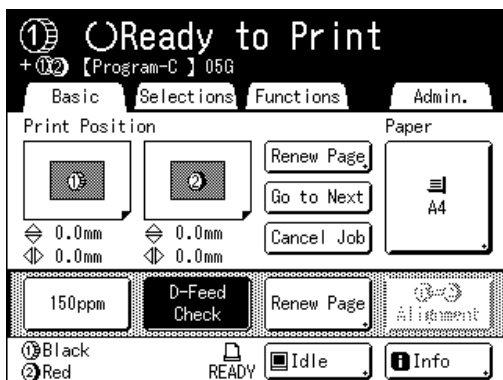


- 2) Check the proof copy result.
Check the proof copy; e.g., print position and density.
If necessary, change print position and density.

- Print Position (p.113)
- Print Density (p.112)
- Interval Printing (p.118)
- Eject Wing Control (p.120)

- 3) Press the  key.



Prints in accordance with "Combination" programme settings.

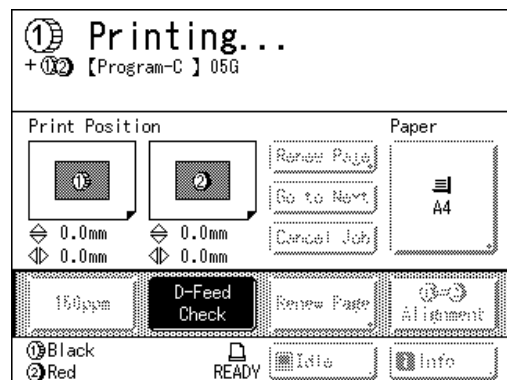

Using Job Memory Functions [Job Memory]

Save the settings of the last print job into Job Memory. Simply retrieve those Job Memory settings when doing a similar print job. Up to 10 jobs can be saved.

The following attributes can be saved to Job Memory.

◆ 2-Colour/1-Colour Printing (MasterMaking/Print)

Image	Multi-Up Print	Paper Feed Adj.	Easy 2Colour
Dot Process	Top Margin	D-Feed Check	Auto Page Renewal
Contrast	Contrast Adj	Eject Wing Control	Air Blow
Ink Saving	Tone Curve	Auto Process	Separation Fan
Size	Side Margin	Interval	
Margin+	Print Quantity	ADF Semi-Auto*	
Paper Size	Print Speed	Sorter*	
Max. Scan	Print Density	Job Separation*	
Book Shadow	Print Position	Stamp*	

*: Available with optional device


◆ Link Mode (available with Linked Printer)

Image	Feed Tray	Print Quantity	Punch*
Dot Process	Book Shadow	Duplex*	Mailbox*
Contrast	Top Margin	Printer Collate*	Face-up Tray*
Size	Contrast Adj	Offset Pages*	Output Reversal*
Margin+	Tone Curve	Staple*	

*: Available with optional device

Storing Job Memory


- 1 Set various settings for a print job.
- 2 Touch [Functions] on the Master Making Basic Screen.

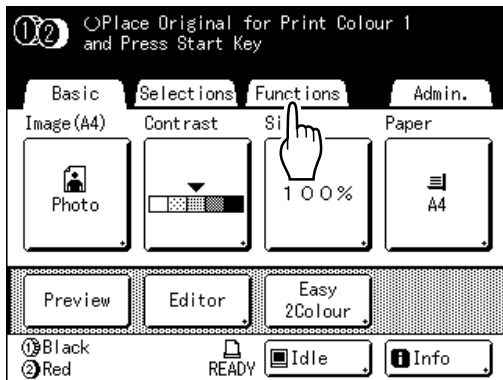


Note:

- Job Memory screen can also be invoked by pressing the key on the Print Quantity Keys. Skip to step 4.

- 3 Touch [Job Memory].

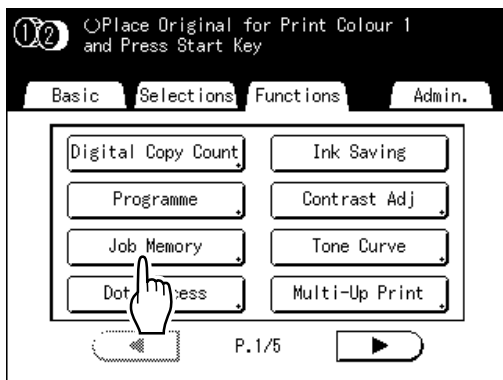

- 4 Touch an unused button.

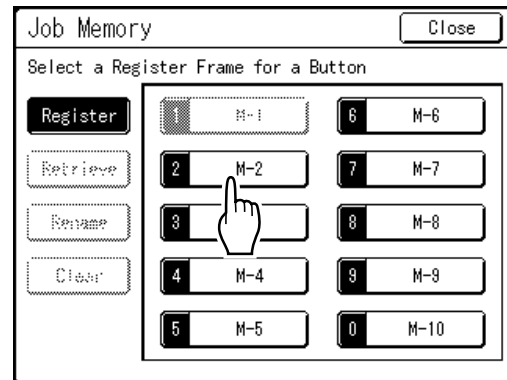


A button in solid lines is available. Buttons already associated with another job setting are greyed out.

Note:

- If you pressed the key to open the screen, first touch [Register] then select an available button.

- 5 Confirm settings.

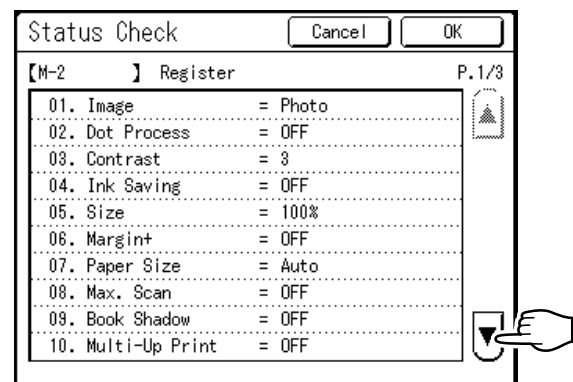


Touch and scroll down to check all items.


Note:

- To change a setting, touch [Cancel] and start over again. (Return to step 1.)

6 Touch [OK].

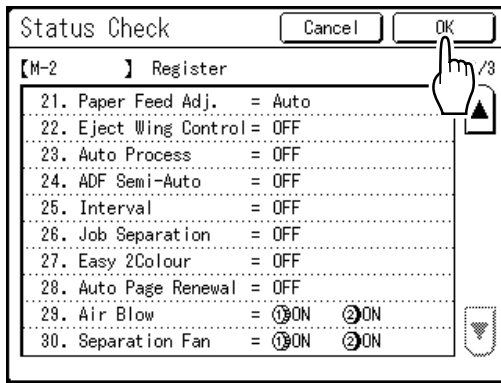

The following screen appears.

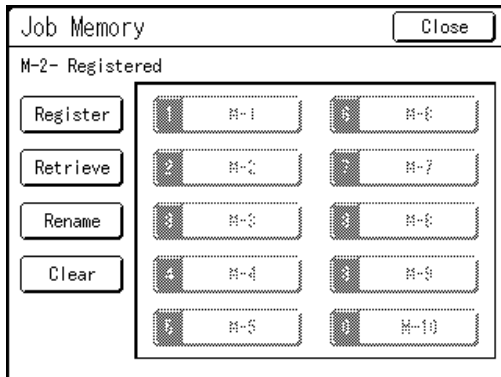


Returns to the Job Memory screen. Settings are updated.

Each job memory can be named for your convenience. See step 3 in “Renaming a Job Memory” (p.143).

Renaming a Job Memory


1 Touch [Functions] on the Master Making Basic Screen.

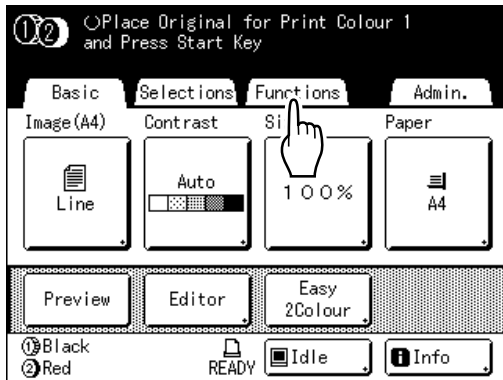


Note:

- Job Memory screen can also be invoked by pressing the key on the Print Quantity Keys. Skip to step 4.


2 Touch [Job Memory].

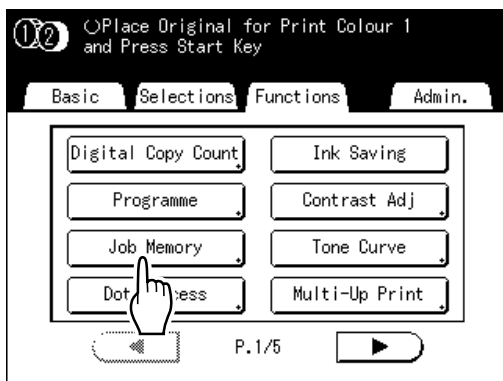

3 Touch [Rename].

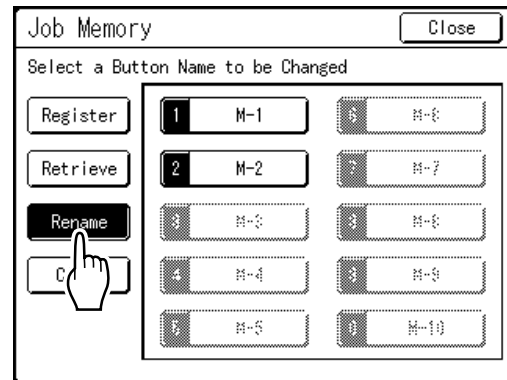


4 Select a Job Memory to rename.

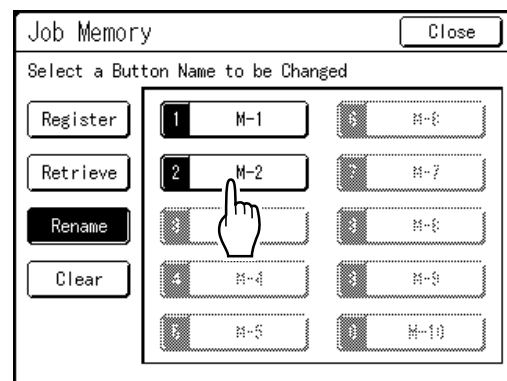

Greyed out buttons are not available (no job memory has been registered yet).

5 Touch to delete the current name.

You can also press the key to delete.

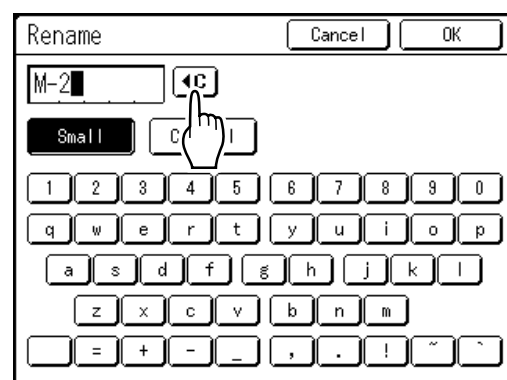


6 Touch character buttons to enter a new name.

Change capitalization by selecting **[Small]** or **[Capital]** button.


☞ p.132

7 When entered, touch **[OK]**.

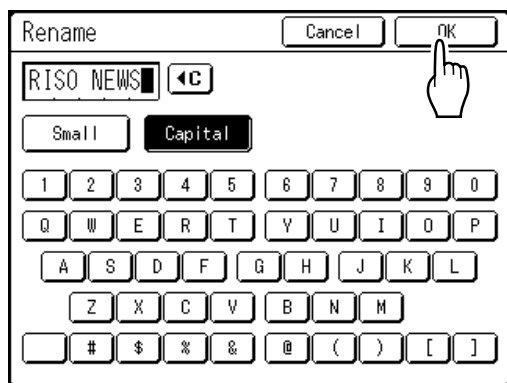

Returns to the Job Memory screen. The name is updated.

8 Touch **[Close]**.

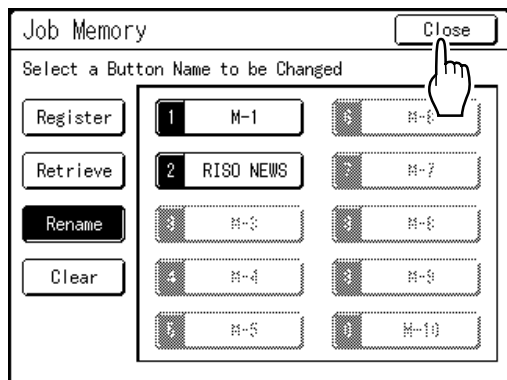

The following screen appears.




Returns to the Functions screen.

Retrieving a Job Memory and Printing

1 Place an original and load paper.

When 2-Colour printing with 2 originals [p.38](#)
 When 2-Colour printing (Easy 2Colour) with 1 original [p.44](#)
 When printing with 1 colour [p.57](#)


2 Touch [Functions] on the Master Making Basic Screen.

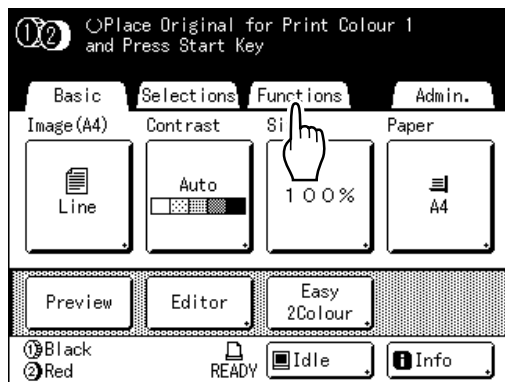


Note:

- Job Memory screen can also be invoked by pressing the key on the Print Quantity Keys. Skip to step 4.

3 Touch [Job Memory].

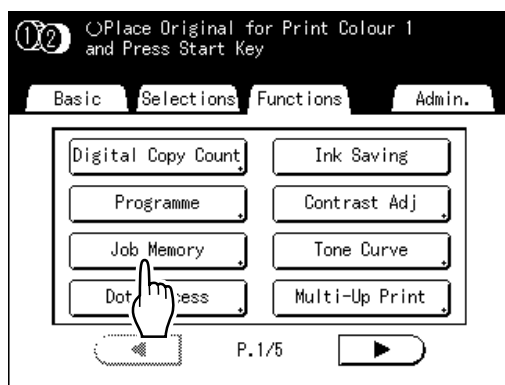


4 Touch [Retrieve].

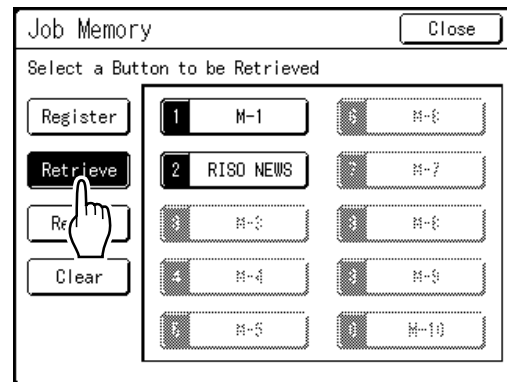

Greyed out buttons are not available (associated with a job setting).


5 Select a Job Memory to retrieve.

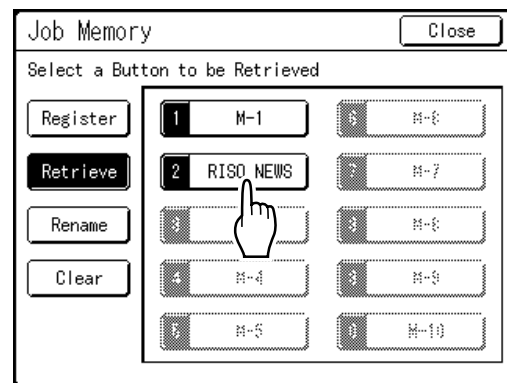

Note:

- A job setting can also be retrieved using the Print Quantity Keys.
 M-1 to 9: to
 M-10:

6 Confirm the settings and touch [OK].

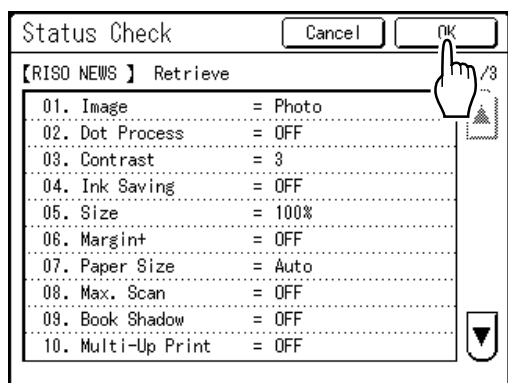


The following screen appears.



Returns to the Functions screen. Ready to print using the retrieved job settings.


 
 
7 Press the key.

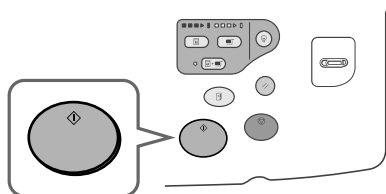


The master is made and copies printed in accordance with the Job Memory setting.

Tip: Quick Retrieval

A job setting can be retrieved via hardware keys without touching the Touch Screen.


For example, to retrieve and print job M-2, press the , ,  key in that order. M-2 is retrieved and starts the master-making process.

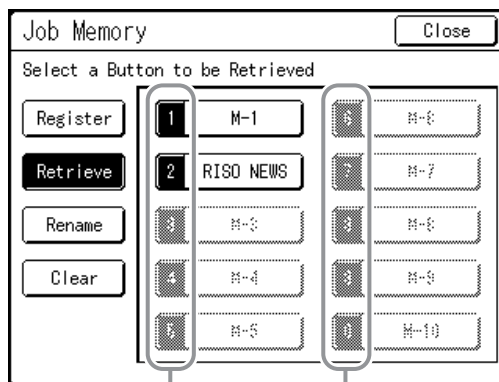

Registered Number

Clearing Job Memory


1 Touch [Functions] on the Master Making Basic Screen.

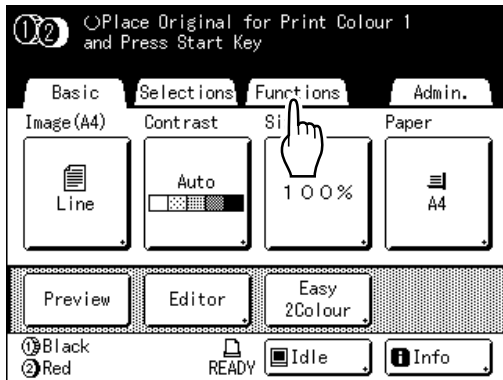


Note:

- Job Memory screen can also be invoked by pressing the key on the Print Quantity Keys. Skip to step 3.


2 Touch [Job Memory].

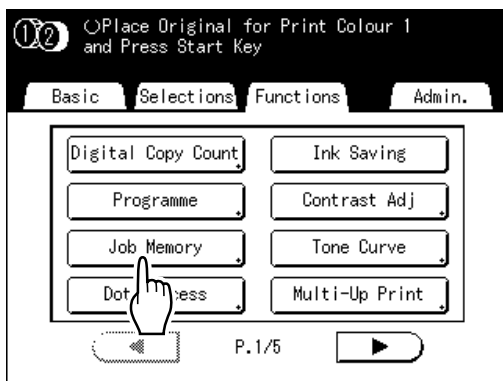

3 Touch [Clear].

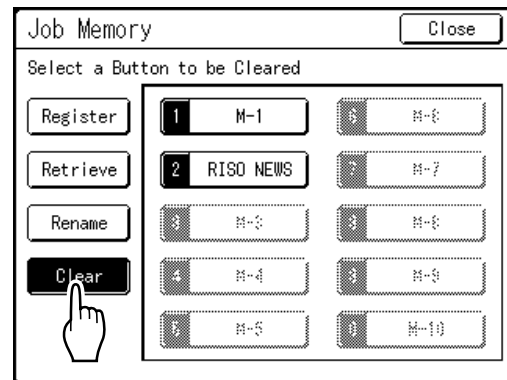


4 Select a Job Memory to delete.

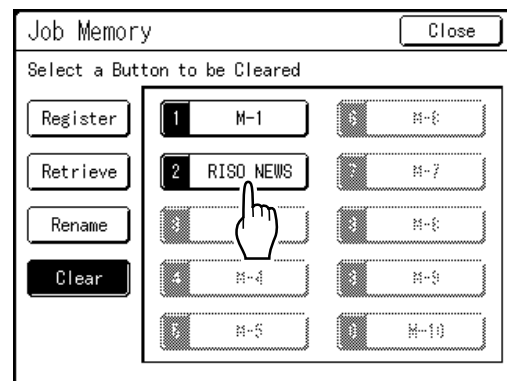


Important!:

- Make sure it is the job setting you want to delete.
- This operation cannot be undone.
- Once deleted, it cannot be restored.


5 Touch [OK].

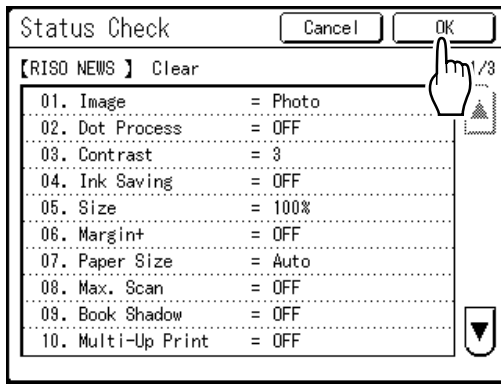

6 Touch [Close].

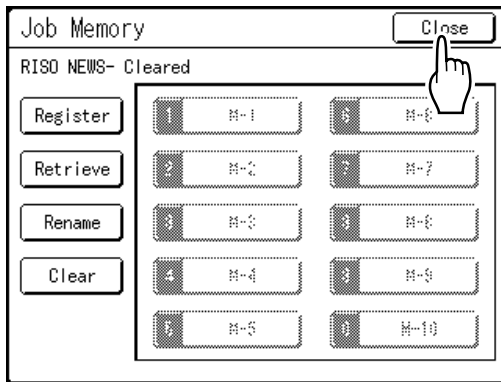

The following screen appears.

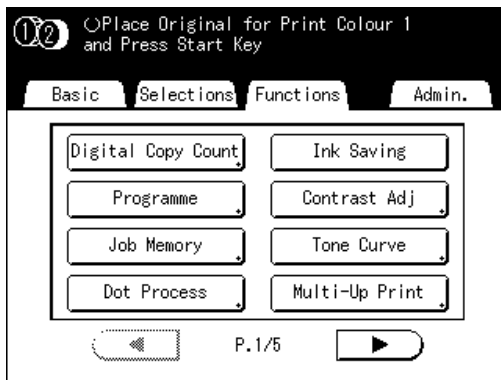

Returns to the Functions screen.

Extending the Reserve Period [Reservation]


This function is useful when the machine is connected to a computer. When the machine is inactive for a certain period of time, it determines that the current job is completed, even if the actual printing is still under way. If another person accidentally initiates another job from the computer, this will cause a new master to be made, discarding the current one.

By extending "Reserve Period", such interruption can be prevented. We recommend that you activate the "Reservation" setting when temporarily pausing a job to prevent interruption.


Note:

- Select from 5, 10, or 30 minutes as the "Reservation" period on the Admin. screen. The factory default is 5 minutes.
p.160
- The following operations do not count towards reservation period.
 - When the machine is operating (making a master, printing, confidential action, idling, etc.)
 - When the Job Separator (option) is operating
 - When Control Panel buttons are being entered
- Auto Sleep and Auto Power-OFF will be disabled during the reservation period.
Auto Sleep/Auto Power-OFF: timer re-activates after the reservation period is up.
Power-OFF Schedule: Will not shut off until next day on time.
p.161

1 Touch [Functions] on the Basic Screen.

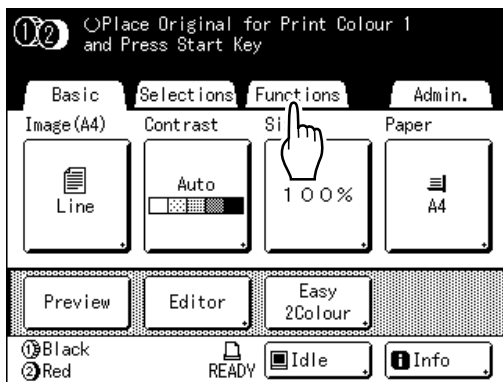

2 Touch [Reservation].

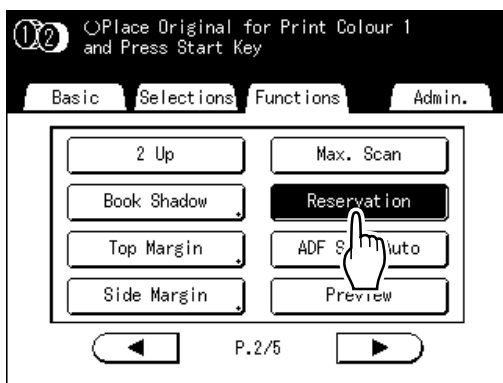

Reservation period is extended.

Idling Action [Idling Action]

When the machine has not been used for an extended period of time, or when the Print Drum is replaced, the first several copies may be printed too light. By performing “Idling Action” before making a master, high print quality may be instantly achieved and reduce paper waste.

Important!:

- “Idling Action” is effective only in conjunction with the master-making process. When performing print processes only, “Idling Action” will have no effect.

Note:

- If both Drum 1 and Drum 2 are set, you can select “Idling Action” for either.
- If you are only using Drum 1 or Drum 2, the “Idling Action” is only applied to the drum that is set.
- To perform “Idling Action” automatically when making a master after a specified period of time since the last print job, set “Auto Idling” on the Admin. screen. Idling Rotation can be set from 1 to 3.

➡ p.161

1 Touch [Functions] on the Master Making Basic Screen.




2 Touch [Idling Action].




① appears on screen.


3 Press the key.

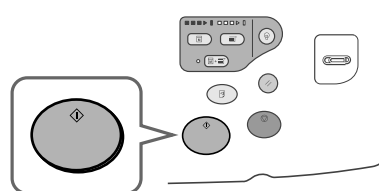

Note:

- Be sure to set the original in place and confirm settings before pressing the  key.

The following screen appears.

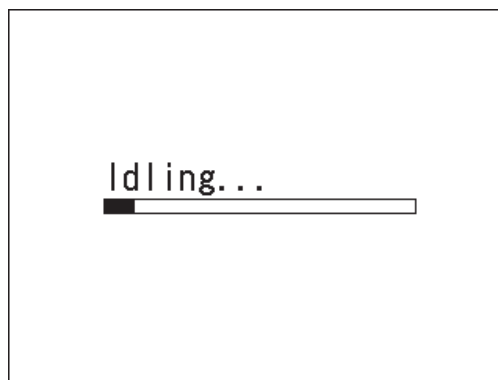

After “Idling Action” has been finished, the master-making process is started.

Note:

- If ① displays in the screen message area, this indicates that the “Auto Idling” time has elapsed. If you make a master in this status, “Idling Action” is executed.



Protecting Confidential Documents

[Confidential]

Master left on the Print Drum is capable of printing even after the print job is completed. By using the “Confidential” feature, the master on the Print Drum is discarded, thus preventing unauthorised reproduction of confidential documents such as academic tests or customer lists.


Note:

- When “Confidential” is performed, the discarded master may no longer be reproduced, and “Renew Page” feature is disabled.
- If “Idling Action” is set to “ON”, “Idling Action” is executed using a confidential master (use this function when not using the drum for extended periods of time).


1 Make sure printing is completed.

Confirm that everything is printed.

2 Touch [Functions] on the Print Basic Screen.

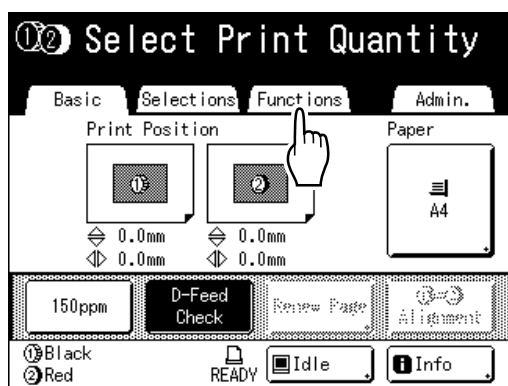

3 Touch [Confidential].

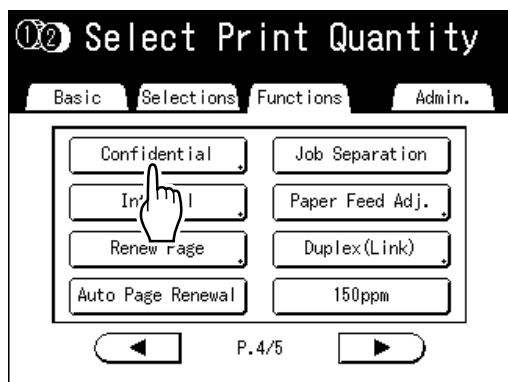


The display screen for 2-Colour and 1-Colour printing are different.

◆ For 2-Colour Printing:


The Drum selection screen appears.

Touch the button of the drum whose master you want to discard.

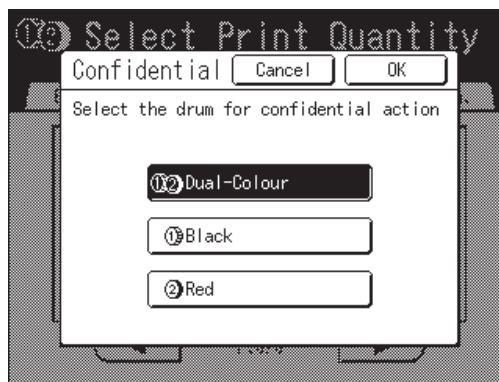


◆ For 1-Colour Printing:


The following screen appears.

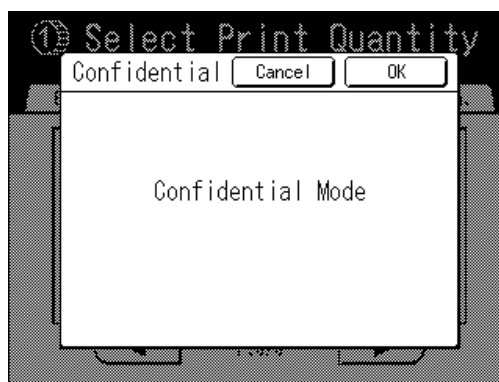

4 Touch [OK].

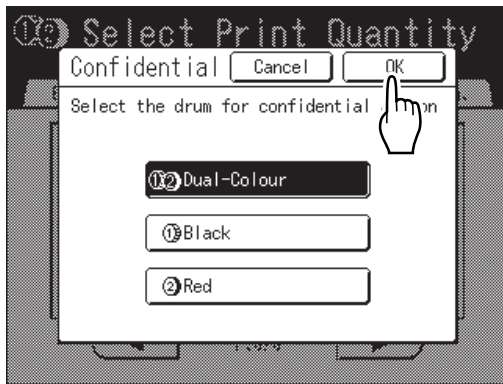

The following screen appears.

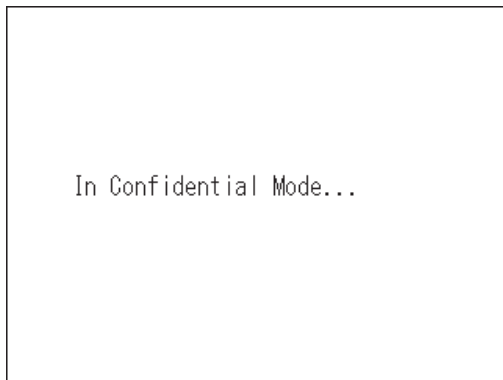

The current master is discarded, and a new master is set on the Print Drum.

Showing Usage Status

[Digital Copy Count]

The machine can record and display the following information:

A4 and Under: Total number of copies A4-sized and smaller that have been printed.

Above A4: Total number of copies larger than A4 that have been printed.

Master Count: The total number of masters made by the machine.

Print Drum 1 (2) Meter: Total number of copies that have been printed with the current drum.

Job Count: Start and stop as needed.

For example, to keep track of the number of prints made in a day, set “Job Count” to 0 in the morning, and check the counter at the end of the work day to get the count.


Note:

- When using more than one Print Drum, install the Print Drum for which you need information before displaying the Digital Copy Count screen.

1 Touch [Functions] on the Master Making Basic Screen.



2 Touch [Digital Copy Count].

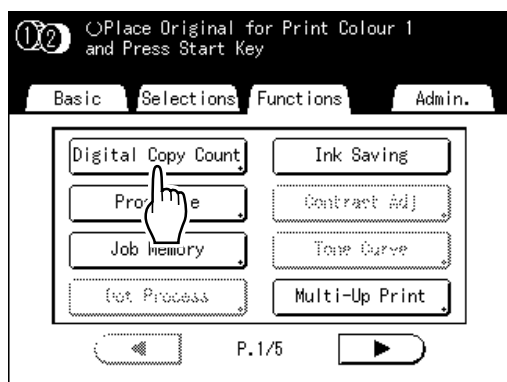

3 Review counts.

Digital Copy Count			Close
1Colour	A4 and Under	12,500,000	
	Above A4	7,500,000	
2Colour	A4 and Under	7,500,000	
	Above A4	2,500,000	
Total		30,000,000	
Master Count		5,700	
Print Drum 1 Meter		600,000	
Print Drum 2 Meter		300,000	
Job Count		1,500	◀C

Note:

- Using the “Job Count”
 - 1) Touch **◀C** to set the counter to 0.
 - 2) Touch **[Close]** to close the Digital Copy Count screen. Operate the machine as normal.
 - 3) To display and review the Job Count, follow steps 1 and 2.

4 Touch [Close] to close the window.

Returns to the Functions screen.


Rotating the Original 180 Degrees to Make a Master [Rotate]

When you are direct printing, you can rotate the original data received from a computer 180 degrees to make a master.


Important!:

- “Rotate” can also be set from the printer driver, but if it is set on both the machine and printer driver, the job will print without rotating.

1 Touch [Functions] on the Master Make Basic Screen.

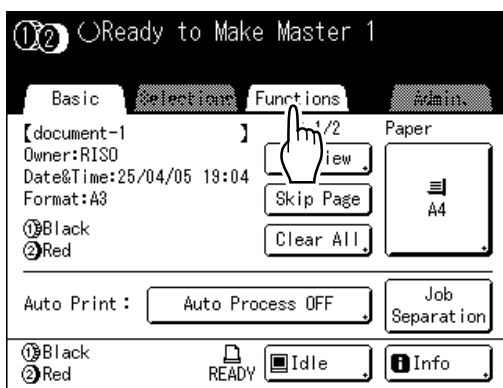

2 Touch [Rotate].

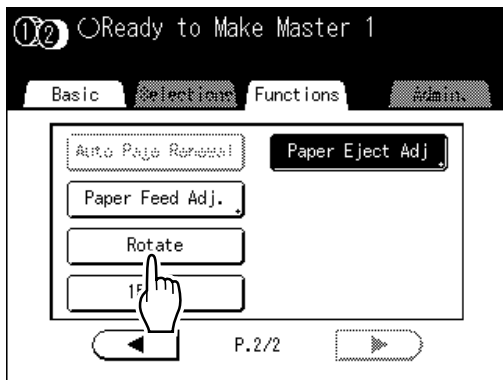

Rotate setting is updated.

Proof and Print

(with the Optional ADF unit installed)

[ADF Semi-Auto]

Selecting “Auto Process” with the optional ADF unit installed automatically performs the complete printing job, but you cannot check proof copies, or any necessary adjustments of each master. To pause for check after printing a proof copy of each master, select “ADF Semi-Auto”. After the printing is done, the machine continues to scan and create the next master, then print a proof copy before coming to a stop.

Important!:

- Turn “Auto Process” OFF when using “ADF Semi-Auto”.
p.81


Note:

- The default “ADF Semi-Auto” can be set on the Admin. screen.
p.159

1 Touch [Functions] on the Master Making Basic Screen.




2 Touch [ADF Semi-Auto].

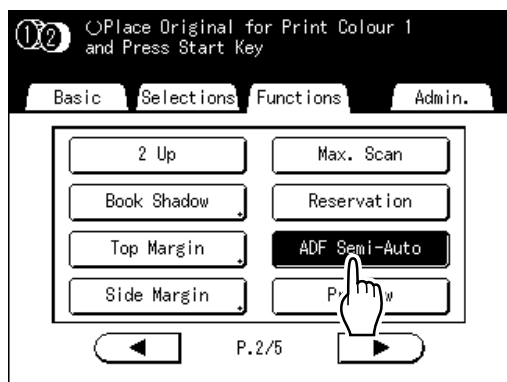


“ADF Semi-Auto” is selected.

3 Place original(s) in the ADF unit.

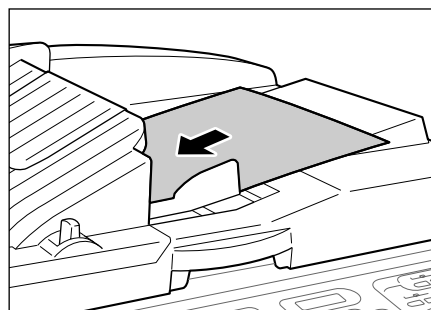

The ADF unit detects the document, and automatically opens the Master Making Basic Screen

4 Enter the number of copies using the Print Quantity Keys.

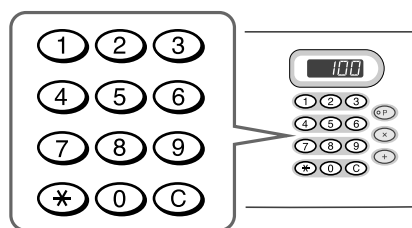


The number is displayed on the Print Quantity Display.

Note:

- To change the number, press the **C** key, then re-enter the correct number.

5 Press the key.

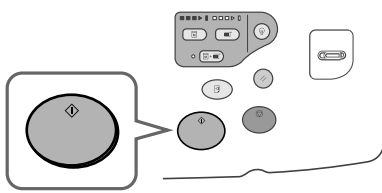

After a master is made, a proof copy is printed and the job stops.

6 Check the proof copy. Make adjustments if needed.

7 Press the key.

The machine prints specified number of copies. Master for the next original is made, its proof copy is printed, then the machine stops again.

Repeat steps 6 and 7.


Changing Default Settings [Admin.]

The default settings can be modified to best suit your needs.
They may be edited as needed.

Important!:



- Depending upon the usage environment, some of the “Admin.” features may not be available (the “Admin.” tab may not be displayed).
Consult your dealer (or authorised service representative) for details.

Note:





- The default settings are the values restored when the machine is turned ON or when the  key is pressed.

Configurable Functions

==:Initial setting (factory default)


Display Access Button	Functions	Description
[Display]	DirectAccess Entry Store frequently-used functions on the Basic Screen for each mode.	 p.167
	Selections Entry Store frequently-used functions on the Selections screen for each mode.	 p.167
	Display Priority Select first screen to display following the Startup.	Mode Screen/Dual-Colour/ 1 Colour/ 2 Colour/ Scanning/Link Mode
	Start-Up Screen Select an animation to display at Start-up.	Logo(RISO)/ <u>Logo(MZ)</u> / Character
	Display Adjustment Change background colour, density and brightness of the Touch Screen.	Background:Blue/ <u>White</u> Display Density: -5, -4 ... -1, <u>0</u> , +1 ... +4, +5 Backlight Lightness: -2, -1, <u>0</u> , +1, +2
	Displayed Language Select the language displayed on the screen. Important!: <ul style="list-style-type: none"> Contact your dealer (or authorised service representative) to change the settings. 	#01, #02, #03 ...

Display Access Button	Functions	Description
[Default]	Image Processing Change the default setting for the “image processing mode”.	<u>Line</u> /Photo/Duo (Text and Photo)/Pencil
	Scanning Contrast Change the default setting for the “scanning contrast”.	<ul style="list-style-type: none"> Contrast Range: Lighter/<u>Standard</u>/Darker Contrast: 1, 2, 3, 4, 5, <u>Auto</u>
	Reproduction Size Change the default setting for the “size”.	<u>100%</u> , Auto
	Print Speed Change the default setting for the “print speed”.	1, 2, <u>3</u> , 4, 5
	Print Density Change the default setting for the “print density”.	Print Drum 1: 1, 2, <u>3</u> , 4, 5 Print Drum 2: 1, 2, <u>3</u> , 4, 5
	OP Auto Process Change the default setting for the “Auto Process” when an optional ADF unit or Job Separator is installed.	<u>ON</u> , OFF
	ADF Semi-Auto Change the default setting for the “ADF Semi-Auto” when the ADF unit (option) is installed.	ON, <u>OFF</u>
	Auto Process Mode Change the default setting for the “Auto Process”.	ON, <u>OFF</u>
	Double Feed Check Change the default setting for the “Double Feed Check”.	<u>ON</u> , OFF
	Job Separation Change the default setting for the “Job Separation” when the Job Separator (option) is installed.	ON, <u>OFF</u>
	Eject Wing Control Change the default positioning of the Paper Ejection Wing. Important!: <ul style="list-style-type: none"> This option is available only when the special paper setting is pre-configured. Contact your dealer (or authorised service representative) to pre-configure this setting. 	ON, <u>OFF</u>
	Paper Ejection Adj Change the default settings for “Air Blow” and “Separation Fan”.	Air Blow 1: OFF, <u>ON</u> Air Blow 2: OFF, <u>ON</u> Separation Fan 1: OFF, Low, <u>Standard</u> Separation Fan 2: OFF, Low, <u>Standard</u>
	Default Folder Specifies the folder in which to save the data read in scanner mode and the folder to save the data sent from the computer.	Scan Data Folder: 6 folders PC Job Folder: 6 folders

Display Access Button	Functions	Description
[System]	Custom Paper Entry Specify paper dimensions before using non-standard sized paper.	☞ p.171
	Irregular Fitter Specifies to scan custom-size originals as standard-sized.	OFF , A3, B4, A4, A4R, B5, B5R
	Folder Renaming Changes the folder name of the folder used to save data.	6 folders
	Stamp Data Specifies the stored data to overlay with the “Stamp”.	☞ p.192
	Base IP Address Set the IP address for connecting the machine to a network. IP address settings differ depending on the type of network. Note: • To change an input source, touch the applicable box, or press the  key to rotate options.	<ul style="list-style-type: none"> When using a DHCP server [Use DHCP] When entering IP address manually [Manual Input]   or the Print Quantity Keys.
	Margin-Plus Rate Specify default size-reduction rate for the “Margin+” setting.	90 to 99 % (Factory default is 94%)
	Clock/Calendar Set the internal clock of the machine. The time/date displays on the  Info screen. ☞ p.212	Year/Month/Day Hour:Minute
	Multi-Up Interval Select the interval time (seconds) between each scan when using Multi-Up Printing.	15s /30s
	Scanning Interval When 2-Colour printing, sets the time interval to wait for placing the original for Drum 2.	5mn , Limitless
	Reserve Period Select a duration of time (seconds) for the inactive machine to receive data from a computer but restricts processing any output command.	OFF/ 15s /30s/60s
	Ex. Reserve Period When “Reserve Period” is set, extends the Reserve Period (minutes) to prevent data interruption.	5mn /10mn/30mn
	Auto Clear Select whether to reset all settings to default automatically when the machine is inactive for a set period (minutes).	<ul style="list-style-type: none"> Auto Clear OFF/ON Waiting Time 1-60 mn (factory default is 5 mn)

Display Access Button	Functions	Description
[System]	Energy Saving Mode Select to activate Sleep Mode or Shutdown Power when the machine is inactive for a set period of time. <ul style="list-style-type: none"> • OFF “Energy Saving Mode” is not activated. Power is turned ON/OFF using the power switch. • Auto Sleep The machine is standing by to receive data from the computer, but the rest of its functions are powered off. • Auto Power-OFF Automatically shuts the power off. (Data cannot be received.) 	<ul style="list-style-type: none"> • Energy Saving Mode OFF/<u>Auto Sleep</u>/Auto Power-OFF • Waiting Time 1-60 mn (factory default is 5 mn)
	Power-OFF Schedule Set a time of the day to automatically shut power to the machine off. If the machine (or its Linked Printers) are in use, or receiving data, power will not shut off.	<ul style="list-style-type: none"> • Power-OFF Schedule <u>OFF</u>/ON • Shut-Off time Hour: Minute
	Auto Idling Select whether to perform “Auto Idling” when making a master after a set period of non-use. Also selects a period of non-use before initiating “Auto Idling”, as well as the number of idle rotations.	<ul style="list-style-type: none"> • Auto Idling OFF/<u>ON</u> • Non-Use Time 1-<u>12 hour</u> • Rotation <u>1-3</u> (times)
	Auto Page Renewal Allows you to set when to recreate a new master. Once the specified number of copies is reached, the master in use is automatically discarded and a new one created. You can also specify the number of proof copies to make after recreating the master.	<ul style="list-style-type: none"> • Auto Page Renewal <u>OFF</u>, ON • Auto Renewal Point 1-9999 copies (Factory default is 1000 copies) • Sample Copy Output 0-99 copies (Factory default is 3 copies)

Display Access Button	Functions	Description
[System]	<p>Minimum Print Q'ty Set minimum number of copies to print. This prevents master from being made when a smaller quantity is entered for printing.</p> <p>Important!:</p> <ul style="list-style-type: none"> This setting can be locked to prevent alteration. Consult your dealer (or authorised service representative) for details. 	<u>OFF</u> /ON (2-99 copies)
	<p>Stock Management In order to check current stock quantity, insert the number of consumables purchased.</p> <p>Note:</p> <ul style="list-style-type: none"> When stock quantity falls below the "Remaining Qty to be notified", a message will appear on the display. This setting is disabled by factory default. Consult your dealer (or authorised service representative) for details. 	<ul style="list-style-type: none"> Purchase Qty <u>0</u>-99 Pcs. Remaining Qty to be notified <u>0</u>-99 Pcs.
	<p>Beep Sound Select whether to activate a beep sound when a key/button is pressed, or when an error occurs.</p> <ul style="list-style-type: none"> ON Beeps when any key/button is pressed. Beeps when an event is caused/completed. Limited Does not beep when keys/buttons are pressed. Does not beep when restarting the machine. OFF Does not beep. 	OFF/Limited/ <u>ON</u>

Display Access Button	Functions	Description
[Link Mode] Only displayed when a Linked Printer is connected.	Link Properties	 p.198
	Linked Printer If only one linked printer (sold separately) is attached to the machine (there are no other linked printers or networked computers), it is “One-to-One”.	PC Network , One-to-One
	Link-Free Volume Set a number of copies by which the output device is determined. When print quantity does not reach the set value, the job is to be output from a Linked Printer. When printing more copies than Link-Free Volume, the machine will perform printing. Note: <ul style="list-style-type: none">• The default value is 20 copies.• “Minimum Print Q'ty” cannot be set when “Link-Free Volume” is ON.	ON [Link-Free Volume] 2-99 copies/OFF (Factory default is 20 copies)
	Duplex Interval Select the interval time (seconds) between first and second scans when using Double-sided Printing.	<u>15 seconds</u> /30 seconds
	Online Auto-Link Select whether to automatically output a job from the Linked Printer when print quantity is less than Link-Free Volume. Note: <ul style="list-style-type: none">• When “Link-Free Volume” is OFF, this item is greyed out and not available.	<u>ON</u> , OFF
	Colour Auto-Link If another drum besides the black one is set when printing with 1-colour, set “Link-Free Volume” to specify whether or not to print with the currently set drum colour.	<u>ON</u> , OFF
	Link Info Refresh Set how frequently the machine receives data from a Linked Printer.	1-999 seconds (Factory Default is 15 seconds)
[Editor]	Print Colours	See the RISO Editor User's Guide for details.
	Tool Bar Position	
	Sub Tool Bar	
	Page Orientation	


Customising the Default Settings

The default settings can be changed when the machine is not in operation. Make sure there is no pending or current Print Job operation.

Note:

- On the Admin. screen, the current setting is displayed on the right side of each button.


1 Touch [Admin.] on the Basic Screen for each mode.

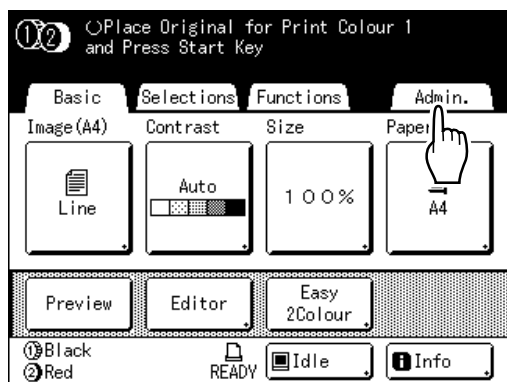

2 Touch [OK].



3 Select a function to modify.

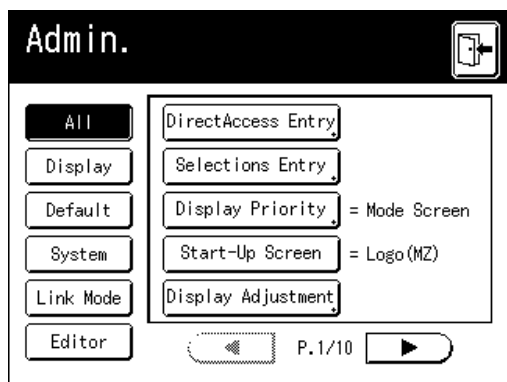

Display Access Buttons

Display Access Buttons allow for quick selection of desired functions by displaying only relevant groups of function buttons.

[All]: All Functions

[Display]: Functions related to Screen Display

[Default]: Basic Operational Functions

[System]: Functions affecting the entire System

[Link Mode]: Functions related to Linked Printer

[Editor]: Functions related to Editor

- [Link Mode]** is only displayed when a Linked Printer (sold separately) is connected.


4 Change settings.

Some functions have their own Setup screens, some don't. There are several styles for setting values. Following samples demonstrate different value setting styles.

◆ No additional Setup Screen

(2 or more options to choose from)

Touch the function name button to change the value displayed to the right.

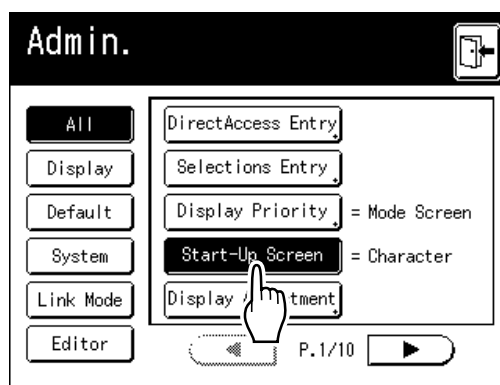


Once the settings have been changed, continue on to step 6.

◆ Additional Setup Screen Available

Button Style


Choosing a button makes it the default.

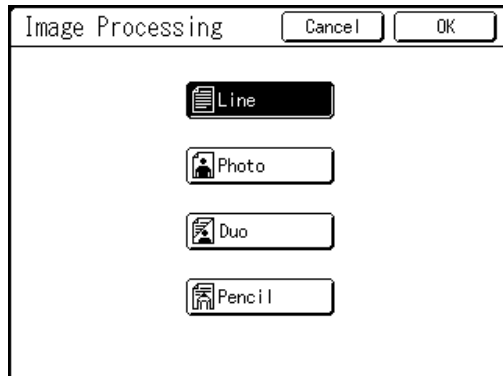

◆ Additional Setup Screen Available

Numeric Value Style


Touch to increase/decrease value. Numbers may be entered using the Print Quantity Keys.

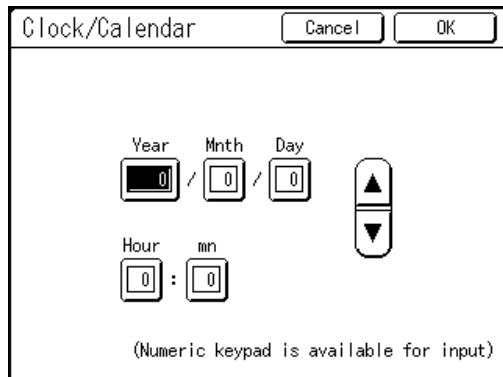

◆ Additional Setup Screen Available

Multi Level Entry Style

Select a button, then set its values either by touching more buttons or entering a value numerically. Touch **[ON]** to display more options on the right.


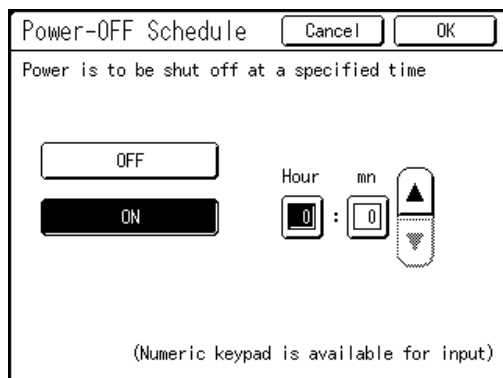


◆ Additional Setup Screen Available

Text Input Type

Input the name after touching the button of the name to change.

Touch the button and the Rename screen appears.

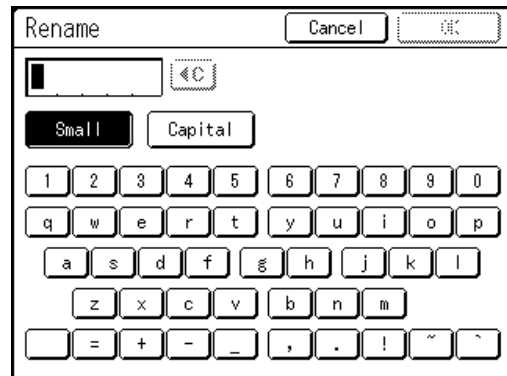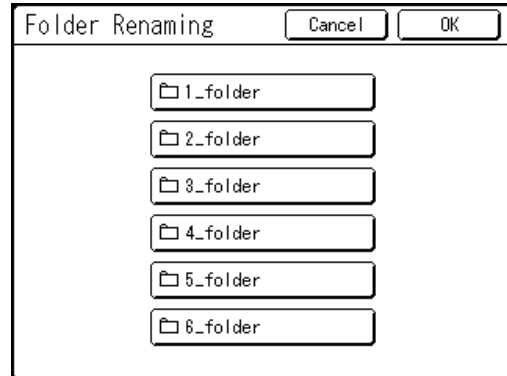


Touch the character buttons to enter text. Change capitalization by selecting **[Small]** or **[Capital]** button.

☞ p.132


◆ Additional Setup Screen Available

Data Specification Type

A screen to specify the stored data displays.
See p.186 for details on specifying the data.

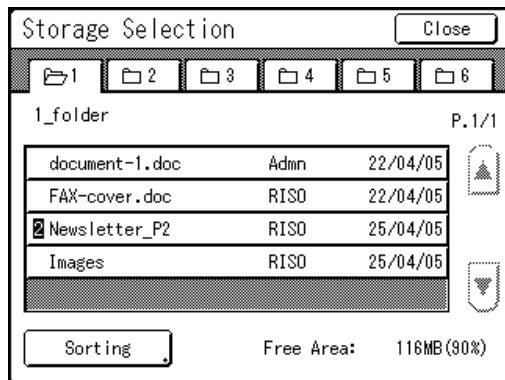

5 Touch [OK].

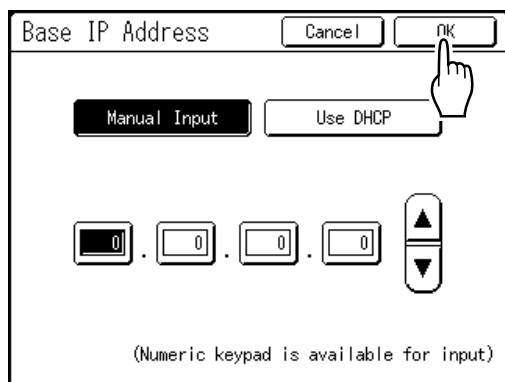


Skip to step 6 if there is no additional setup screen.

Note:

- Touch **[Cancel]** to cancel the changes and return to the Admin. screen.
- The selected value is displayed to the right of the button (for most functions).

6 Touch .

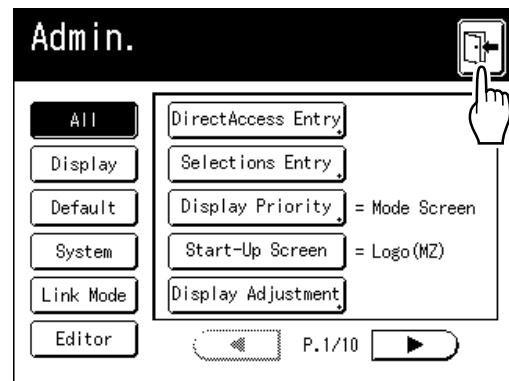

Returns to the original Basic Screen.

Setting Up Direct Access Area and Selections Tab

[DirectAccess Entry] [Selections Entry]


Frequently-accessed functions for each mode can be placed on “Direct Access” area in the Basic Screen, or on “Selections” screen.

This allows quick changes and direct access to each function's Setup screens, eliminating the need to search from a long list of functions.

Each mode (Master Making/Print/Scanning/Link) is capable of storing its own unique settings. “Direct Access” area can store up to 4 items, “Selections” screen can store up to 9 items (6 in the Link Mode, no item in the Scan Mode).



Direct Access Area

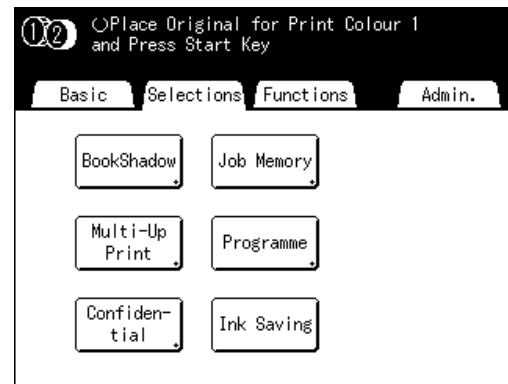


Selections Screen

Note:


- Choose functions that are relevant to each mode.
- The machine comes with factory default “Direct Access” area and “Selections” screen entries, which can be changed.
- Any functions available in the “Functions” screen can be selected.
- When there are multiple Linked Printers, select a device first, then make changes in the “Admin.” tab to select/modify “Direct Access” area and “Selections” screen.
- Optional attachment is automatically added to the “Direct Access” area and “Selections” tab if a space is available for another button.
(Optional devices to a Linked Printer must be entered on the Admin. screen.)

In the following steps, the “Direct Access” area configuration screen is shown in the upper-left, and the “Selections” configuration screen is shown in the bottom-right. When both screens are the same, only one image will be shown.


- 1 Touch [Admin.] on the Basic Screen for each mode.

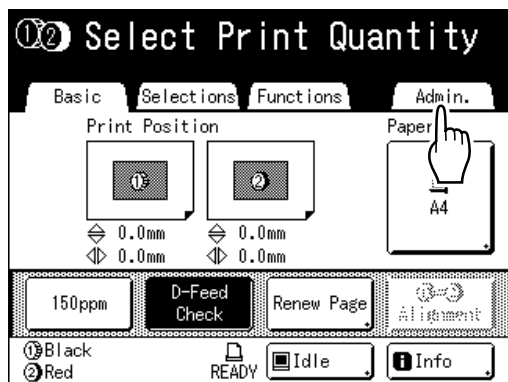


- 2 Touch [OK].

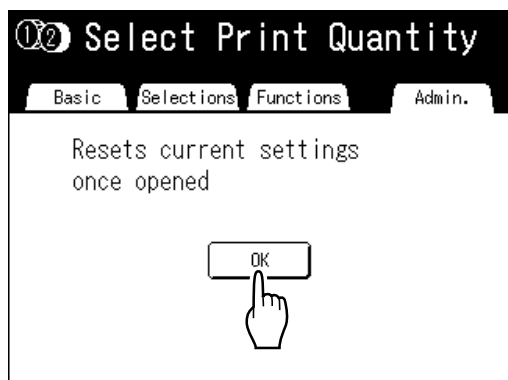


- 3 Touch [DirectAccess Entry] or [Selections Entry] on the Admin. screen.

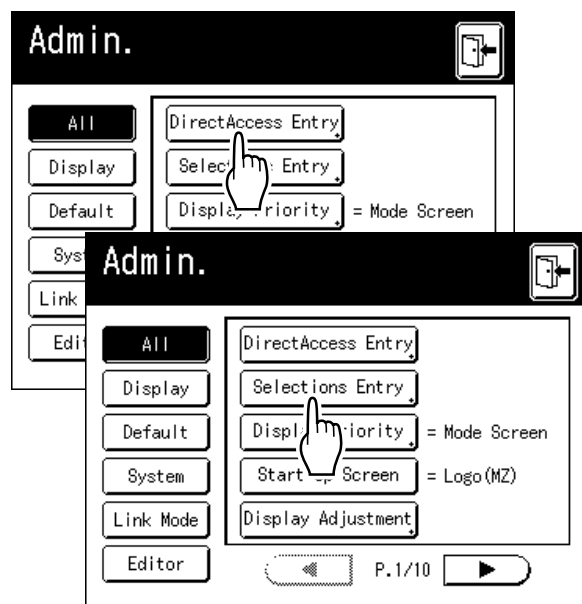

- 4 Select a mode tab to store new buttons.

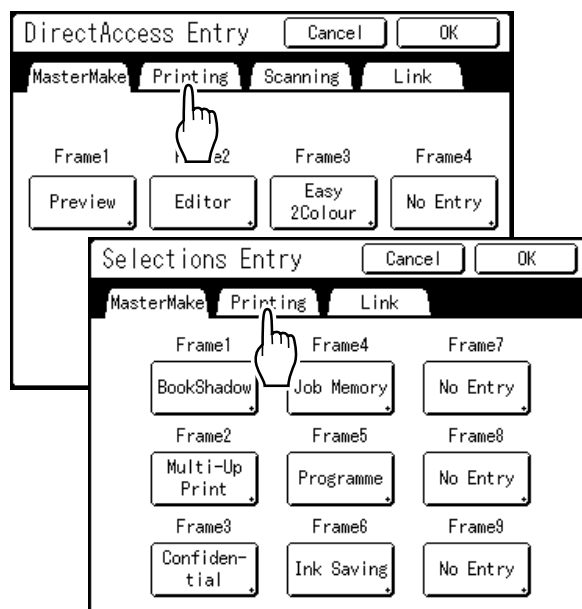


5 Select a button to assign a function.

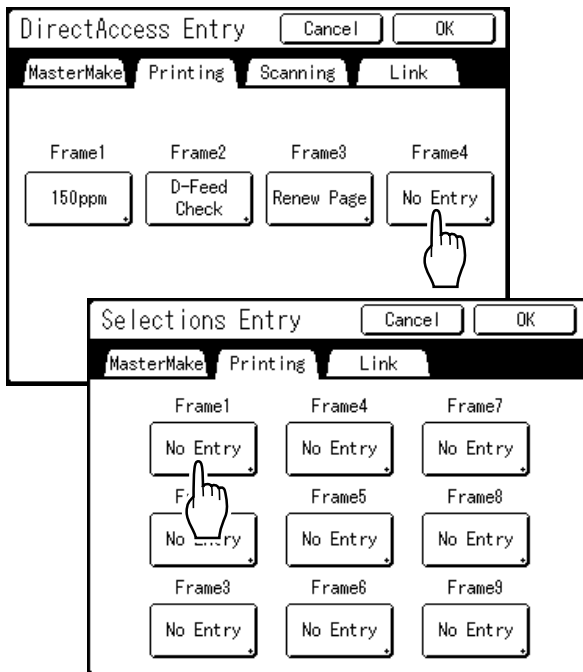

Note:

- If the button has a function already assigned, the newly selected function will overwrite.


6 Select a function to assign.

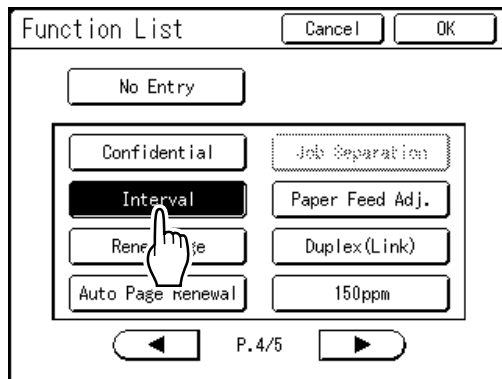

Note:


- Touch ◀ or ▶ to display more functions if necessary.
- To remove a function accidentally assigned, touch **[No Entry]**.
- Functions already assigned are greyed out and not available for selection.
- Some functions display only when optional devices are installed.

7 Touch [OK].

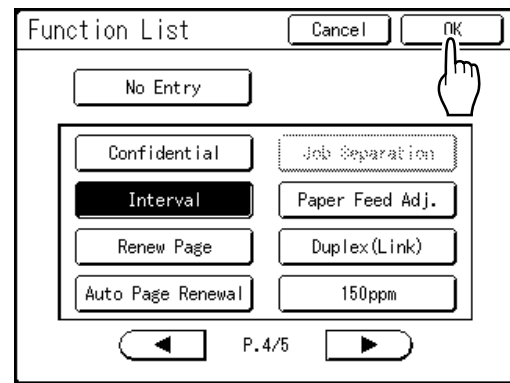


Returns to "Direct Access" area or "Selections" screen. Selected functions are added. To add more functions, or to replace a button with another function, repeat steps 4 and 5.

8 Touch [OK].

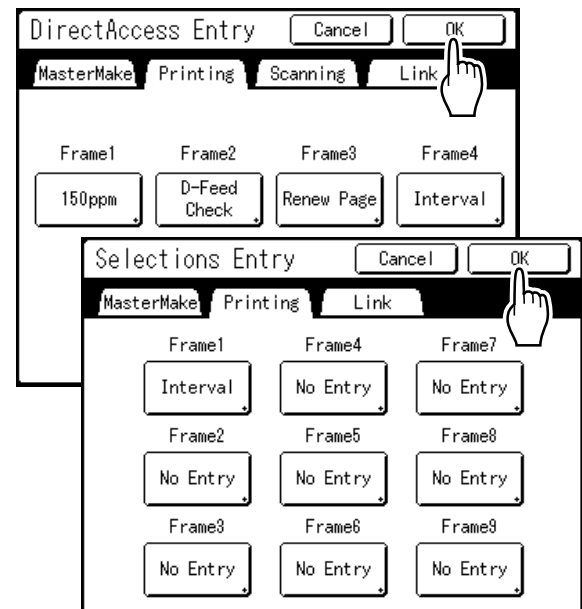


Returns to the Admin. screen. "Direct Access" area or "Selections" screen is updated.

9 Touch .

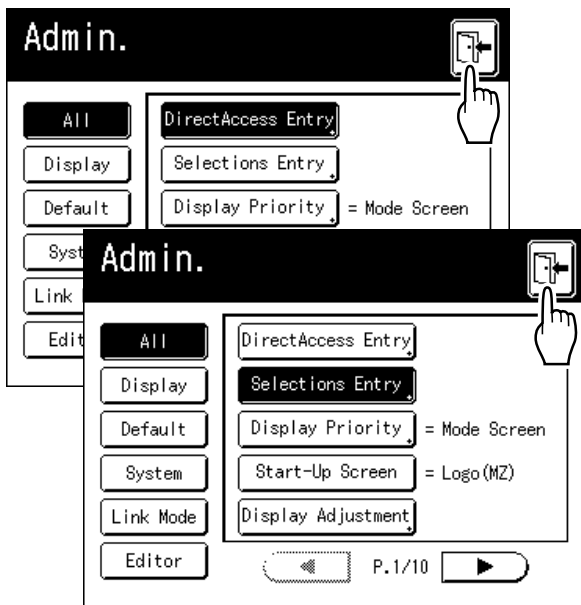

Returns to the Original Basic Screen.

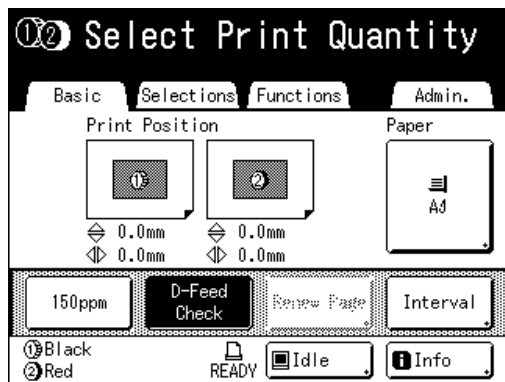

Registering a Custom Paper Size

[Custom Paper Entry]

Non-standard paper sizes must be pre-entered into memory. Once a paper size is stored into memory, it can be retrieved with the **[Paper]** button from the Master Making Basic Screen.

Up to 6 different sizes may be entered. Previously stored sizes can be modified or deleted.

You can register paper sizes between 100 mm × 148 mm to 340 mm × 555 mm. However, any paper longer than 436 mm prints in extended paper mode.

☞ p.173

Important!:

- Custom paper sizes must be entered. Failure to do so may result in incorrect scanning.
- 2-Colour printing is not possible for paper lengths of 246 mm or less.

Entering sizes and changing names


- 1 Touch **[Admin.]** on the Basic Screen for each mode.




- 2 Touch **[OK]**.




- 3 Touch **[System]** or  to display **[Custom Paper Entry]** on the screen.

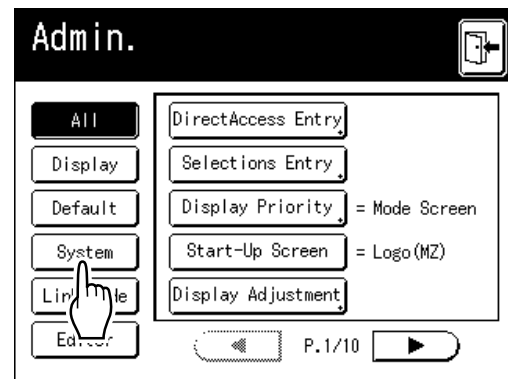

- 4 Touch **[Custom Paper Entry]**.

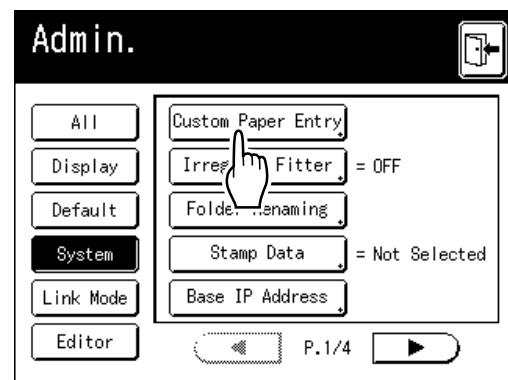


5 Touch an unused button.

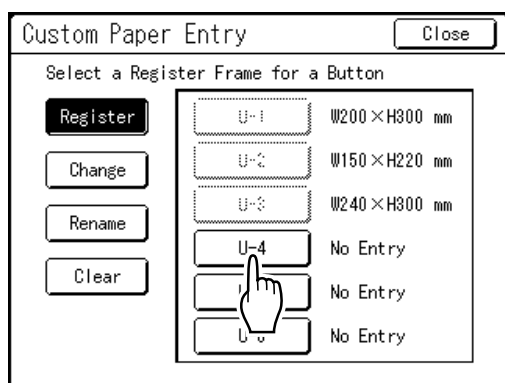


A button already associated with another size is greyed out.

6 Enter the paper size.

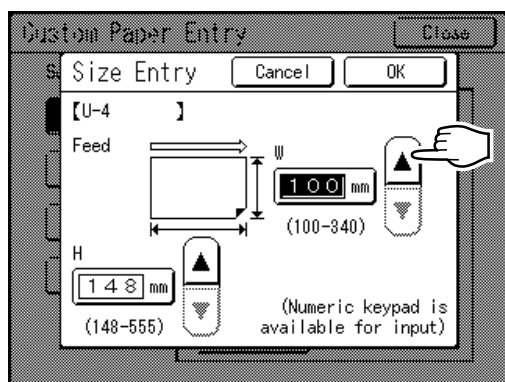


Facing towards the paper feeding direction (into Paper Feed Tray), enter W (width) and H (height). Touch either , or use Print Quantity Keys.

7 Touch [OK].

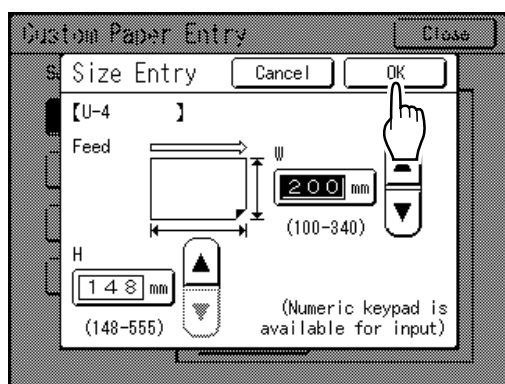


Rename as necessary.
Touch **[Close]** to skip renaming the size.


8 Touch [Rename].

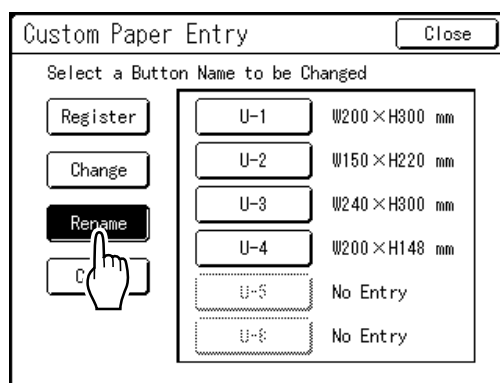

9 Select a button to rename.

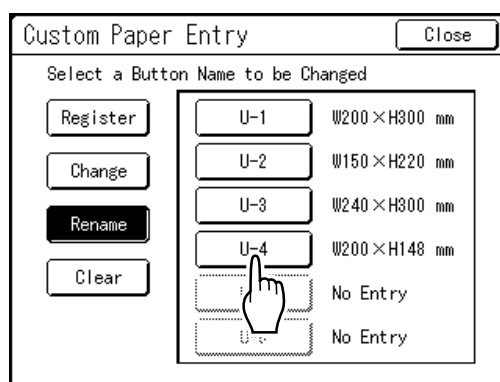


10 Touch to delete the current name.

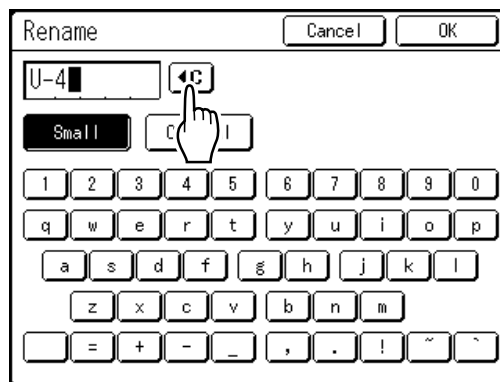

11 Touch character buttons to enter a new name.

Change capitalization by selecting **[Small]** or **[Capital]** button.
p.132


12 Touch [OK] when done.

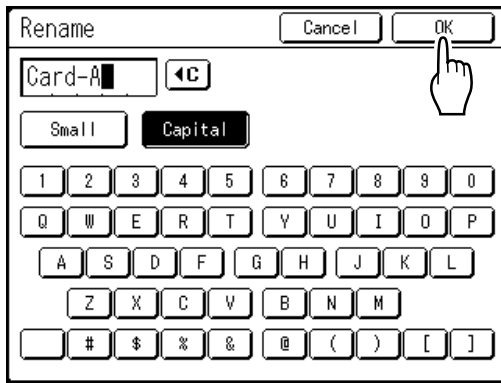


Note:

- To change a name, repeat from step 8.

13 Confirm the name and touch [Close].

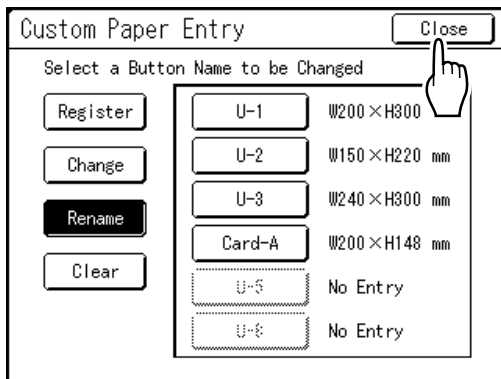

The following screen appears.

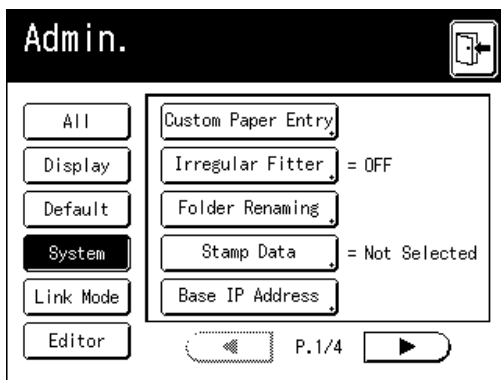

Returns to the Admin. screen. Paper size is updated.

Tip:

Printing on Extended Paper

The machine can print on paper 436 mm-555 mm long (top to bottom facing the paper feeding direction) by storing the size as a custom-size.

When entering a size longer than 436 mm (top to bottom facing the paper feed direction) on the Custom Paper Entry screen, the paper will be treated as "Extended Paper".

When "Extended Paper" is selected on the Custom Paper Entry screen, the machine switches into "Extended Paper" mode.

Important!:


- Some Extended Paper may fail to pass through the machine due to its paper characteristics, or may get smudged with ink due to its image positioning. Consult your dealer (or authorised service representative) for advice.

"Extended Paper" Mode


- When the machine is on "Extended Paper" mode, it is indicated in the message area as either "Ready to Make Master <Ext.Paper>" or "Ready to Print <Ext.Paper>".
- On "Extended Paper" mode, the machine can print papers measuring 436 mm-555 mm lengthwise from top to bottom facing the paper feed direction. However, maximum printing area and top/bottom Print Positioning range remains as usual.
 p.17
 p.113
- Print timing and speed is different on "Extended Paper" mode in comparison to normal printing. This is to be expected, so do not be alarmed.
- Contact your dealer (or authorised service representative) for suggestions about placing paper on the Paper Receiving Trays when on "Extended Paper" mode.

Deleting a Custom Paper Size


- 1 Touch [Custom Paper Entry] on the Admin. screen.

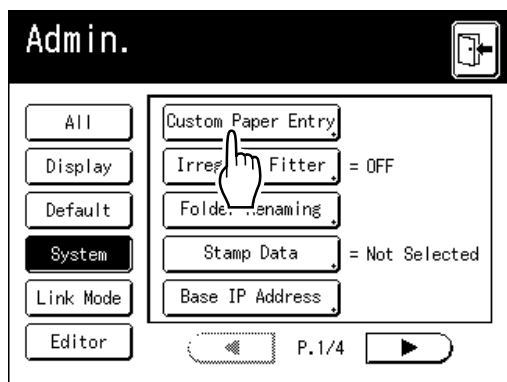


- 2 Touch [Clear].

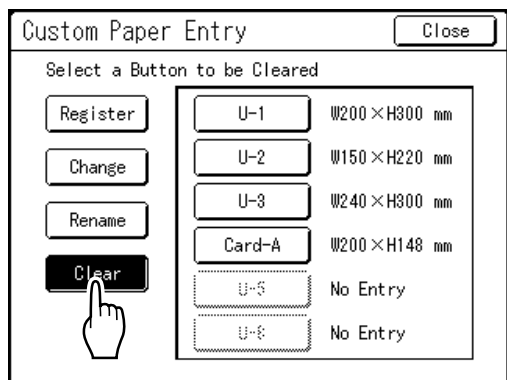

- 3 Select the paper size to delete.

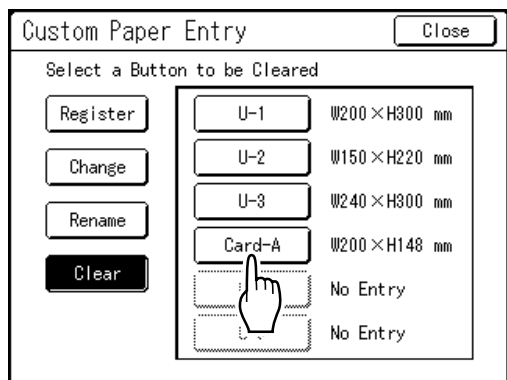


- 4 Touch [OK].

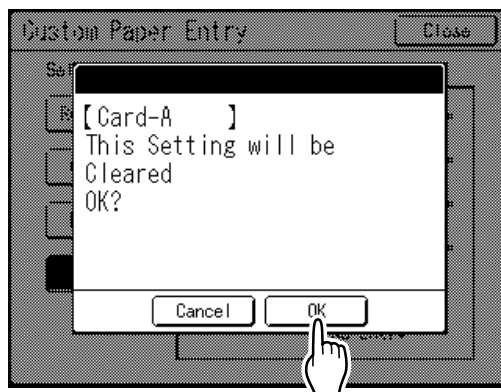


Returns to the Custom Paper Entry screen. The selected paper size is deleted.


- 5 Touch [Close].

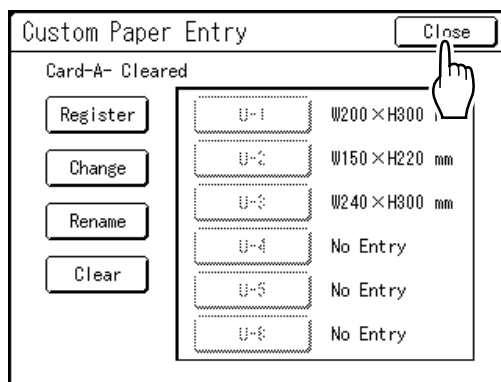

The following screen appears.

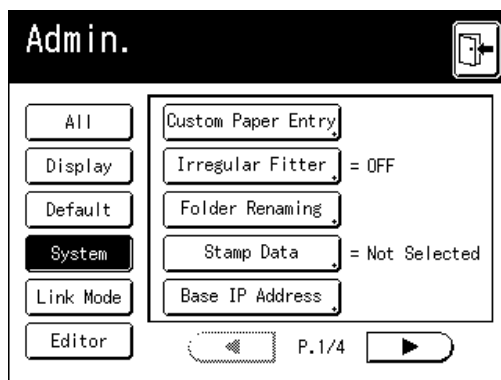

Returns to the Admin. screen. Paper size is updated.

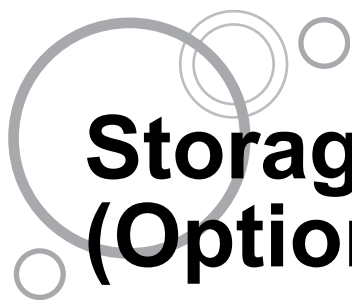

Storage and Scan Modes (Option)

About Storage

Storage is a function that allows you to save original data to memory.

Storage memory is available when optional Document Storage Card DM-32CF or Document Storage Card DM-128CF is attached.


You can use the Editor function to edit scanned data and to save it into memory.


Storable Original Data

Original data created on a computer and sent to the printer, as well as original data scanned in scan mode can be stored.

See the Printer Driver User's Guide for information on storing original data sent from a computer.

See [p.178](#) for information about scan mode.

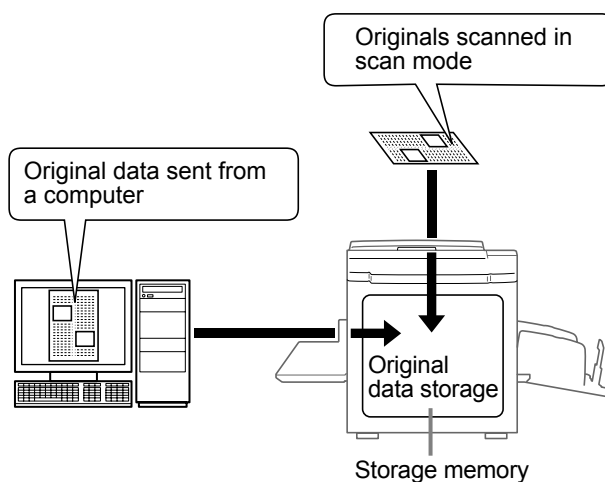

Stored data is managed as "Storage Data", and unless expressly deleted, will not be cleared if you press the  key or turn the machine off.

Important!:

- We cannot not guarantee stored data against loss caused by disasters or unforeseen events. We recommend that you use your computer to back up any important documents.

Note:


- You can easily delete unnecessary storage data when remaining memory is limited. The remaining memory is displayed in the bottom right corner of the Storage Selection screen.
[p.188](#)
- 6 folders exist for storing data. If you plan to use folders in common with others, we suggest that you create folder storage conventions (for example, categorized by department or data type).
Folder names can be changed in Admin..
[p.160](#)
- You can change the order of the storage data.
[p.189](#)

Retrieving Storage Data

You can do the following when printing with stored data.

- Repeatedly retrieve and print previously stored data. This saves you the trouble of rescanning documents when printing the same materials.

☞ p.177

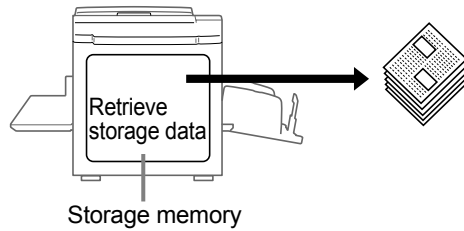

- If the stored data contains multiple pages, you can choose to output all pages, only odd or even pages, or even indicate the specific pages to print using "Output".
- You can also combine and print stored data with a hard-copy original.

☞ p.190, ☞ p.192

Converting Hard-copy to Stored Data (Scan Mode)

About Scan Mode

Scan mode is a function that allows you to scan a hard-copy original with the machine's scanner to save as storage data.

You can repeatedly retrieve and print previously scanned and stored original data. This saves you the trouble of rescanning documents when repeatedly printing the same materials.

☞ p.177

This function also prevents documents from getting lost or damaged over time.

Note:

- You can easily delete unnecessary storage data when remaining memory is limited.

The following functions can be used in scan mode: See the explanation of each function for more details.

- | | |
|---|---------------------------|
| • Image (☞ p.68) | • Tone Curve (☞ p.73) |
| • Contrast (☞ p.75) | • Multi-Up Print (☞ p.85) |
| • Size (enlargement/reduction) (☞ p.76) | • Easy 2Colour (☞ p.44) |
| • Dot Process (☞ p.70) | • Preview (☞ p.107) |
| • Contrast Adj (☞ p.72) | • Book Shadow (☞ p.82) |


The following functions are specific to scan mode.

- Format (☞ p.185)
- Colour (☞ p.179, ☞ p.181)

Scanning an Original for 1-Colour Printing

1 Select a scan mode.

See p.23 for information about selecting a scan mode.

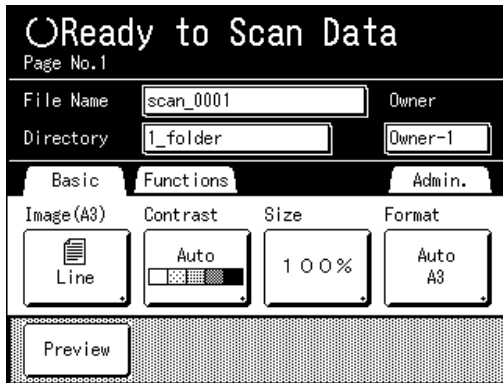

2 Place the original.

See step 5 of "1-Colour Printing" (p.49).

Go to step 4 if you are not specifying folder, data, or owner name. If no settings are configured, data is stored by default (Data Name: scan_001, Save Location:1_folder, Owner:Owner-1).

3 Setting data information.

Sets the data name, save location and owner name.

p.183

4 Setting required functions.

Set the required functions for scanning the original.

Note:

- See the previous section for the functions that can be set.
- You can instantly check scanned data by enabling "Preview".

Important!:

- Set "Format" when scanning custom-sized originals.
p.185

◆ To specify the original colour:


You can specify the print colour of the data you retrieve for printing.

If a drum of a colour differing from the print colour selected is present, a message is displayed.


Note:

- The factory setting is **[No Entry]**.
There is no particular need to set if printing 1-Colour originals.

1) Touch **[Functions]**.

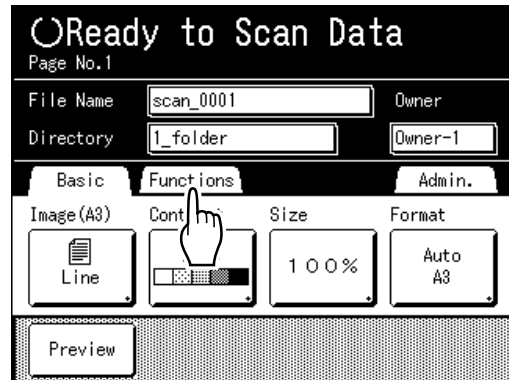


2) Touch **[Colour]**.

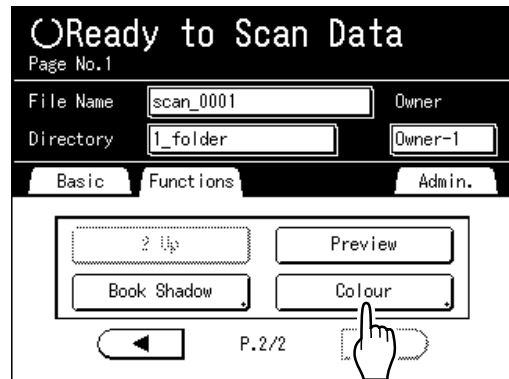


The Colour screen appears.

3) Touch **[Mono-Colour]**.

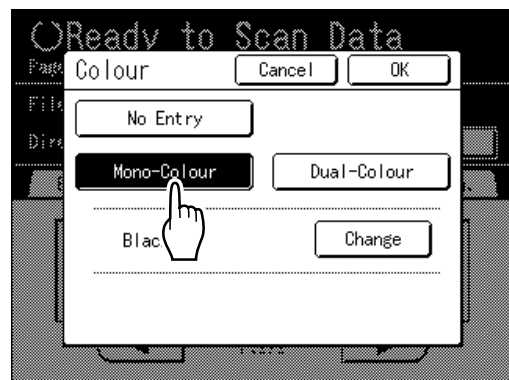


4) Touch [Change].

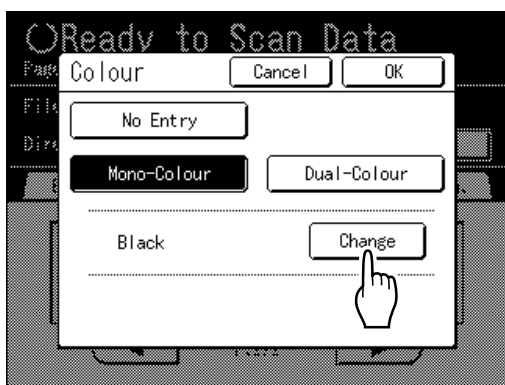

5) Touch the button of the colour to set and then touch [OK].


Note:

- The previously set colour name displays on the Change screen.

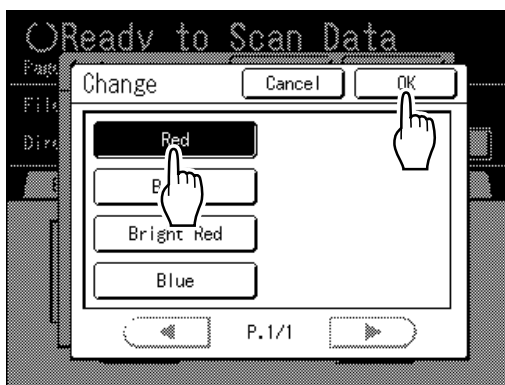


Returns to the Colour screen. The Colour setting is updated.

6) Touch [OK].

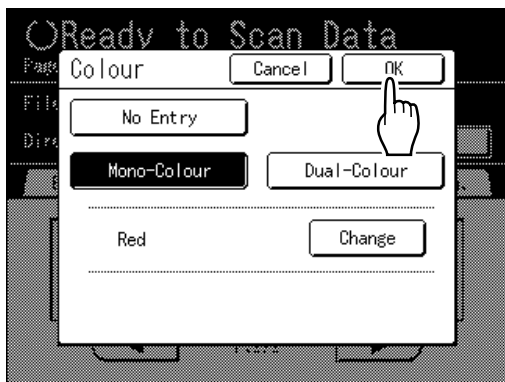

5 Press the  key.

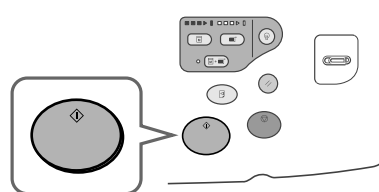



The scan starts.

Note:


- After scanning the original, a preview shows on the display if "Preview" is set.

6 Repeat steps 2, 4 and 5 if the original has multiple pages.

 
Note:

- If multiple originals are combined on the ADF unit (option) and "Auto Process" is set to ON, all originals will be scanned using the same settings. Check the  key indicator to determine if "Auto Process" is ON or OFF (illuminated indicates ON). If "Auto Process" is OFF, press the  key for each original.

7 Touch .

Once the original to be saved as one set of data is scanned, touch . A confirmation screen appears.

8 Touch [Yes].


The data is saved. Press the  key to exit scan mode.

Scanning Originals (2) for 2-Colour Printing

Originals from Drum 1 and Drum 2 are read and stored as one piece of data.

1 Select a scan mode.

See p.23 for information about selecting a scan mode.

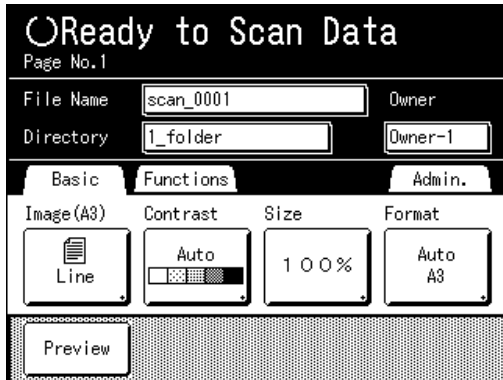

2 Place the Original for Drum 1.

See step 5 of "2-Colour Printing" (p.39).

Procedures are the same for using the ADF unit (option).


Go to step 4 if you are not specifying folder, data, or owner name. If no settings are configured, data is stored by default (Data Name: scan_001, Save Location: 1_folder, Owner: Owner-1).

3 Set data information.


Sets the data name, save location and owner name.

p.183

4 Touch [Functions].

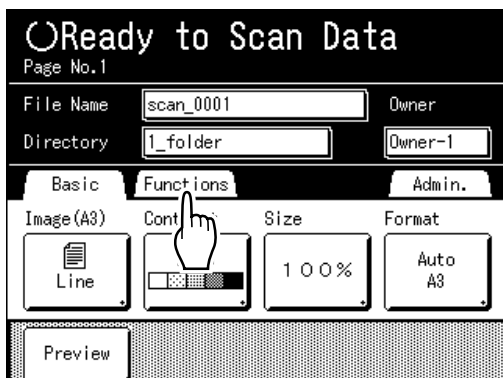


5 Touch [Colour].

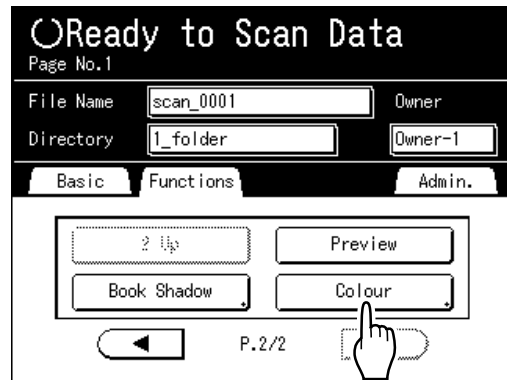

The Colour screen appears.

6 Touch [Dual-Colour].

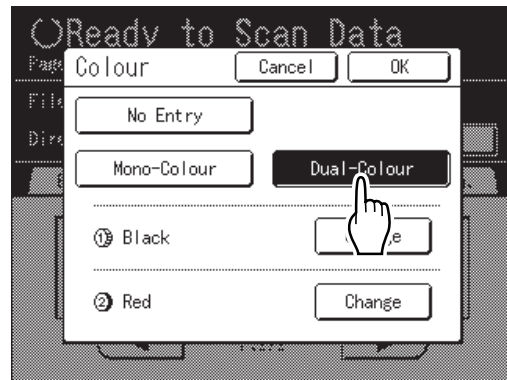


7 Check the drum colour.

To change the ink colours on Drum 1 and Drum 2, touch [Change] for each and choose from among the displayed colours.

Note:

- The previously set colour name displays on the Change screen.

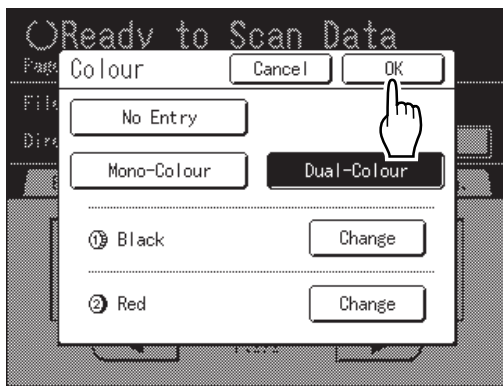8 Touch [OK].

The colour specified for the original is confirmed and the screen returns to the Scan Basic Screen.

9 Apply the required settings to the original for Drum 1.


Set the required functions for scanning the original.

Note:

- See (p.178) for the functions that can be set.
- You can instantly check scanned data by enabling "Preview".

Important!:

- Set "Format" when scanning custom originals. (p.185)

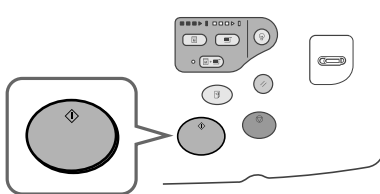10 Press the  key.

Scan of the original for Drum 1 starts.


Note:

- After scanning the original, a preview appears on the display if "Preview" is set.

11 Place the original for Drum 2.

Step 8 of "2-Colour Printing with 2 Originals" (p.41)

This step is not needed if the originals for Drum 1 and Drum 2 are placed together on the ADF unit (option).

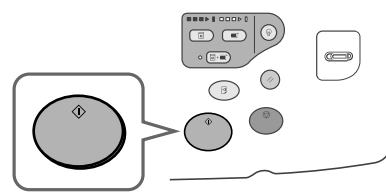
12 Apply the required settings to the original for Drum 2.**13 Press the  key.**

Scan of the original for Drum 2 starts.

Note:

- A preview appears on the display if "Preview" is set.


14 Repeat steps 2, and 9-13 if the original has multiple pages.**15 Touch .**

Once the original to be saved as one set of data is scanned, touch .

A confirmation screen appears.

16 Touch [Yes].

The data is saved.


Press the  key to exit scan mode.

Setting Data Information

Settings for the data to be scanned and stored are configured on the Scan Basic Screen.

1 Select a scan mode.

See p.178 for information about selecting a scan mode.

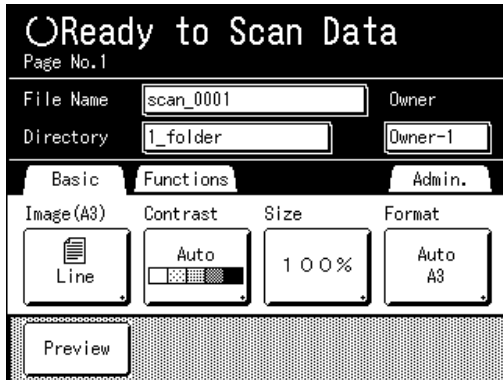


The data name, save location and owner name are automatically allocated when scan mode is started, but you can change this preset information if needed.

Note:


- Default settings for the "Directory" folder can be changed in "Admin." (p.159)

2 Enter a data name.

- 1) Touch the data name input box.

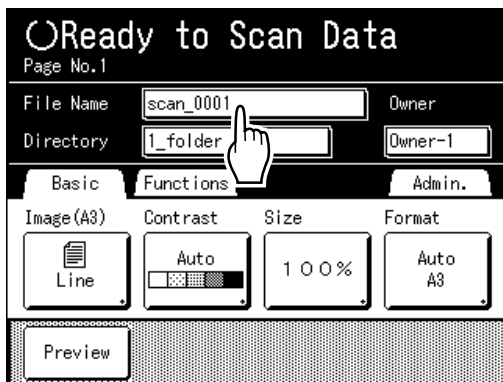

The Rename screen appears.

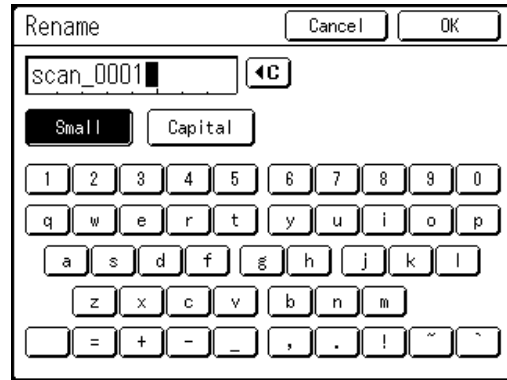

- 2) Touch the (C) button to delete the current name.


Note:

- You can also press the (C) key to delete.


- 3) Touch the text button and enter the data name one character at a time. Touch the Text Type button to change the display, and look for the text you want to enter. (p.132)
- 4) Touch [OK]. The data name is confirmed and the screen returns to the Scan Basic Screen.

3 Specifying a Save Location

- 1) Touch the save location input box.

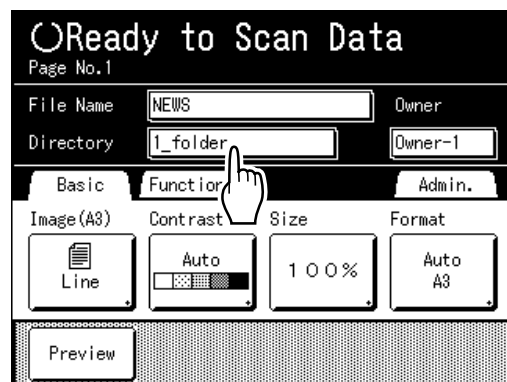

The Directory screen appears.

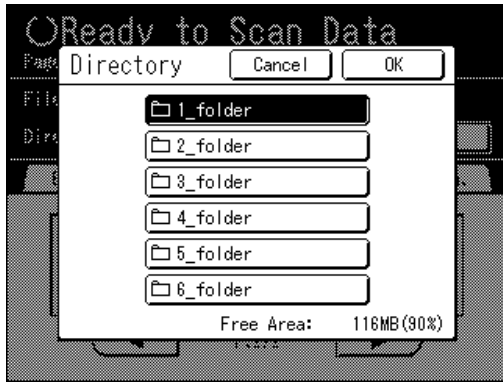

- 2) Touch the button of the folder in which to save data.


Note:

- The folder name of the "Directory" folder can be changed in "Admin."
(p.160)


- 3) Touch [OK].
The "Directory" folder is confirmed and the screen returns to the Scan Basic Screen.

4 Specifying an Owner.

- 1) Touch the owner input box.

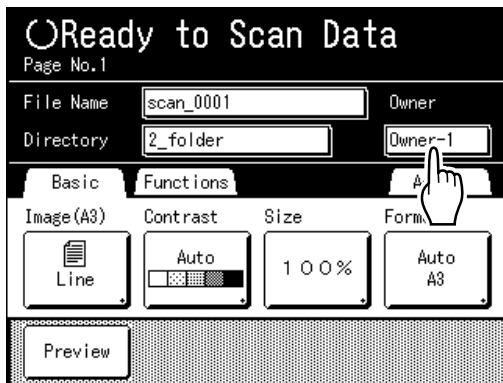

The Owner screen appears.

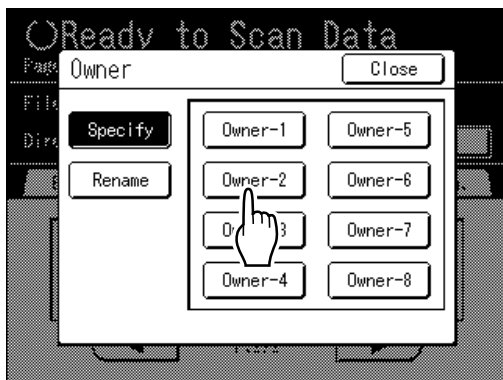


- 2) Touch the button of the owner to set.
The owner name is confirmed and the screen returns to the Scan Basic Screen.

Tip:


Changing the Owner Name

- 1) Touch [Rename] on the Owner screen.

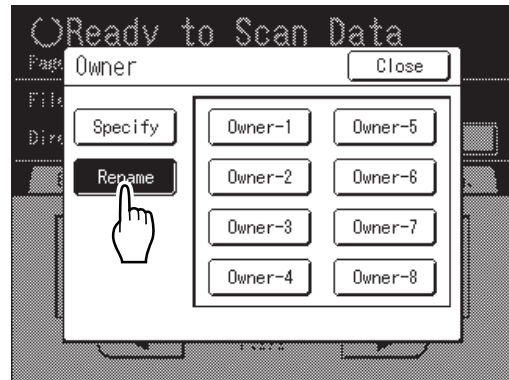

Touch the button of the owner to rename.
The Rename screen appears.

- 2) Touch the [C] button to delete the current name.
- 3) Enter the Owner name.
- 4) Touch [OK].

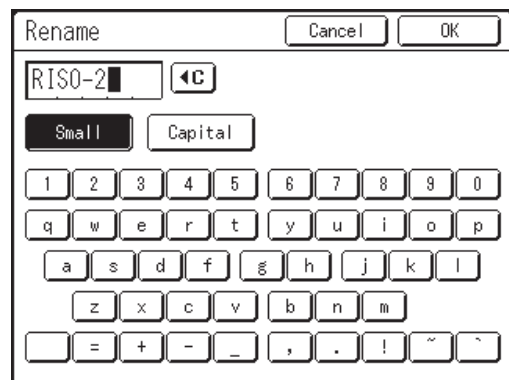

The owner name is confirmed and the screen returns to the Owner screen.


Specifying Paper Size

Specify the size at which to save the scanned original.

If the original is standard-sized, it will be saved as-is with **[Auto]**.


If the original is custom-sized, use the Format screen to save at size that differs from the size of the original.

1 Touch **[Format]** on the Scan Basic Screen.

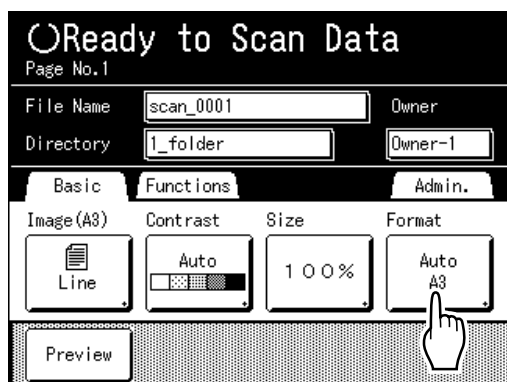


The Format screen appears.

2 Touch the paper size button to be set.

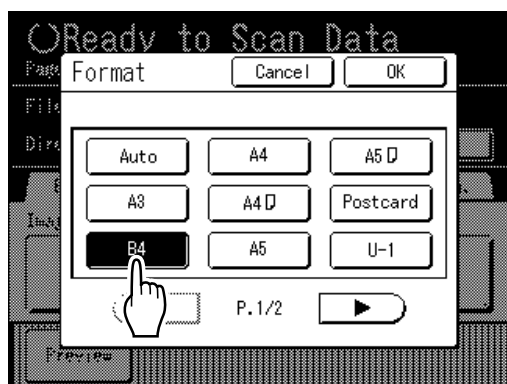


If you select **[Auto]**, the same size as the original will automatically be set.

3 Touch **[OK]**.

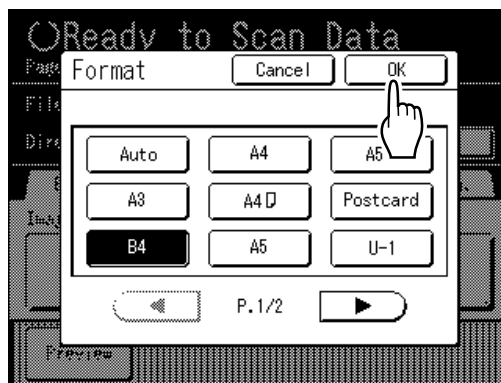

The paper size is confirmed and the screen returns to the Scan Basic Screen.

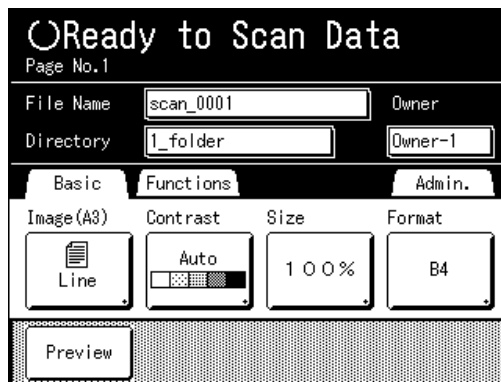

Retrieving Stored Data and Printing

[Storage Memory]

Retrieving Storage Data

1 Touch [Functions] on the Master Making Basic Screen.




2 Touch [Storage Memory].



The Storage Selection screen appears.

3 Touch the stored data to print.

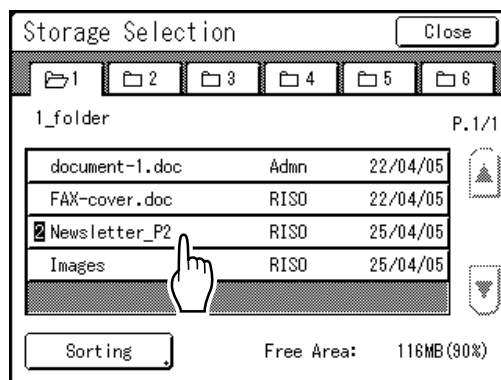

If you are selecting data stored in a different folder, touch that folder's tab.

Note:

- 2 is displayed at the beginning of the data name for 2-Colour originals.
- If the stored data is not shown on the screen, touch ▲ or ▼ to display.


The Storage Retrieve screen appears.

4 Confirm the retrieved data.

Use the thumbnail to determine whether the retrieved data is the data desired.


Note:

- For 2-Colour print data, you can switch thumbnails using the colour name tab to the bottom right.

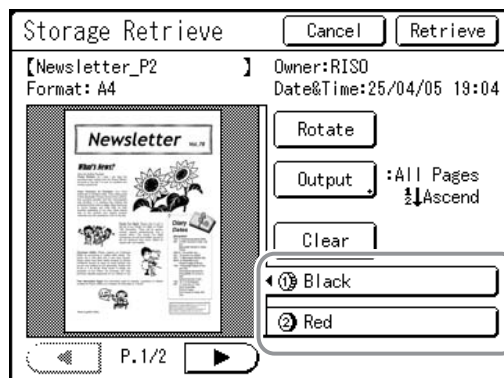


From the Storage Retrieve, you can confirm retrieved data and specify output settings.
See p.188 for operational details.

5 Touch [Retrieve].

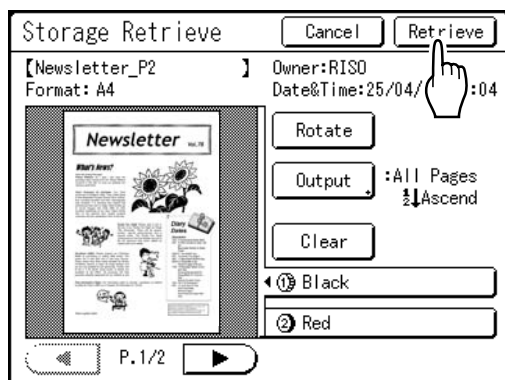

The storage data is retrieved and Storage Mode Basic Screen appears.

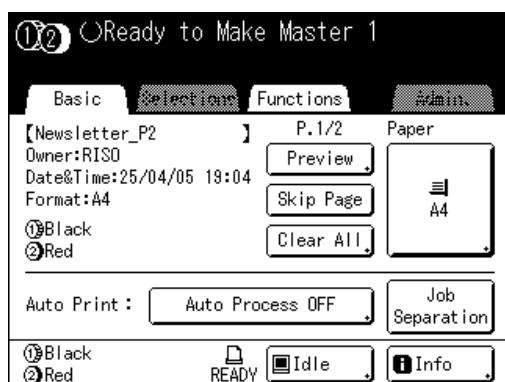


6 Press the key.

A master is made from the data.

After this, please follow the same operations for normally making a master/printing for 1-Colour and 2-Colour modes.


Using the Storage Retrieve Screen

Each section of the Storage Retrieve screen is shown below.

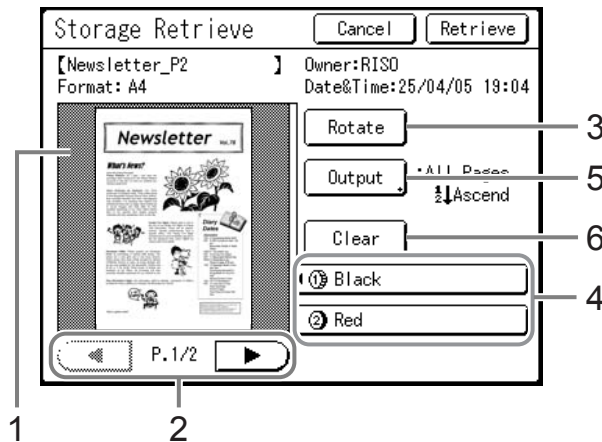


- 1) A thumbnail is displayed for each page.
- 2) If the data contains multiple pages, touch to change page.
- 3) Touch to rotate the storage data 180 degrees and output.
- 4) For 2-colour originals, select the tab for each colour to display its thumbnails.
- 5) **Output Range**

If the storage data consists of multiple pages, you can specify which pages to print. Touch **[Output]** and the Output screen appears.

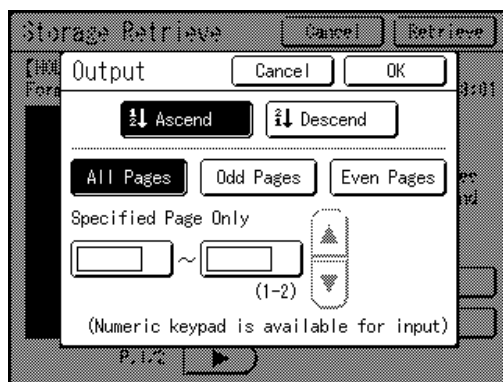

Touch the corresponding buttons to print all pages, only odd pages, or only even pages. You can also specify whether to print the selected pages in **[Ascend]** or **[Descend]** order.

To specify a page range, touch the page input box and touch either or to specify the pages.

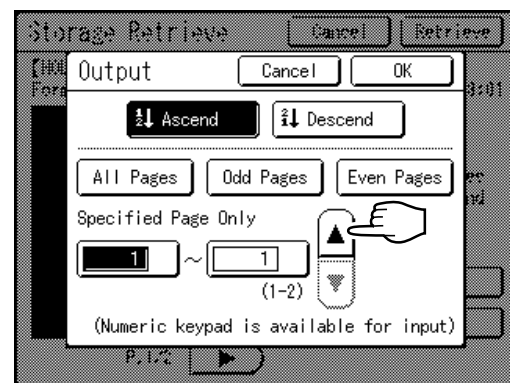

6) Clear

Touch **[Clear]** and a confirmation screen appears.



Touch **[OK]** to delete the data.

Changing the Data Order

You can change the order of the storage data displayed on the storage data selection screen.


Note:

- The factory setting is “Date - Ascend”.


1 Touch [Sorting].

Note:

- **[Sorting]** is inactive if there is no storage data or only one stored item.

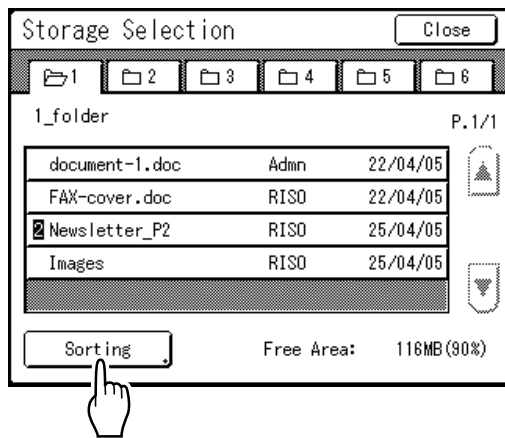

2 On the Sorting screen, touch the button of the order you want.

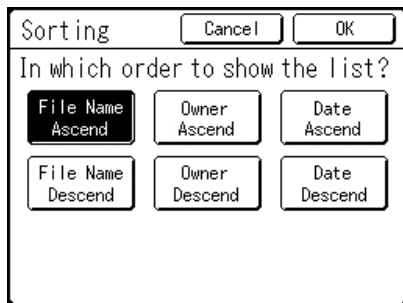

3 Touch [OK].

Returns to the Storage Retrieve screen.

Overlaying Storage Data onto a 1-Colour Print Job [Overlay]

When 1-Colour printing, you can overlay stored data onto a hard-copy original.

For example, this function can be used to overlay a stamp over multiple originals indicating "Sample".

This function cannot be used with the following functions.


- Ink Saving
- Top Margin
- Side Margin
- Storage Memory ("Overlay" images cannot be stored.)
- When sending original data from the computer

1 Place an original and load paper.

Place the original on Platen Glass or in ADF unit (option).

See the "Basic Operations" chapter for information on placing the original.

2 Touch [Functions] on the Master Making Basic Screen.

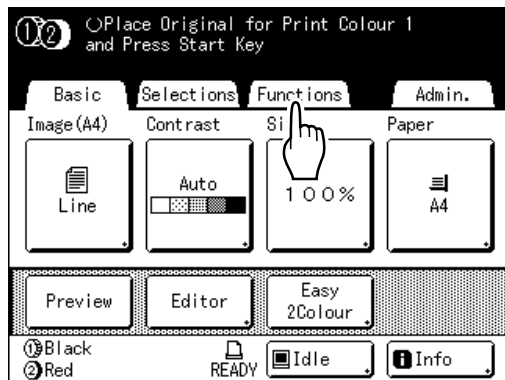


3 Touch [Overlay].




The Storage Selection screen appears.

4 Select the storage data to overlay.

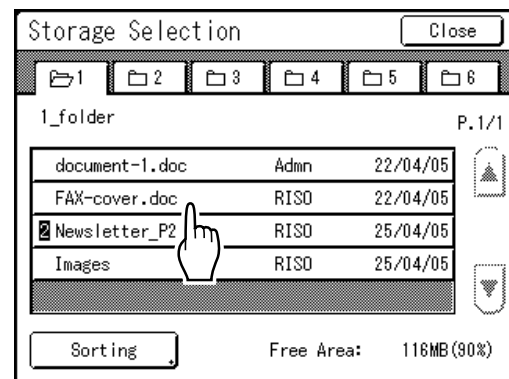

The Storage Retrieve screen appears.

5 Confirm the storage data and touch [Retrieve].

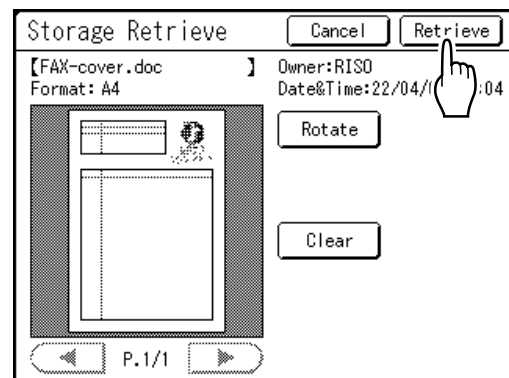

Note:

- If the storage data is separated into two colours, specify the colour (drum) of the side you want to print.

“Overlay” is set and the screen returns to the Functions screen.




6 Print.

For subsequent operations, see step 6 of “1-Colour Printing” (p.58).

Tip:

Overlaying Storage Data

The stored data overlays at the size it was saved. You cannot magnify/decrease the size to match the original or paper size.

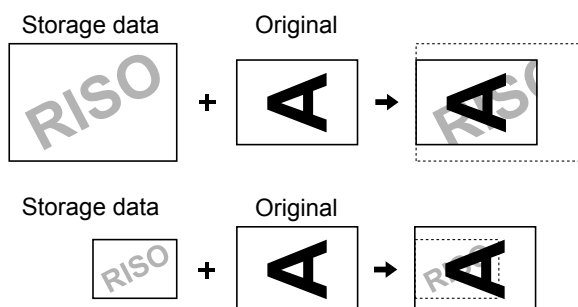


The storage data is overlaid after being centred at the top of the original. You cannot adjust the overlay position.

2-Colour Printing with the Original and Storage Data [Stamp]

When 2-Colour printing, you can create a master of the hard-copy original on one Drum 1 and a master of the storage data on Drum 2 in order to 2-Colour print.

For example, if you specify data for Company logo, etc., that colour insignia can be printed on consecutive pages.

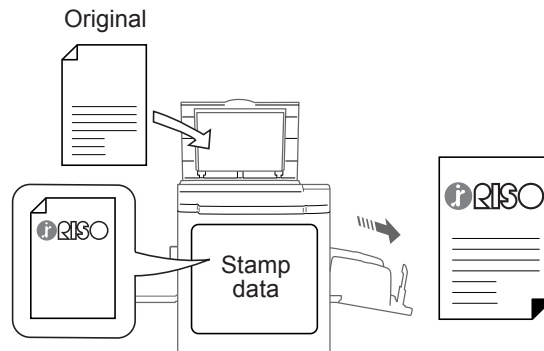

Important!:

- When “Stamp” is used, the printer automatically scans the hard-copy original and creates a master on Drum 1 (the black drum), and creates a master of the storage data on Drum 2 (the colour drum).
If both drums are colour drums, the original is automatically allocated to Drum 1 and the storage data to Drum 2.
You cannot set a specific drum.

This function cannot be used with the following functions.


- Easy 2Colour
- Storage Memory (“Stamp” images cannot be stored.)
- When sending original data from the computer

Specify the name data to insert.

Stamp data must be pre-specified from storage data.
See p.176 for information on creating storage data.


1 Touch [Stamp Data] on the Admin. screen.

See p.158 for operational details of the Admin. screen.

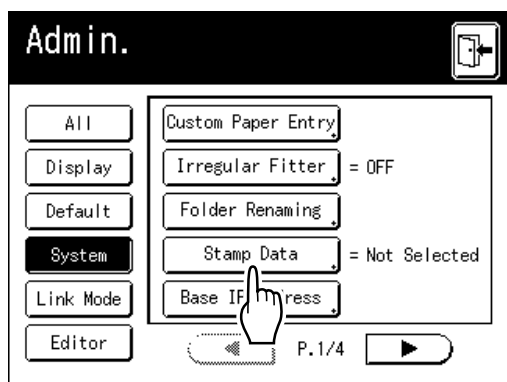

The Stamp Data screen appears.

2 Touch [Select Data].

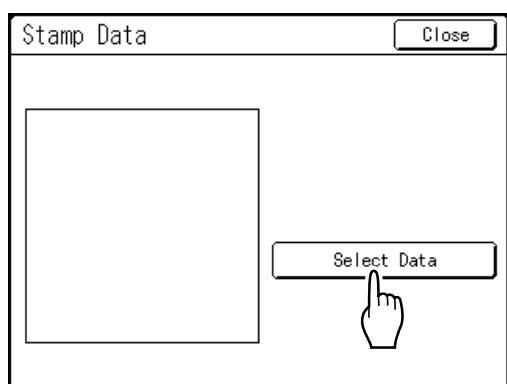


The Storage Selection screen appears.

Note:

- This screen is used when Stamp data is not set. If data is already specified, the screen from step 5 displays.


3 Touch the data to use as the [Stamp].

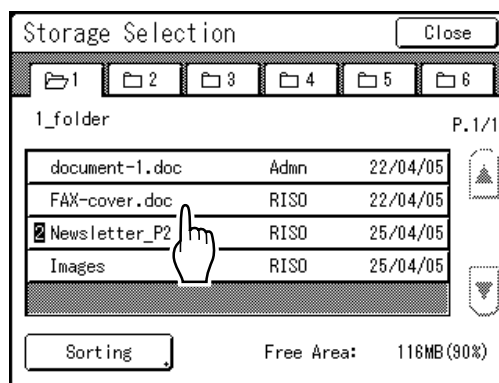

Note:

- See p.186 for details on using the Storage Selection screen.

4 Confirm the storage data and touch [Retrieve].

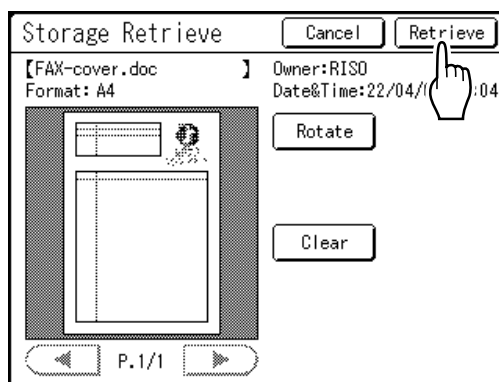


Note:

- See p.188 for information about the Storage Retrieve screen.

Returns to the Stamp Data screen.

5 Touch [Close].

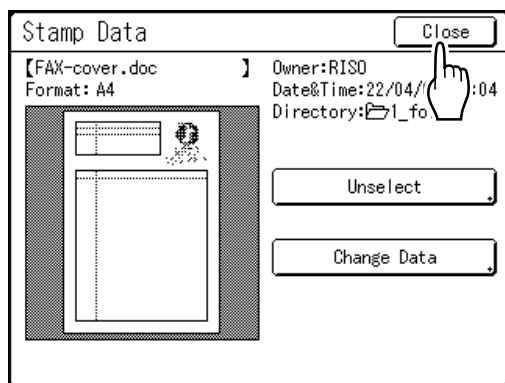

Note:

- To deselect the Stamp data, touch **[Unselect]**.
- To change the Stamp data, touch **[Change Data]**.

The Storage Selection screen appears.

6 Touch .

Note:

- Once specified, the Stamp data will remain the same until changed (or deselected) on the screen in step 5.


2-Colour Printing with [Stamp]

Pre-select 2-Colour Printing.

1 Place an original and load paper.

Place the original on Platen Glass or in ADF unit (option).
See the “Basic Operations” chapter for information on placing the original.


2 Touch [Functions] on the Master Making Basic Screen.

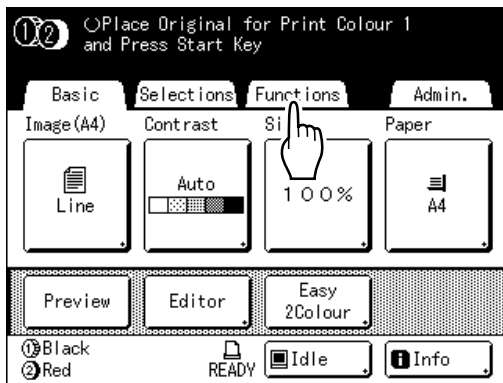

3 Touch [Stamp].

Important!:

- If data for the “Stamp” is not specified, the [Stamp] button does not display on the Functions screen.

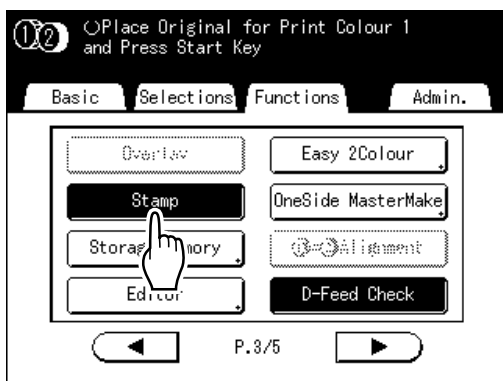


The Stamp is set.

4 Set the print functions.

You can make adjustments to the print functions as needed.

5 Press the key.

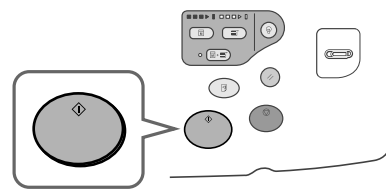

A master is made from the hard-copy original and the stamp data, and a proof printed.

For subsequent operations, follow the same procedures from step 11 (p.42) of “2-Colour Printing with 2 Originals”.

When using a Linked Printer (sold separately)

Print Functions for Using Linked Printers

The machine may be connected with Linked Printers for more economical printing operations.

Important!:

- The optional RISORINC-NET is required in order to connect the machine and Linked Printers.

2 special printing functions Auto-Link Function and Link Mode are available;

◆ Auto-Link Function


Automatically select an output device, the machine or a Linked Printer, based on a pre-determined number of copies (Link-Free Volume).

☞ p.163

“Auto Link” can only be used for 1-Colour printing. It cannot be used for 2-Colour printing.


In order to create and use storage data, the printer must be equipped with storage memory.

☞ p.176

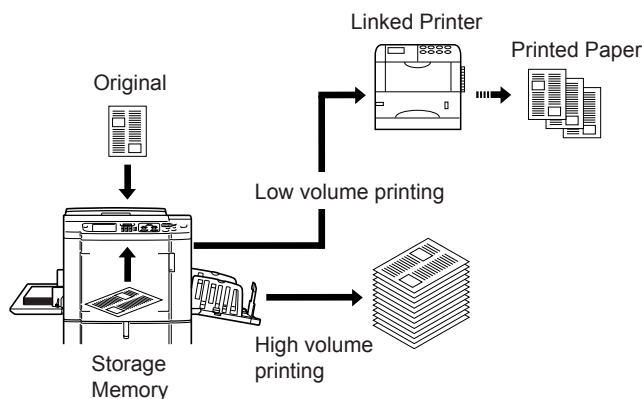

Automatically select an output device based on number of copies when printing from a computer.
(When “Online Auto-Link” is enabled)


☞ p.163

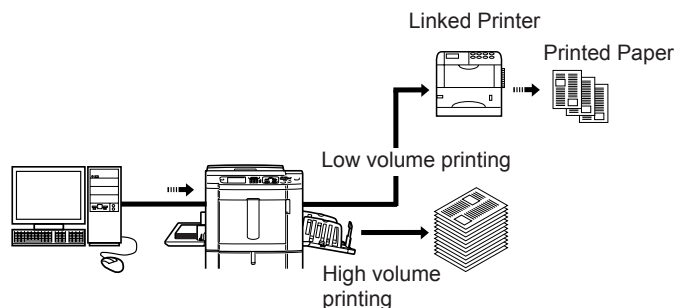

◆ Link Mode Function

The original is scanned on the machine and printed from the Linked Printer.

☞ p.202

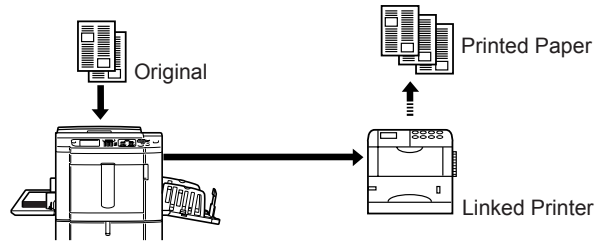

Special Linked Printer functions such as double-sided printing can be achieved.

Setting up a Linked Printer [Link Properties]

Linked Printer data must be entered in the machine in order to operate.

Important!:






- Make sure that the Linked Printer is physically connected to the machine. A Linked Printer cannot be recognized by the machine unless physically connected.
- Unless the Linked Printer data is entered in the machine, the device will not print, and its optional features will not be available.
- Enter information for each attached Linked Printer one device at a time.
- When there's only one Linked Printer (sold separately) to the machine, set "Linked Printer" as "One-to-One".







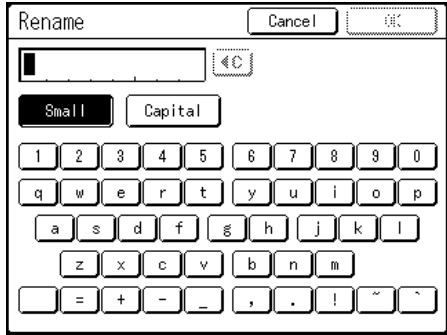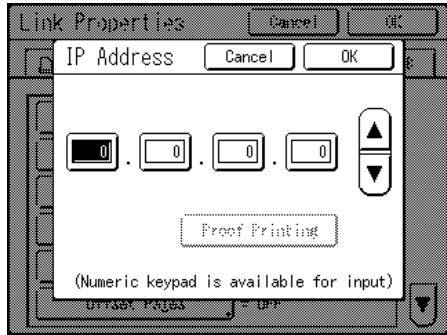


Note:



- "Link Properties" are explained below.
See "Link Mode" (p.163) for more information about Link Mode and other Admin. settings.

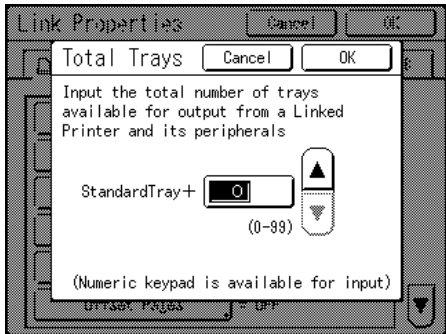Linked Printer Setup List

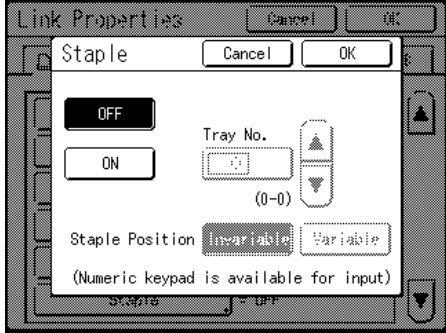—: Initial setting (factory default)

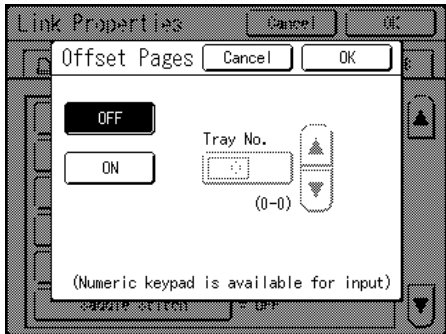Functions	Description	How to Enter
Printer Name Enter a name for the Linked Printer. Note: <ul style="list-style-type: none"> • The entered name will be displayed on the Link Mode screen. 		 <p>Touch character button to enter a new name. Once the name is entered, touch [OK] to store it as the Printer Name. See "Rename Screen" (p.132) for more details.</p>
IP Address Enter the IP address of the Linked Printer to connect to the network. Note: <ul style="list-style-type: none"> • Touch [Proof Printing] to execute a data transmission test to the Linked Printer. When successful, the test results will print from the Linked Printer. If the test fails, a Pop-Up Message displays. Touch [Cancel] and re-enter correct settings. • [Proof Printing] is disabled until "Base IP Address" is correctly entered on the Admin. screen. p.160 		 <ul style="list-style-type: none"> • Use  , or enter using the Print Quantity Keys. • To move to another field, touch the field, or press the  key to move.


Functions	Description	How to Enter
Total Trays Enter total number of trays other than the Standard Tray. Important!: <ul style="list-style-type: none"> If the number is less than the number of trays set in other options, other options will be disabled. Enter the actual number of trays available for the linked printer. Entering incorrect number will cause an error and the linked printer will not print. 	0-99	 <ul style="list-style-type: none"> When printing from the standard tray of the Linked Printer, enter [0]. Use  , or enter using the Print Quantity Keys.
Staple Set "Staple" ON if the device has the capability. Also set the tray number *1 used by the "Staple" function and whether it is fixed/variable.	OFF: No Staple capability (disabled) ON: Staple function available Tray number used, Invariable/variable	 <p>Touch to select a button. Use  , or enter using the Print Quantity Keys for "Tray No.".</p>
Offset Pages Set "Offset Pages" ON if the device has the capability. Also set the tray number *1 used by the "Offset Pages" function.	OFF: No Offset Pages function (disabled) ON: Offset Pages available Tray number used	 <p>Touch to select a button. Use  , or enter using the Print Quantity Keys for "Tray No.". "Offset Pages" and "Punch" may be configured using similar steps.</p>

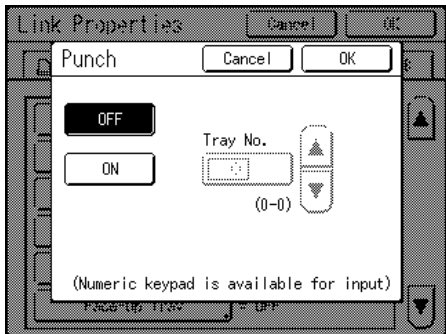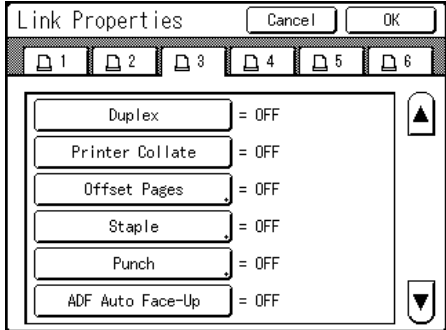Functions	Description	How to Enter
Punch Set "Punch" ON if the device has the capability. Also set the tray number *1 used by the "Punch" function.	OFF: No Punch capability ON: Punch function available Tray number used	 <p>Touch to select a button. Use ▲ ▼, or enter using the Print Quantity Keys for "Tray No." "Offset Pages" and "Punch" may be configured using similar steps.</p>
Duplex Set "Duplex" ON if the device has the capability.	ON/OFF	 <p>"Duplex", "Printer Collate", "Output Reversal", "ADF Auto Reversal" and "Mailbox" may be configured using similar steps. Touch button to switch between OFF/ON.</p>
Printer Collate Set "Printer Collate" ON if the device has the capability.		
Output Reversal Set "Output Reversal" ON if the device has the capability.		
ADF Auto Reversal Set "ADF Auto Reversal" ON if the device has the capability.		
Mailbox Set "Mailbox" ON if the device has the capability.		


*1 The tray number may differ depending upon the model of the Linked Printer.

Setting up a Linked Printer


- 1 Touch [Link Mode] on the Admin. screen.

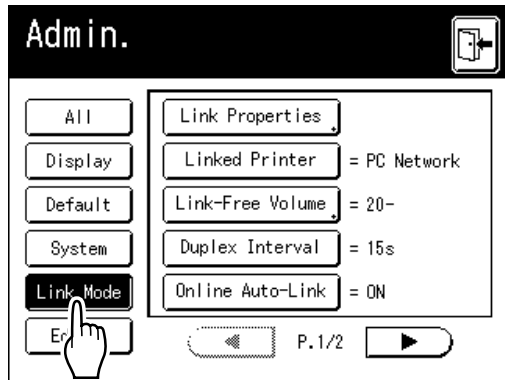

- 2 Touch [Link Properties].

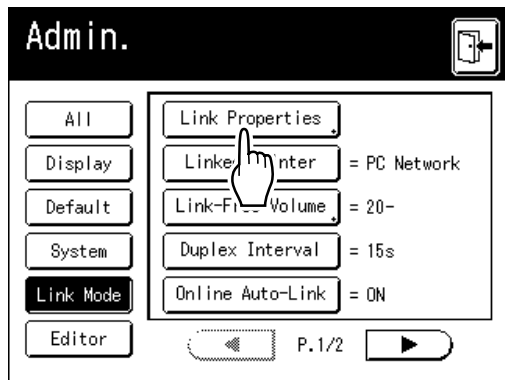


- 3 Select a tab for the Linked Printer.

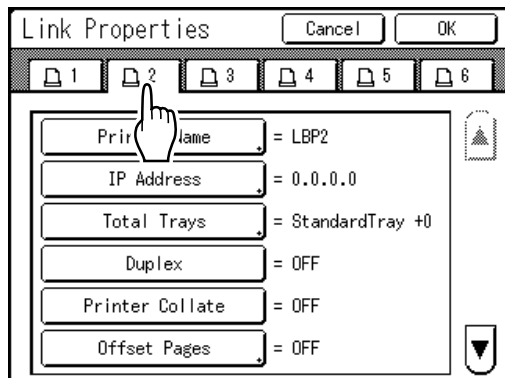

Note:

- Up to 6 Linked Printers may be entered.

- 4 Select the button to enter information.

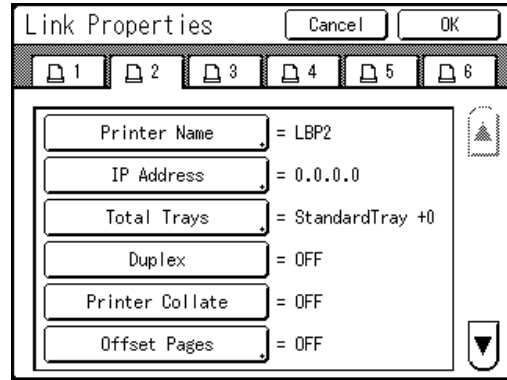

Note:

- To display other functions that are not visible on the screen, touch ▲ or ▼.


- 5 Change settings.

See "Linked Printer Setup List" (p.198) to change settings.

Note:

- If the function has additional Setup screens, enter necessary settings then touch [OK]. Returns to the Link Properties screen. The changes are updated. Touch [Cancel] to cancel the changes and return to the Link Properties screen.

- 6 Touch .

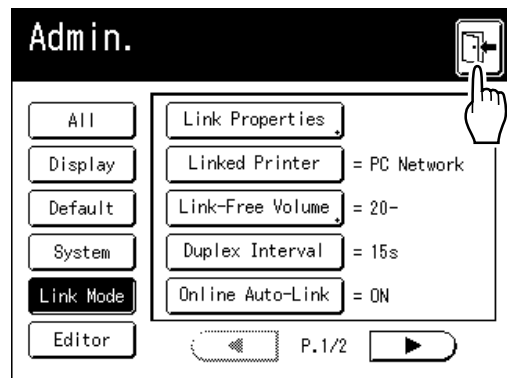



Returns to the Basic Screen. "Admin." settings are updated.


Printing Scanned Original from a Linked Printer [Link Mode]

The mode in which an original is scanned into the machine and printed from a Linked Printer is called "Link Mode". In Link Mode, the original is printed from the Linked Printer, regardless of the number of copies to print.

1 Switch to Link Mode.

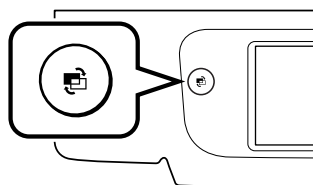

Press the  key on the machine to switch to Link Mode.
From Mode Screen, touch **[Link Print]** to switch to the Link Basic Screen.
p.22

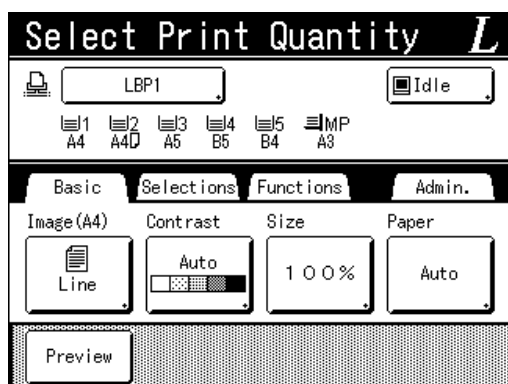

Note:

- While the message "Starting Up RISORINC-NET / Acquiring Linked Printer Configuration Data Please Wait a Moment" is displayed on the machine, the Linked Printer information is being retrieved via the network. Wait until the message disappears.

2 Place the original.


Place the original on Platen Glass or in the ADF unit (option).

For information about placing the original, see step 4 in "Printing from a Paper Document or Book" (p.39).


3 Select printing paper.


If the Linked Printer has multiple feed trays, touch **[Paper]** to specify the tray (paper size).

1) Touch **[Paper]** in the Link Basic Screen.


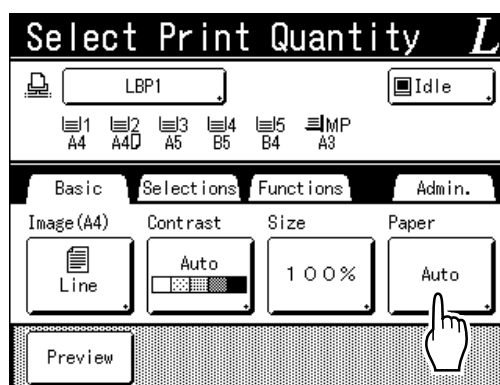


2) Select the desired paper size.

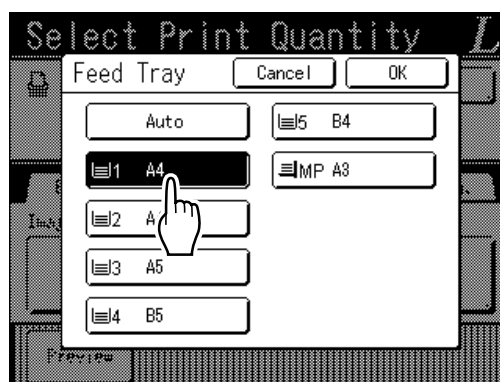

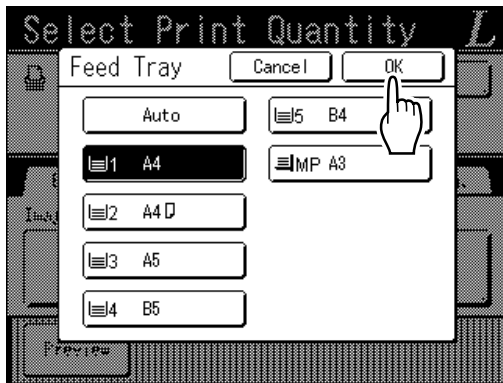3) Touch [OK].**Tip:**

Using a Linked Printer's Universal Tray
If the Linked Printer's paper feed tray is set to "Universal", the "Universal" button is displayed on the machine's Feed Tray screen. Follow the steps below to specify the paper size loaded in the Linked Printer's Universal Tray.

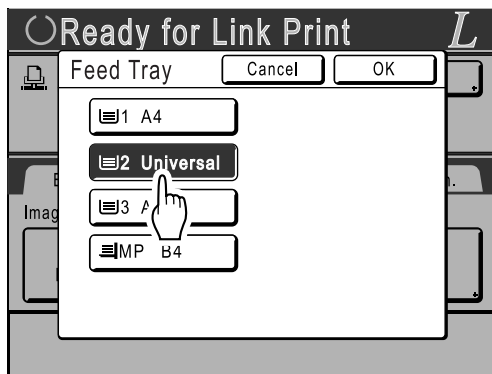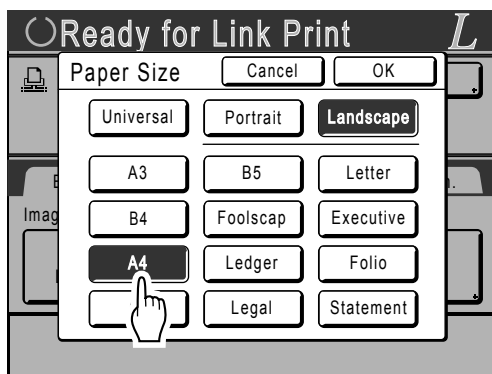1) Touch [Universal] on the Feed Tray screen.**2) Touch the button corresponding to the size of the paper loaded in the "Universal" tray.****3) Touch [Portrait] or [Landscape].****Note:**

- When "Universal", "A3", "B4", "Ledger", "Foolscap", "Legal" or "Folio" is selected in step 2, "Portrait"/"Landscape" options are not displayed.
- If the paper size specified in "Universal" is different to the size of the paper actually set, correct printing will not be possible.

4) Touch [OK].

Returns to the Feed Tray screen. Paper size is updated.

4 Select the print functions as needed.


The following functions are available:

- Image Processing mode (p.68)
- Scanning Contrast (p.75)
- Size (p.76)
- Dot Process (p.70)
- Memory (p.140)
- Contrast Adj (p.72)
- Tone Curve (p.73)
- Book Shadow (p.82)
- Top Margin (p.103)
- Preview (p.107)
- Overlay (p.190)
- Storage Memory (p.186)
- Digital Copy Count (p.154)

Note:

- If the Linked Printer has optional devices such as a duplex unit, the optional functions are also available.
p.205
- Print Speed, Contrast, or Positioning cannot be adjusted.
- When a computer sends an output signal to the machine while it is in operation, such interrupting data may take priority, initiating a new print job over current one.
We recommend that you set "Reservation" on the Admin. screen to set higher priority on output jobs from Linked Printers. Data received from the computer within specified time frame will not be processed.
p.149

5 Enter the number of copies using the Print Quantity Keys.

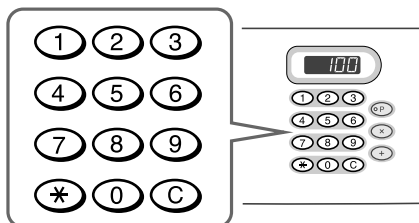


The number is displayed on the Print Quantity Display.

Note:

- To change the number, press the **C** key, then re-enter the correct number.

6 Press the key.

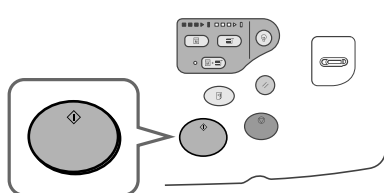


The scan of the original begins.

The scanned original data is sent to the Linked Printer, and the specified number of copies is printed from the Linked Printer.

Note:

- The current settings can be stored in Job Memory for future retrieval of the same settings.
p.140

7 Press the key when the print job is complete.

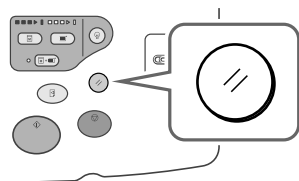

The setting returns to its default value.


Tip:

When multiple Linked Printers are connected to the network


When multiple Linked Printers are connected to the network, output device can be selected as needed.

To output to another Linked Printer, follow the steps below:

- 1) Touch **[Printer Name]** in the Link Basic Screen.

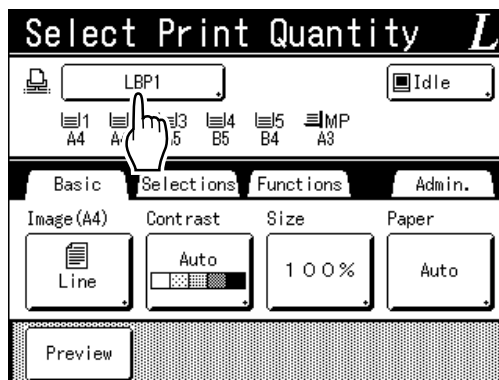

- 2) Select the Linked Printer to print from.

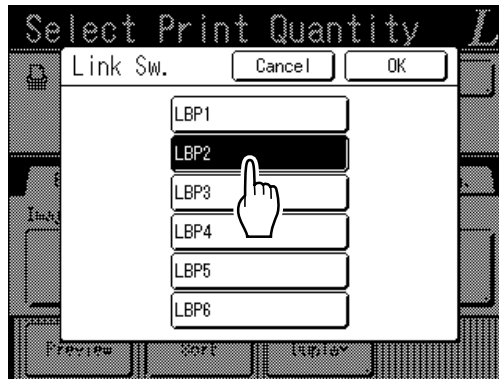

Note:

- If a Linked Printer is experiencing an error, that device is not available to be selected.

- 3) Touch **[OK]**.

Note:

- If an error occurs on the selected Linked Printer while in Link Mode, the Link Sw. screen opens. Reselect another Linked Printer currently available for printing. For information on purchasing additional Linked Printers, contact your dealer (or authorised service representative).


Using Optional Functions on a Linked Printer

Steps for setting up optional functions are shown below. These are available when the Linked Printer has an optional device such as a sorter or a duplex unit installed.


Note:

- See Linked Printer User's Guide for further details on each function.

1 Touch [Functions] in the Link Basic Screen.

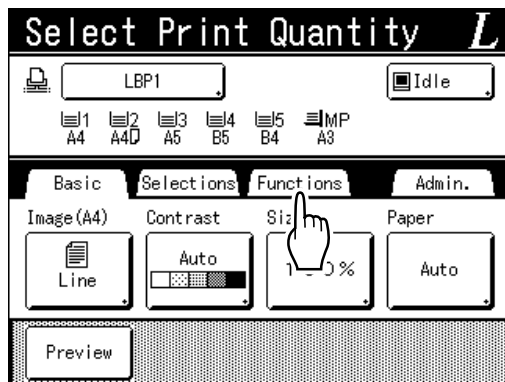

2 Select a function to modify.


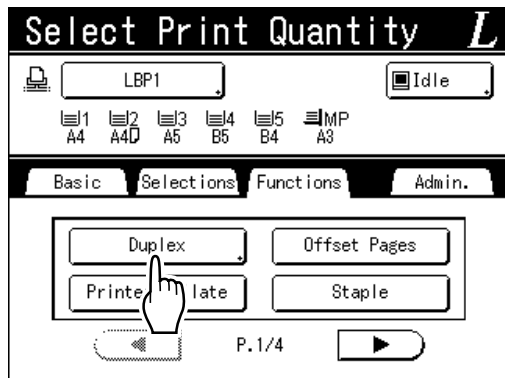







3 Make changes as needed.

See "Configurable Functions" (p.206) to select correct settings.

Configurable Functions

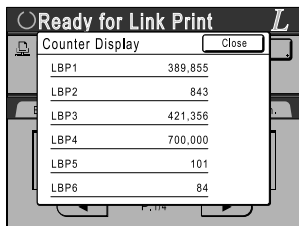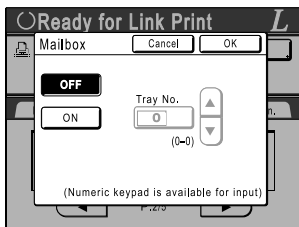—: Initial setting (factory default)

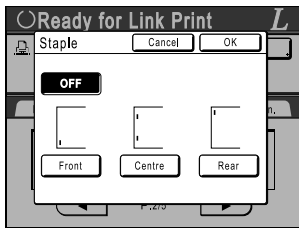Functions	Description	Screens and Steps	Related Admin. Settings
Counter Display Displays the number of printed copies for each Linked Printer recognized by the machine.	---		---
Mailbox Select a paper receiving tray as an Output Tray.	Tray No. 0 to n (n is the total number of trays set on [Total Trays] on the Admin. screen.)	 <p>Touch   or enter using the Print Quantity Keys.</p>	Total Trays: The total number of trays. Set at 1 or more.
Offset Pages Enable a feature to alternately eject multiple-page print copies.	ON/OFF	---	Offset Pages: Available only when "Offset Pages" option is ON.
Staple Specify the positioning of staples on printed copies.	Differs depending on how the [Staple Position] is set on the Admin. screen. <ul style="list-style-type: none"> When set to [Invariable]: <u>ON/OFF</u> When set to [Variable]: <u>OFF</u> /Front/Centre/Rear 	 <p>Touch to select a button.</p>	Staple: Available only when "Staple" option is ON.
Punch Select whether to punch holes on the printed copies.	ON/OFF	---	Punch: Available only when "Punch" option is ON.
Output Reversal Sets a function to print in reverse order the originals were scanned from the ADF unit.	ON/OFF	---	Output Reversal: Available only when "Output Reversal" option is ON.

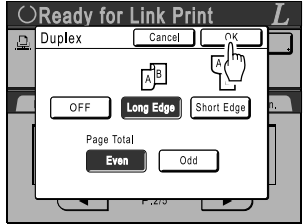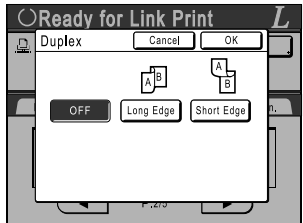Functions	Description	Screens and Steps	Related Admin. Settings
Printer Collate Select to retain original page order of the multi-page prints while ejecting into a single tray.	ON/OFF	---	Printer Collate: Available only when "Printer Collate" option is ON.
Duplex Print on both sides of the paper. Different screens and steps apply depending on whether or not the ADF unit (option) is installed. Note: <ul style="list-style-type: none"> For instructions on how to print double-sided, See "Duplex Printing" (p.208). 	<ul style="list-style-type: none"> When the ADF unit is installed OFF/<u>Long Edge</u>/Short Edge Page Total: Odd/<u>Even</u> When the ADF unit is not installed <u>OFF</u>/Long Edge/Short Edge 	<ul style="list-style-type: none"> When the ADF unit is installed  <p>Touch to select a button.</p> When the ADF unit is not installed  <p>Touch to select a button.</p> 	---

Important!:

- Some optional functions may not be enabled concurrently, depending on the model and option configuration of the Linked Printer.


Duplex Printing [Duplex]

Double-sided printing is possible when a Duplex Unit (option) is installed to a Linked Printer.

Note:

- The “Duplex” settings can be made from either Master Making or Print Functions screens. Linked Printer will print following the specifics set via either of these screens.

1 Touch [Duplex] on the Functions screen.

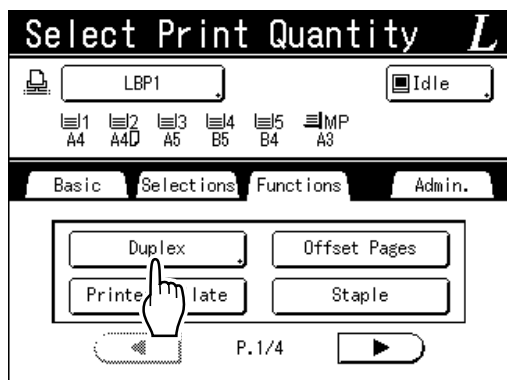

2 Set duplex binding direction.

Set the binding direction as shown below. The combination of scanning orientation and binding direction will result in different styles.

Scanning orientations and duplex binding directions


Original Orientation	Vertical (Portrait)	Horizontal (Landscape)
Binding Direction		
Long Edge		
Short Edge		

3 Select the number of originals.


When scanning an original from the ADF unit (option), select either **[Even]** or **[Odd]** numbers to match the number of original sheets.

Important!:

- This step is not necessary unless using the ADF unit. Continue on to step 4.

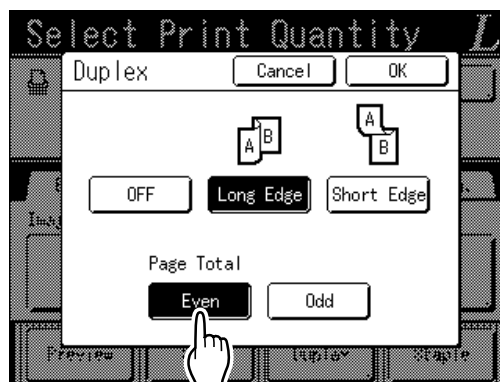

4 Touch [OK].

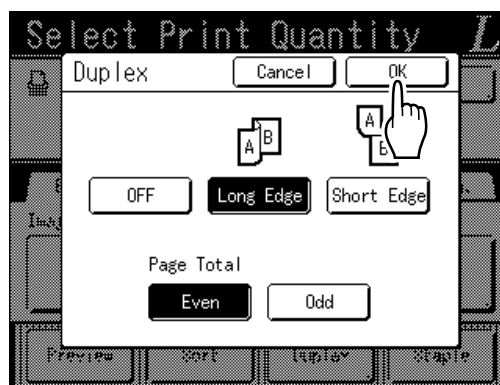

Note:

- To cancel Duplex Printing, touch **[OFF]** then **[OK]**.

5 Place the original.

Note:


- For information about placing the original, see step 4, "Printing from a Paper Document or Book". (p.39)
- To scan a single sheet of an original, place it on the Platen Glass.
- When Duplex Printing from odd number of originals scanned in the ADF unit, the reverse side of the last page will be blank.

6 Select Print functions as needed.

The following functions are available:

- Image Processing mode (p.68)
- Scanning Contrast (p.75)
- Size (enlargement/reduction) (p.76)
- Dot Process (p.70)
- Memory (p.140)
- Contrast Adj (p.72)
- Tone Curve (p.73)
- Book Shadow (p.82)
- Top Margin (p.103)
- Preview (p.107)
- Overlay (p.190)
- Storage Memory (p.186)
- Digital Copy Count (p.154)

7 Enter the number of copies using the Print Quantity Keys.

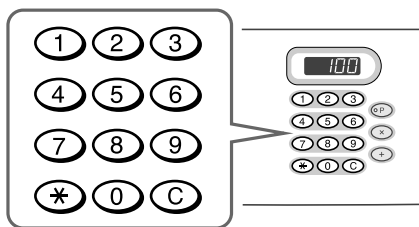


The number is displayed on the Print Quantity Display.

Note:

- To change the number, press the **C** key, then re-enter the correct number.

8 Press the key.

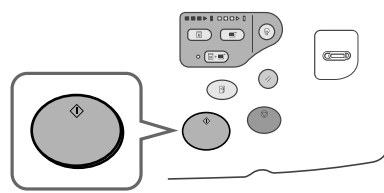


The next steps are different, depending on whether the original is scanned from Platen Glass, or from the ADF unit.


Perform one of the following steps:

Important!:

- Either Platen Glass or ADF unit may be used, but not both at a time.

◆ Using the Platen Glass

Place the first original document on the Platen Glass, wait for the message "Duplex Processing for Linked Printer" to disappear, then place the second original and press the  key.

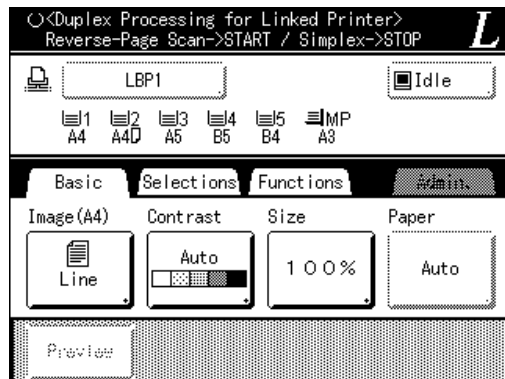


Once data for both sides of the paper is transmitted, the Linked Printer will print the specified number of copies.

To print multiple Duplex Print copies, repeat steps 5-7 of Duplex Printing.

Important!:

- Once the first original is scanned, the next original must be placed within pre-determined Duplex Interval period on the Admin. screen (p.163). Failure to do so will result in the Linked Printer printing one side only.

Note:

- Pressing the  key without placing the second original will also result in the Linked Printer printing one side only.
- Setting adjustment can be made on the following functions after placing the second original and before its scan starts:
 - Image Processing mode (p.68)
 - Scanning Density (p.75)
 - Size (enlargement/reduction) (p.76)
 - Dot Process (p.70)
 - Contrast Adj (p.72)
 - Tone Curve (p.73)
 - Digital Copy Count (p.154)

◆ **Using the ADF unit**

The top sheet is scanned first.

As each original page is scanned, the Linked Printer prints specified number of copies.

Replacing Consumables


Check for Remaining Amount of Consumables

The machine checks and reports on remaining amount of ink, master, as well as the space left in the disposal box.


Note:

- The report may not be displayed if detection fails.
- The reported amount is for reference only and may not be perfectly accurate.

1 Touch [i Info] on the Basic Screen.

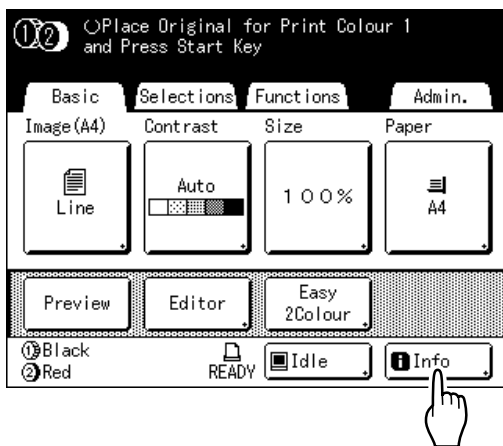

2 Check for remaining amount of consumables.

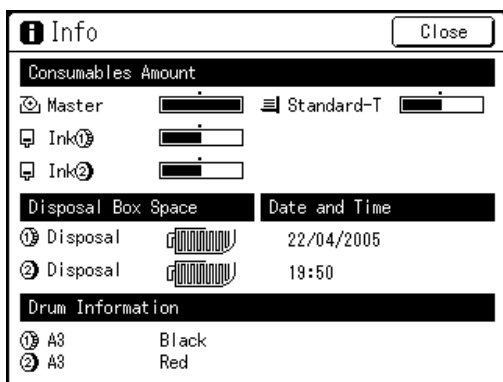

When running low, be sure to restock supply.

- Master (p.213)
- Ink (p.216)
- Master Disposal (used master) (p.218)

Display Details

Indicator/Message	Description
	The black bar indicates the remaining amount. Ex: approximately 10% left
(Unknown), ---, no display	Indicates that consumable data is not available, is not set, etc.

Tip:

i Information Button

i icon on the **i** Information Button displays current status of the consumables as detected by the machine.

The **i** icon will change depending on the matching information detected from the consumable.

- When matching information was correctly retrieved from the consumable **i** (normal display)
- When matching information is not available **i** (grey display)

When the **i** icon is greyed, the remaining amount of master/ink cannot be displayed.

When the master material or ink runs low, (master) or (ink) icon blinks on the right of the button to let you know that the item should soon be replaced.

Note:

- If the machine is unable to retrieve matching data from the consumable, you must enter the correct setting value.
p.244


Replacing the Master Roll

When the Master Roll is depleted, a message is displayed and the machine stops. Replace with a new Master Roll.

Important!:

- For the Master Roll, it is recommended to use the products specified by RISO.
- Keep the power ON while replacing the master.

1 Check the indicator of the Master Making Unit Release Button is ON.

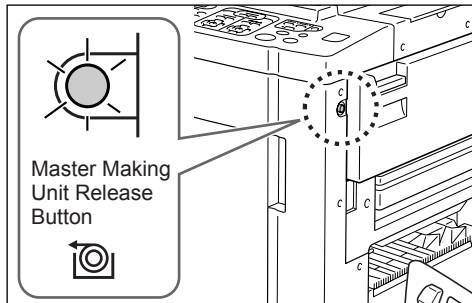


If the indicator is off, press the Master Making Unit Release Button to turn it on.

Important!:

- While the Print Drum is pulled out, Master Making Unit cannot be pulled out. Return the Print Drum into position and press the Master Making Unit Release Button.


☞ p.220

2 Open the Master Making Unit Removal Cover.

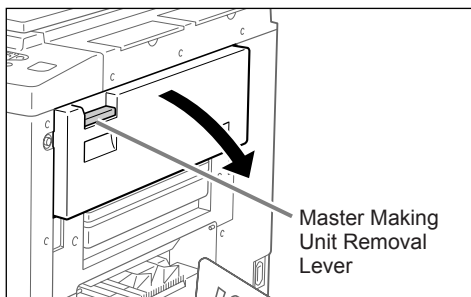


Grasp the Master Making Unit Removal Lever and pull out to open.

3 Pull out the Master Making Unit.

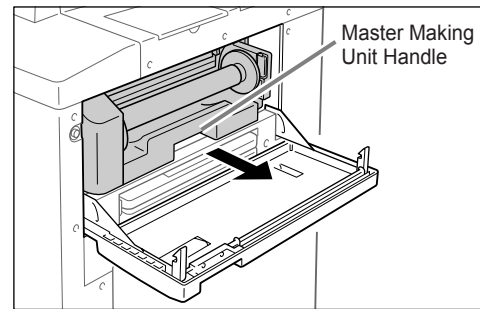


Grasp the Master Making Unit Handle and pull forward.

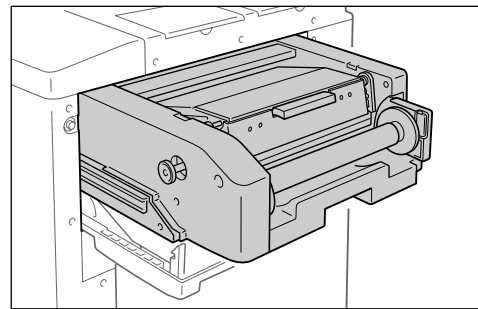


Pull out slowly until it stops.

4 Open the Master Making Unit Cover.

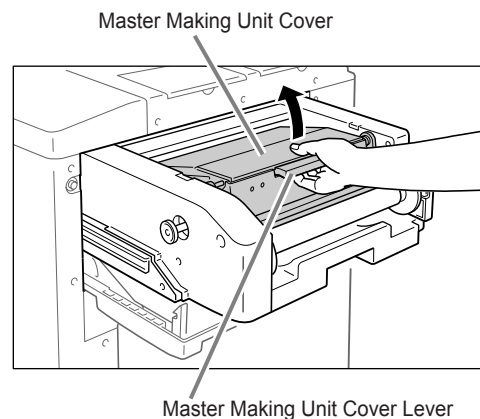


Grasp the Master Making Unit Cover Lever and open the Master Making Unit Cover.

5 Open the Master Roll Holder.

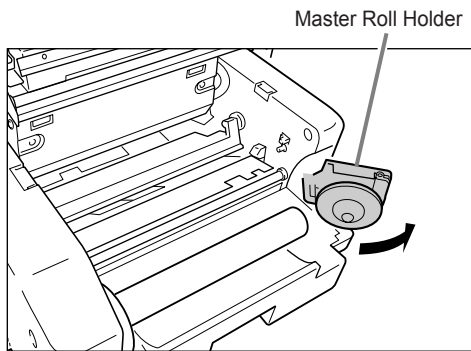


6 Remove the depleted Master core.

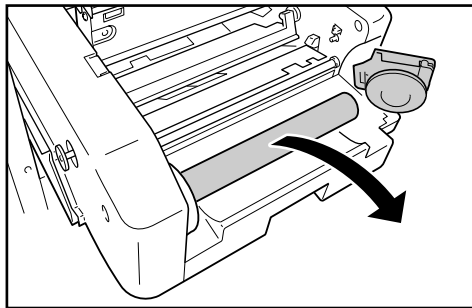

Note:

- Dispose the depleted master core according to the disposal rule of your local community.
p.223

7 Install a new Master Roll.

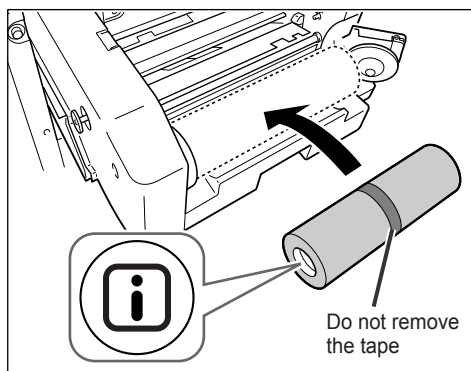


Remove the plastic shrink wrap from the new Master Roll, and place in with the **i** mark to the left.

Important!:


- Take care not to damage the **i** section when removing the shrink wrap.
If the **i** section is bent or the perforation cut, the master will become unusable.
- Do not remove the tape yet.

8 Close the Master Roll Holder.

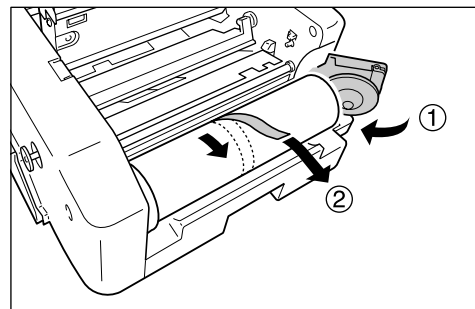

Remove the tape once the Master Roll Holder has been closed.

9 Insert the leading edge of the master under the Master Guide Flap.

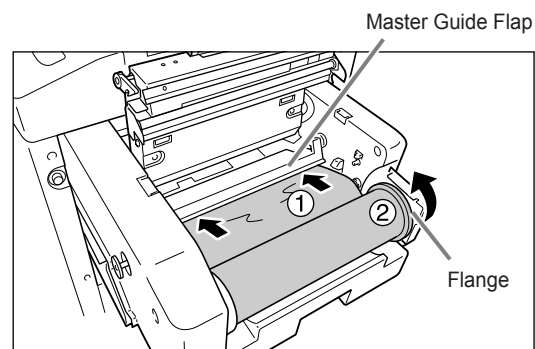


Insert the leading edge of the master into its entrance under the Master Guide Flap and advance it as far in as it will go (①). If the Master is loose, turn the flange at the right towards the rear and rewind (②).


Tip:**If You Cannot Insert the Master**

Insert the leading edge of the Master using the following steps.


- 1) **Raise the Master Guide Flap**
Turn the dial on the edge of the Master Guide Flap towards the rear and raise the Master Guide Flap.
- 2) **Pull out the master to the line indicated by the arrow.**
- 3) **Lower the Master Guide Flap.**

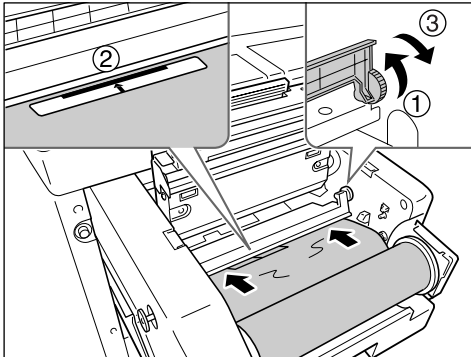

10 Return each part to its original position.

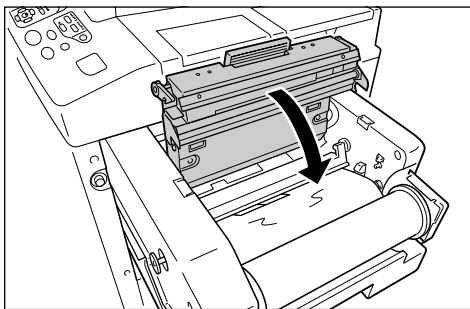


Close the Master Making Unit Cover.

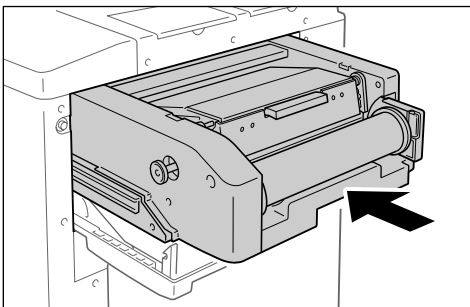

Slowly return the Master Making Unit to the position where a beep sounds.

11 Close the Master Making Unit Removal Cover.

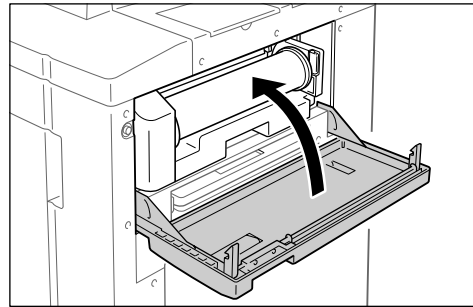

Replacing the Ink Cartridge

When the ink is depleted, a message is displayed and the machine stops.
Replace with a new Ink Cartridge.


⚠ Caution:

- Ink may be left on the area around the Print Drum, so take care not to smudge your hands or clothes.
- Wash immediately with soap if you should get ink on your hands, etc.


Important!:

- For the Ink Cartridge, it is recommended to use the products specified by RISO.
 - Keep the power ON while replacing the Ink Cartridge.
 - Replace with an Ink Cartridge of the same ink colour. If you want to change the ink colour, replace the Print Drum itself.
- 📖 p.220

1 Open the Front Cover.

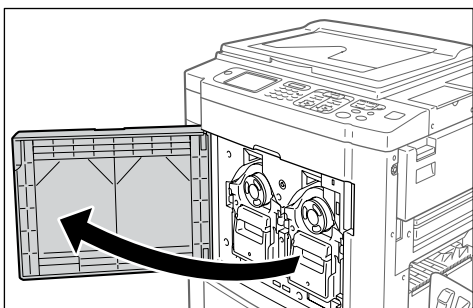

2 Pull the empty Ink Cartridge out of the holder.

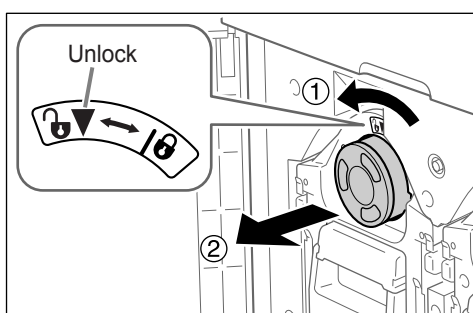


Turn the Ink Cartridge to the counter clockwise (🔓) and then pull it out.

Note:

- Dispose the empty Ink Cartridge according to the disposal rule of your local community.


3 Remove the cap on the new Ink Cartridge.

Turn the Ink Cartridge cap to remove.

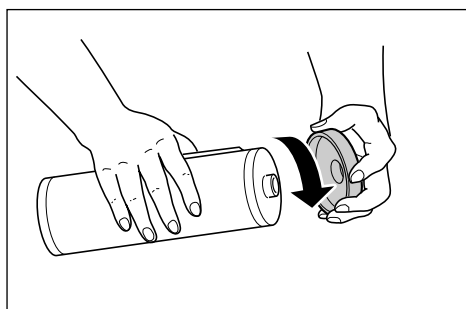



Important!:

- Do not touch or give impact to the outlet surface of the new Ink Cartridge.
Do not peel off the label beside the Ink Cartridge opening.

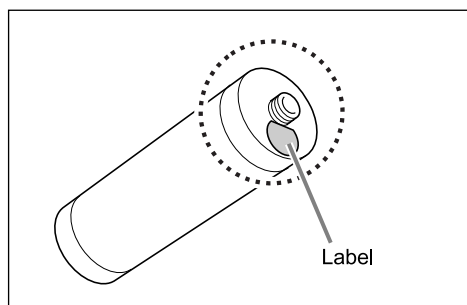


Note:


- You can store the ink cartridge cap on the right side of the platen glass.

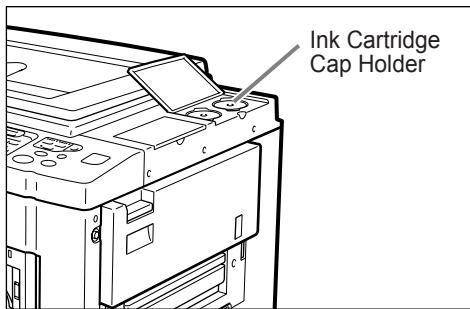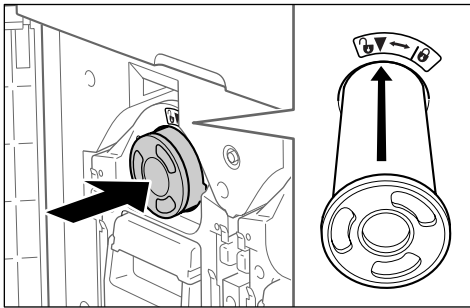**4 Insert the new Ink Cartridge.**

Align the arrow on the Ink Cartridge to the ▼ mark on the drum unit, and insert until it stops.

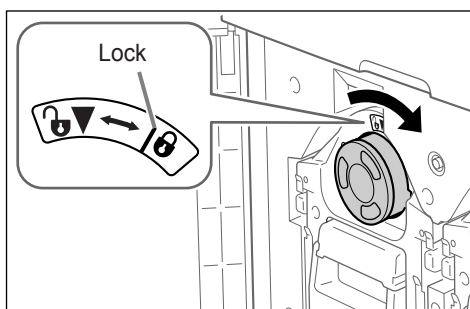5 Lock the Ink Cartridge.

Turn the Ink Cartridge clockwise (↻) and lock in position.

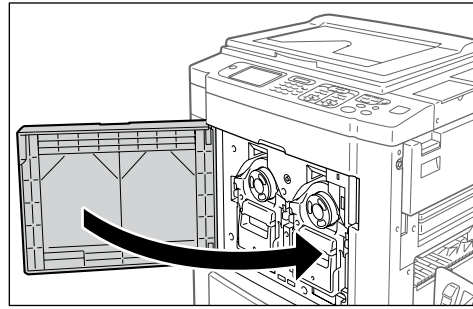6 Close the Front Cover.

Emptying the Master Disposal Box

Used masters are held in the Master Disposal Box. When the Master Disposal Box is full, a message displays and the machine stops. Discard the used masters.




⚠ Caution:

- Wash immediately with soap if you should get ink on your hands, etc.


This machine has two master disposal boxes, one for Drum 1 and one for Drum 2. The procedures are same for both. The master disposal box for Drum 1 is explained here.

1 Remove the Master Disposal Box.

Grasp the Master Disposal Box handle and pull the box forward.

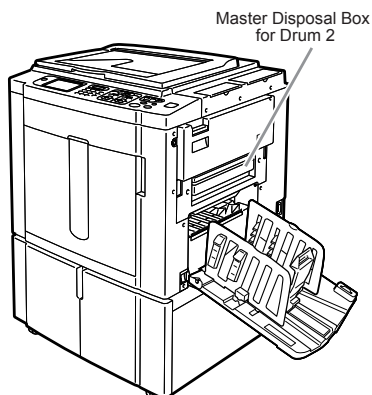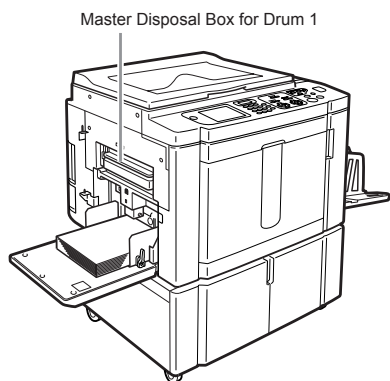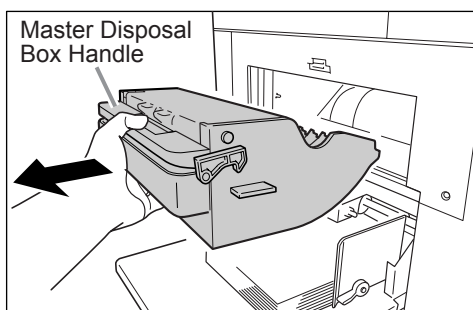


2 Discard the ejected masters.

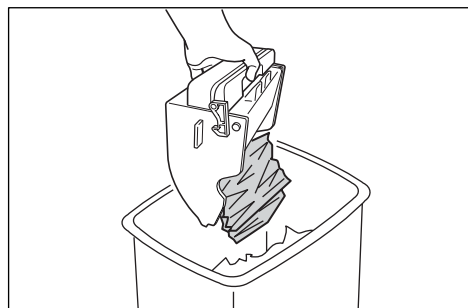


Tilt the Master Disposal Box down and discard the used masters.

Note:

- Dispose the ejected masters according to the disposal rule of your local community.
p.223
- If used masters get stuck, hold the Master Disposal Box tilted downward and squeeze the push-out lever to release any remaining masters.

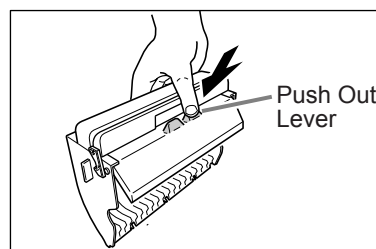

3 Place the Master Disposal Box into position.

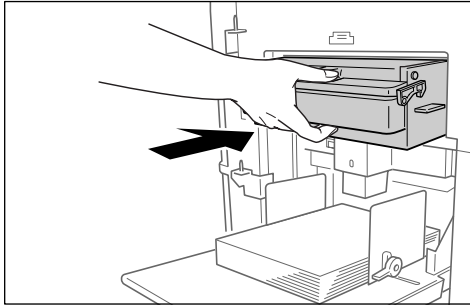

Insert the Master Disposal Box until it stops.

Replacing the Print Drum

When replacing with a Colour Drum to change colours, or when removing jammed paper, follow the steps to remove Print Drum. Be sure to use a Colour Drum specifically designed and approved for use with this machine.

⚠ Caution:

- Do not stand the Print Drum upright. Doing so may stain the floor, etc.

Important!:

- Use only Print Drums specifically designed and approved for use with this machine.
- Keep the power ON while removing or replacing the Print Drum.
- Make sure to place the changed Print Drum into the drum case and store horizontally.


Removing the Print Drum

Note:


- The drum is removed from the printer to be changed, and to remove paper jams.

The procedure for changing Drum 1 and Drum 2 is the same. The procedure for changing Drum 1 is explained here.

1 Open the Front Cover.

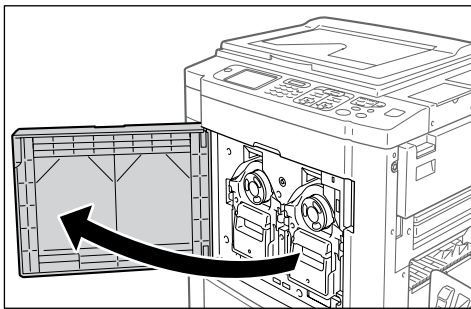

2 Check that the indicator of the Print Drum Release Button is ON.

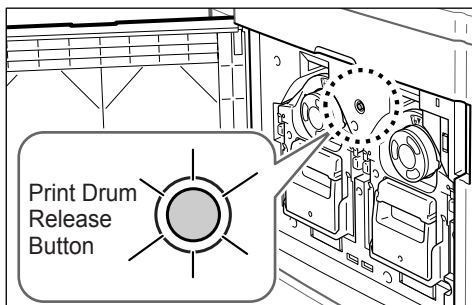

If the indicator is off, press the Print Drum Release Button to turn it on.


Important!:

- When the Master Making Unit is out, the Print Drum cannot be pulled out. Return the Master Making Unit into position and press the Print Drum Release button.
p.213

Note:

- Only one of the drums may be slightly forward, but both drums can be removed.


3 Pull out the Print Drum.

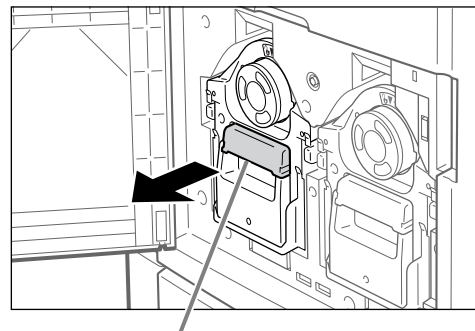

Grasp the Print Drum Handle and slowly pull until the Print Drum is completely extended.

4 Remove the Print Drum.

Firmly grasp the Green Handle

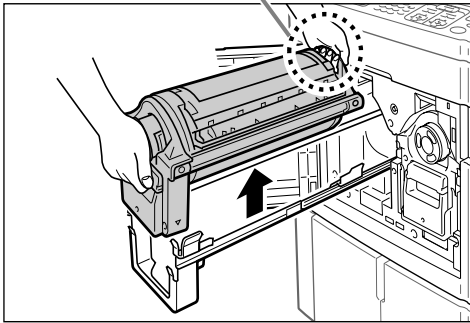


Use both hands to lift the Print Drum straight up to remove from the rail.

Proceed with replacing the drum, removing the paper jam, etc..


⚠ Caution:

- Do not touch the connector on the Print Drum. Neglecting this may result in malfunction of the Print Drum because of static electricity or other factors.

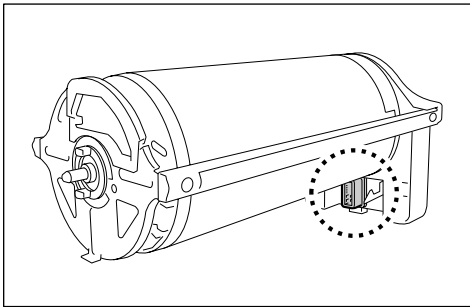

Installing the Print Drum


1 Place the Print Drum on the Rail.

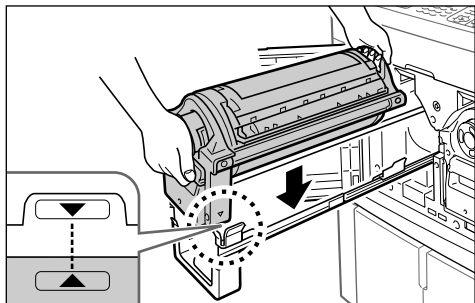


Align the ▼ mark on the Print Drum with the ▲ mark on the guide, and place the Print Drum horizontally onto the guide.

Note:

- If the Print Drum was manually rotated, be sure to turn it back so that ► and ◄ marks align, after it is placed on the guide.

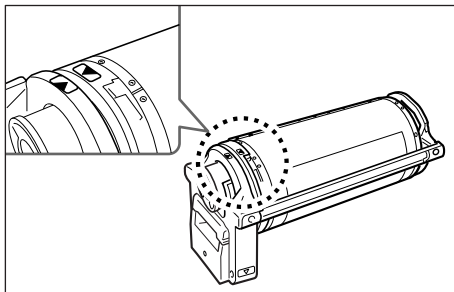

2 Return the Print Drum to its original position.

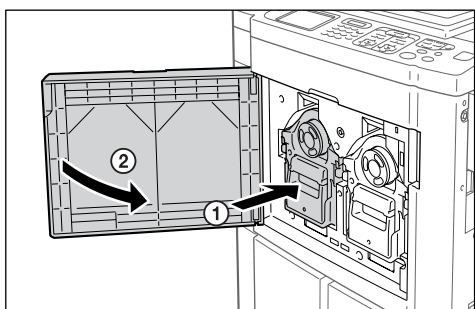

Push the Print Drum in as far as it will go, and then close the Front Cover.

Important!:

- Do not grasp the Print Drum Handle when pushing in the Print Drum.

Disposal of Depleted Consumables


Dispose of depleted Ink Cartridges, Master cores, ejected masters according to the regulations in your local community.

If required, separate the specific components using the following procedures to dispose them properly.

◆ Ink Cartridge

Remove the label (metal included) at the arrow from the outlet surface of the Ink Cartridge, and then dispose them separately.

Because ink may have adhered to the outlet surface of the Ink Cartridge, be careful not to smudge your clothes.

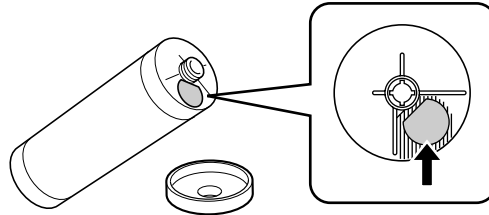


Parts	Materials
Ink Cartridge material	plastic (polypropylene/polyethylene)
Label material	plastic (metal included)
Ink	Soy oil, petroleum hydrocarbons, water, pigments

◆ Master core

A metallic component has been attached to the bottom of the end section having the ⓘ mark stamped.

Because the component section has been perforated for cutout convenience, tear along the perforation for proper disposal.

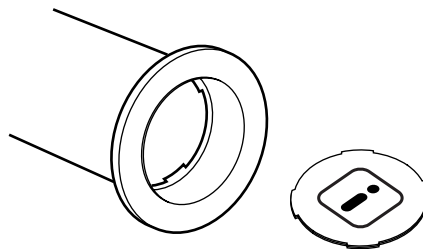

Parts	Materials
Core material	Paper
Master material	plastic, Japanese paper
Material of the cutout component	plastic (metal included) and paper

◆ Ejected Master

Parts	Materials
Master material	plastic, Japanese paper
Ink material	Soy oil, petroleum hydrocarbons, water, pigments

Note:

- It is made of carbon and hydrogen compounds. If fully combusted, it will turn into water and carbon dioxide.



Maintenance

Cleaning

The print quality may suffer if parts such as Thermal Print Head of the Master Making Unit, Scanner Glass of the ADF unit (option), White Roller, etc. are contaminated with dust, dirt, ink, white-out, etc..

Follow the steps below for periodic cleaning.

WARNING:

- Before cleaning any part of the machine, turn off the power.
- Do not remove any fixed covers.
- Contact your service representative immediately if you suspect any dangerous situations or have questions or problems with the machine.
- Contact your service representative before moving the machine.
- Do not allow unauthorised persons to make adjustments or repairs.


Caution:

- The machine has precision moving parts inside. Do not handle the machine in any other way than described in this manual.
- Be careful of the edge of metal parts, otherwise it may cause an injury.
- Do not make any modifications to the machine or remove any parts.
- Neither RISO nor its dealer is responsible for maintenance service performed by non-RISO-authorized personnel.

Thermal Print Head

Clean the Thermal Print Head each time you replace the Master Roll.

Open the Master Making Unit Cover, and gently wipe the Thermal Print Head in the back of the unit several times with a soft cloth or tissue.

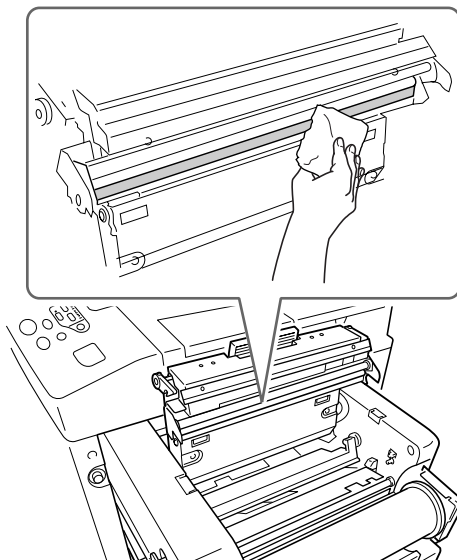


⚠ Caution:

- Since the Thermal Print Head is very delicate, avoid shocks or scratches with a hard object.
- Since Thermal Print Head is susceptible to (damage by) static electricity, please be sure to remove the static electricity charged in the body before cleaning.

Platen Glass and Platen Cover Pad

If the Platen Glass and/or Platen Cover Pad is stained, gently wipe them with a soft cloth or tissue.

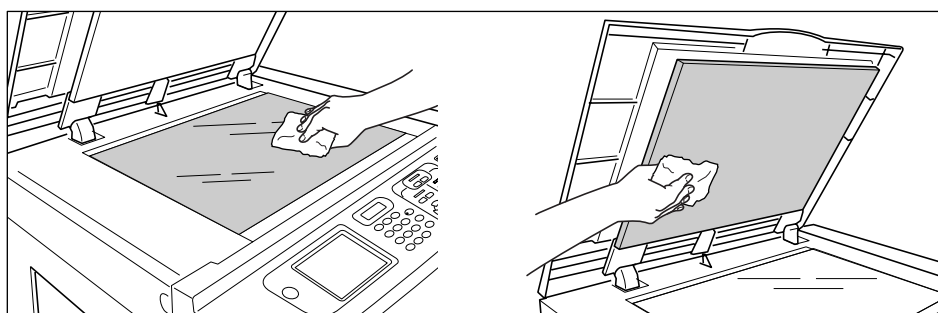


⚠ Caution:

- Since the Platen Glass is very delicate, avoid shocks or scratches with a hard object.

Scanner Glass and White Sheet of ADF unit (Option)

Gently wipe the Scanner Glass, and the White Sheet several times with a soft cloth or tissue.

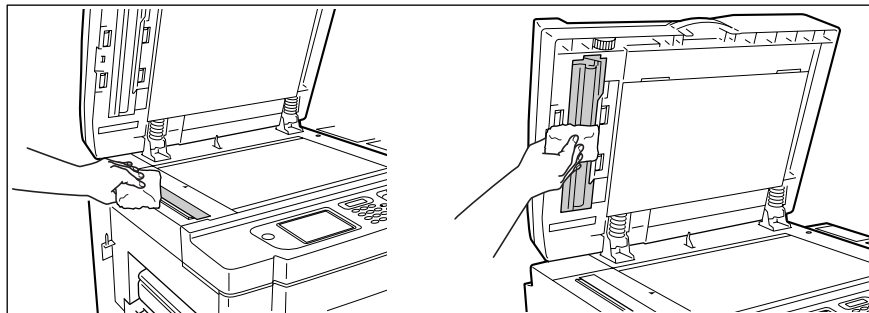


⚠ Caution:

- Since the Platen Glass is very delicate, avoid shocks or scratches with a hard object.

Pressure Roller


If the Pressure Roller, which presses print paper against the Print Drum, is stained, smudged strips may appear on the back of copies.

If this happens, gently wipe the Pressure Roller with a soft cloth dampened with alcohol.

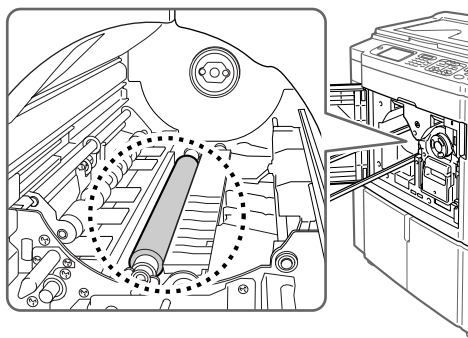

⚠ Caution:

- Be sure to turn OFF power to the machine when cleaning the Pressure Roller.
- When putting your hand into the unit, do not touch the paper separation hook. The sharp tip of the hook can hurt your hand.
- Ink may be left on the area near the Print Drum, so take care not to smudge your hands or clothes. Wash immediately with soap if you should get ink on your hands, etc.

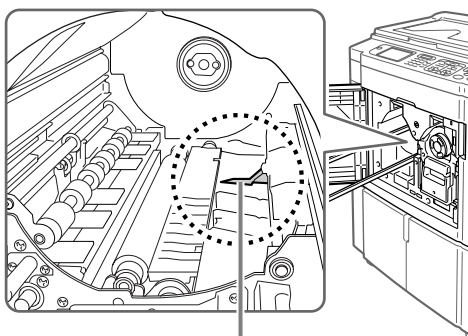


Separation Hook

The Exterior

Use a soft cloth to gently wipe down the entire printer on a regular basis in order to prevent the exterior from getting dirty.

If using a cleaning agent, use one recommended by your authorised service representative.

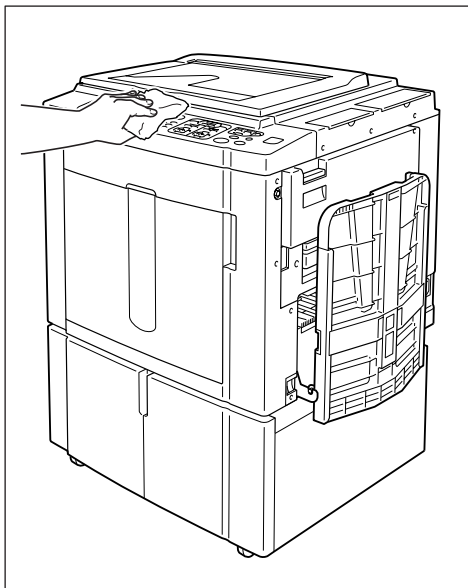

⚠ Caution:

- Because the machine exterior is plastic, never use alcohol or solvent when cleaning.
- The Display may be cleaned by gently wiping with a dry cloth. Dampen a cloth with a small amount of cleaner and gently wipe to remove any ink.
Do not spray or pour cleaner solution directly onto the display. Doing so can cause damage.


Troubleshooting

When a Message Displays

Refer to the following information to determine the cause and take appropriate actions when the machine stops operating and a message is displayed.

Error Message Layout

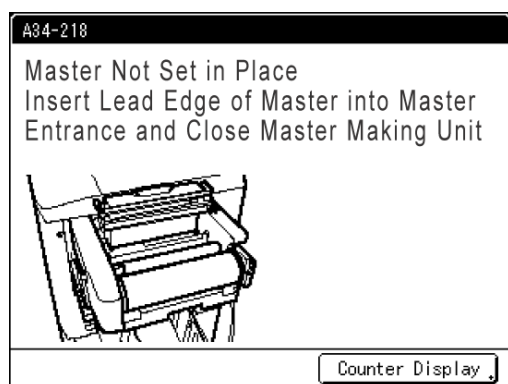


A message and a troubleshooting illustration will be displayed in accordance with the message type to show how to resolve the problem.





- 1) **Error Number**
error type and error ID number
- 2) **Error Messages**
description of the error and actions to resolve the problem
- 3) **Graphic Area**
visually demonstrates how to resolve the problem
- 4) **Counter Display**
Touch to display the "Counter Display" window

Error Number	Error Types	Description	Reference page
T00-000	Service Call Error	Errors that require repair or inspection by a authorised service representative. To resolve a Service Call Error, contact your dealer (or authorised service representative) with the error number.	☞ p.231
A00-000	Jam Error	Displays when the master is jammed, etc..	☞ p.231
B00-000	Optional Device Error	Displays when an error occurs on the optional device or Linked Printer.	☞ p.232
C00-000	Consumable Error	Displays when a consumable such as ink or master roll is depleted.	☞ p.234
D00-000	Installation Error	Displays when a part or unit is not properly installed.	☞ p.234
J00-000	Paper Jam Error	Displays when an original document or printing paper is jammed.	☞ p.237

T00-000:Service Call Error (in alphabetical order)

Message	Possible Cause	Action
!!Battery Replacement!! Call Service	The battery is low or depleted.	Contact your dealer (or authorised service representative) and have the battery replaced. Press the  key or the  key to clear the error message display.
!!System Error!! Press Reset Key If Recovery has Failed, Call Service	A system error has occurred.	Press the  key. If the problem persists, contact your dealer (or authorised service representative).
!!System Error!! Turn Main Power SW OFF Then ON If Recovery has Failed, Call Service		Shut off power, then restart. If the problem persists, contact your dealer (or authorised service representative).

A00-000:Paper Jam Errors (in alphabetical order)

Message	Possible Cause	Action
Master Disposal Error Pull Out Print Drum 1 and Discard Master	The master was not properly discarded.	1) Pull out the Print Drum and remove the master from the drum. If a master is not wrapped around the drum, check the disposal unit and remove the master. ☞ p.220 2) Return the Print Drum in place. 3) Press the  key.
Master Disposal Error Pull Out Print Drum 2 and Discard Master		
Master Jammed in Disposal Unit Pull Out Master Disposal Box 1 and Remove Jammed Master	The master is jammed in the Master Disposal Unit.	Pull out the Master Disposal Box and remove the jammed master. If the masters are difficult to remove, pull out the drum and then remove. ☞ p.218 ☞ p.220 If the error persists, contact your dealer (or authorised service representative).
Master Jammed in Disposal Unit Pull Out Master Disposal Box 2 and Remove Jammed Master		
Master Loading Error Pull Out Print Drum 1 and Discard Master	The master did not properly attach to the Print Drum.	1) Pull out the Print Drum and remove the master from the drum. ☞ p.220 2) Return the Print Drum in place. 3) Pull out the Master Making Unit and reinstall the master. 4) Press the  key.
Master Loading Error Pull Out Print Drum 2 and Discard Master		

Message	Possible Cause	Action
Master Mis-Feed Pull Out Master Making Unit and Rewind Master Roll, then Reset Master in Place	The master is improperly installed.	Pull out the Master Making Unit, rewind the master and reinstall. ☞ p.213 Important!: • If the leading edge of the master is wrinkled or torn, cut the edge straight and reinstall.
Master Not Set in Place Insert Lead Edge of Master into Master Entrance and Close Master Making Unit	The master is improperly installed or is missing.	Pull out the Master Making Unit and reinstall the master. ☞ p.213 Important!: • If the leading edge of the master is wrinkled or torn, cut the edge straight and reinstall.
Master Remains on Print Drum 1 Pull Out Print Drum 1 and Remove Master	An unnecessary master remains on the Print Drum.	1) Pull out the Print Drum and remove the master from the drum. ☞ p.220 2) Return the Print Drum in place.
Master Remains on Print Drum 2 Pull Out Print Drum 2 and Remove Master		
Safety SW on Standard Feed Tray is Activated Reset paper on Standard Feed Tray	The safety switch for the Paper Feed Tray has been activated.	Check underneath the Paper Feed Tray and on top of the printing paper for any obstructions. Remove if any exist.
System Error in Master Making Unit Take Out Master and then Close Master Making Unit Cover	The cutter mechanism for the master malfunctioned.	1) Either remove the drum and the master on the drum, or cut evenly and remove. 2) Pull out the Master Making Unit and remove the master. ☞ p.213 3) Closing the Master Making Unit Cover will reset the error. Setup the master again.

B00-000:Optional Device Error (in alphabetical order)

Message	Possible Cause	Action
Data Transfer Error for Linked Printer Check Network and Linked Printer Then Transfer Data Again	Cannot transmit data to Linked Printer.	Check connections from Linked Printer and the machine to the hub. If they are properly connected, check the server and network communication status and consult with the network administrator.
Insert Card in Key/Card Counter	No card in the Key Card Counter (option).	Insert Card in the Key Card Counter.
!! Job Separator is OFF !! Turn On Power Switch of it	The Job Separator (option) is turned OFF.	Turn on the Job Separator.

Message	Possible Cause	Action
Linked Printer in Error	A Service Call Error has occurred on the Linked Printer.	Check the Linked Printer and resolve the error.
No IP Address Assigned to This Printer Contact Your Network Administrator	IP address for the machine is not properly set.	Contact your system administrator and set the machine IP address correctly. p.160
!! No Linked Printer Detected !! Check Cable Connection and Power Supply for Linked Printer	Linked Printer may not be turned ON; cable may not be properly connected; connection may be interrupted.	Check that the Linked Printer has been switched on. Check to make sure all cables are properly connected. If properly connected, check for damaged cable.
No Paper Tape in Job Separator Replace Tape Roll	No tape in the Job Separator (option).	Load new tape into the Job Separator.
No Toner in Linked Printer	No toner in the Linked Printer.	Replace toner in the Linked Printer.
Paper Tape Jam in Job Separator Remove Paper Tape	Tape jam occurred in the Job Separator (option).	Check the Job Separator and remove jammed tape.




C00-000:Consumable Errors (in alphabetical order)

Message	Possible Cause	Action
Load Paper in Standard Feed Tray	No printing paper in the Paper Feed Tray.	Load paper into the Paper Feed Tray. p.31
Master Disposal Box 1 is Full Empty Master Disposal Box	The Master Disposal Box is full.	Empty the Master Disposal Box. p.218 Install a new Master Roll.
Master Disposal Box 2 is Full Empty Master Disposal Box		
No Ink in Print Drum 1 Replace Ink Cartridge	The ink is depleted.	Replace and install a new Ink Cartridge. Use the Ink Cartridge specifically designed and approved for use with this machine p.216 Important!: • If the error persists after replacing the Ink Cartridge, check for proper installation of the Ink Cartridge.
No Ink in Print Drum 2 Replace Ink Cartridge		
No Master Replace Master Roll	The Master Roll is depleted.	Install a new Master Roll. Use Master Roll specifically designed and approved for use with this machine p.213

D00-000:Installation Error (in alphabetical order)

Message	Possible Cause	Action
Close Front Cover	The Front Cover is open or improperly closed.	Check for the magnet underneath the Front Cover and firmly close.
Close Master Making Unit Cover	The Master Making Unit Cover is open or is improperly installed.	Pull out the Master Making Unit, check and firmly close its cover.
Install Ink Cartridge in Print Drum 1	The Ink Cartridge is improperly installed or is missing.	Properly install the Ink Cartridge. p.216
Install Ink Cartridge in Print Drum 2		
Master Making Unit has been Unlocked	The Master Making Unit is ready to be pulled out.	Pull out the Master Making Unit.
Print Drum 1 has been Unlocked	The Print Drum is ready to be pulled out.	Pull out the Print Drum.
Print Drum 2 has been Unlocked		

Message	Possible Cause	Action
Print Drum 1 is not Set in Place Press Drum Release Button and Pull Out Print Drum Once after Button Lights	The Print Drum is locked but not pushed in properly.	Press the Print Drum Release Button . Remove the Print Drum after the button is lit and reinstall.
Print Drum 2 is not Set in Place Press Drum Release Button and Pull Out Print Drum Once after Button Lights		
Rear Cover of Main Body is Off Call Service	The machine rear cover is removed.	Contact your dealer (or authorised service representative).
Set Master Disposal Box 1 in Place	The Master Disposal Box is improperly set or is missing.	Properly set the Master Disposal Box. p.218
Set Master Disposal Box 2 in Place		
Set Master in Place	No master is installed.	Install a Master Roll. p.213
Set Master Making Unit in Place	The Master Making Unit is missing or is improperly installed.	Properly install the Master Making Unit. p.213
Set Print Drum 1 in Place	The Print Drum is improperly set or is missing.	Properly install the Print Drum. p.220
Set Print Drum 2 in Place		
Wrong-type Ink Cartridge Installed in Print Drum 1 or Cannot Read Ink Info Replace Ink Cartridge or Contact Dealer/Riso Office	Inappropriate Ink Cartridge is installed.	Properly install a correct Ink Cartridge. p.216 Important!: • Use the Ink Cartridge specifically designed and approved for use with this machine. Failure to do so may cause problems or damage to the machine.
	The label on the Ink Cartridge outlet surface has come off or surface is with dirt.	The label on the Ink Cartridge outlet surface contains information needed for printing. If the machine cannot read the information, it does not operate. Set an Ink Cartridge that is specific to the machine and that is with label attachment and free from dirt.


Message	Possible Cause	Action
Wrong-type Ink Cartridge Installed in Print Drum 2 or Cannot Read Ink Info Replace Ink Cartridge or Contact Dealer/Riso Office	Inappropriate Ink Cartridge is installed.	Properly install a correct Ink Cartridge. p.216 Important!: <ul style="list-style-type: none"> Use the Ink Cartridge specifically designed and approved for use with this machine. Failure to do so may cause problems or damage to the machine.
	The label on the Ink Cartridge outlet surface has come off or surface is with dirt.	The label on the Ink Cartridge outlet surface contains information needed for printing. If the machine cannot read the information, it does not operate. Set an Ink Cartridge that is specific to the machine and that is with label attachment and free from dirt.
Wrong-type Master Installed or Cannot Read Master Info Replace Master Roll or Contact dealer/Riso office	Incorrect master is installed.	Set a correct Master Roll. p.213 Important!: <ul style="list-style-type: none"> Use a Master Roll specifically designed and approved for use with this machine. Failure to do so may cause problems or damage to the machine.
	The  section on the master core is missing, or it has worn off, or it has been tilted.	The  section on the master core contains information needed for making masters. If the machine cannot read the information, it does not operate. Set a dedicated Master Roll that has the  mark and is free from wear and tilt.
Wrong-Type Print Drum Installed in Drum Position 1 Replace with Correct Type	Incorrect Print Drum is installed.	Install a correct Print Drum. p.220 Important!: <ul style="list-style-type: none"> Use a Print Drum specifically designed and approved for use with this machine. Failure to do so may cause problems or damage to the machine.
Wrong-Type Print Drum Installed in Drum Position 2 Replace with Correct Type		



J00-000:Paper Jam Error


Displays when the original document or printing paper is jammed inside the machine or the ADF unit (option).
The location of the paper jam is indicated by the flashing icon (①-⑤) in the illustration. Refer to the table below (①-⑤) and resolve the issue as indicated.

Note:

- Use appropriate printing paper to prevent paper jams. Also select appropriate original document suitable for the ADF unit.
 ☞ p.14
 ☞ p.16

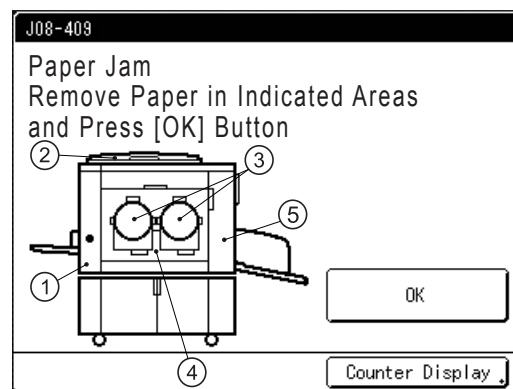

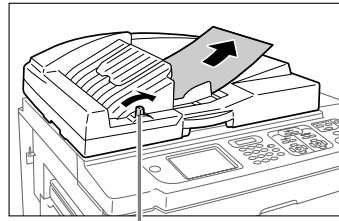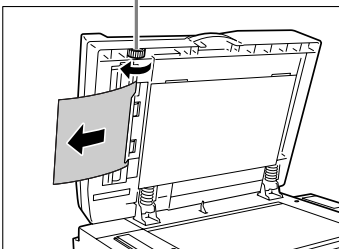
Area Indicated/ Blinking	Possible Cause	Action
①	Paper is jammed in the Paper Feed area.	1) Check the paper feed side and remove the jammed paper. 2) Touch [OK]. Note: <ul style="list-style-type: none"> • When using special paper, adjust the Paper Feed Pressure Adjustment Lever according to the paper characteristics. ☞ p.31
②	The original is jammed in the ADF unit (option).	When removing in the document insertion direction Pull the ADF Original Release Lever to the right, and pull out the original.  ADF Original Release Lever When removing in the document ejection direction Raise Platen Cover, turn the ADF Original Release Dial and remove the original.  Original Release Dial

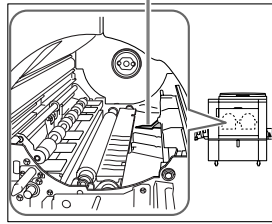Area Indicated/ Blinking	Possible Cause	Action
<p>③</p> <p>④</p>	<p>Paper is jammed in the Print Drum area.</p>	<ol style="list-style-type: none"> 1) Pull out the Print Drum. p.220 2) Remove the jammed paper. 3) Return the Print Drum in place. 4) Touch [OK]. <p>⚠ Caution:</p> <ul style="list-style-type: none"> Be careful not to touch the separation hook when putting your hands inside to remove paper. The edge of the separation hook is sharp and can cause injury. <div data-bbox="1019 668 1292 932"> <p style="text-align: center;">Separation Hook</p>  </div>
<p>⑤</p>	<p>Paper did not eject correctly.</p>	<ol style="list-style-type: none"> 1) Check for any jammed paper on the paper exit area. 2) Touch [OK]. <p>Note:</p> <ul style="list-style-type: none"> When using special paper, adjust the Paper Arranger on the Receiving Tray Paper Guides according to the paper characteristics. p.33

Pop-Up Message Layout

Pop-Up Messages communicates various operational statuses.



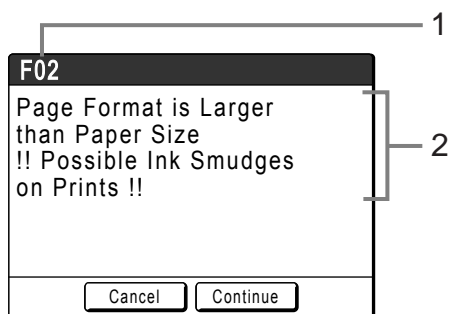

You can continue operation over some of them, but depending upon the context, others will require your action before operations can be resumed.



 







- 1) **Error Number**
A reference letter (E/F) and an ID number.
- 2) **Pop-Up Messages**
Content of the message.






Error Number	Error Types	Description	Reference page
E00-000	Maintenance Call	Pops up when battery replacement or a routine inspection by a service personnel is required.	p.239
F00-000	Warning Messages	Pops up when printing job cannot proceed due to a conflict between a Control Panel setting and the status of the machine or the Linked Printer.	p.240












E00-000:Maintenance Call (in alphabetical order)






Message	Symptom	Action
!!Low Battery!! Call Service	Low battery.	Touch [Close] . (Alternatively, press the  key or the  key to clear.) Contact your dealer (or authorised service representative) and have the battery replaced.
!!Maintenance!! Call Service	Notifies user of need for a periodic maintenance.	Touch [Close] . (Alternatively, press the  key or the  key to clear.) Consult your dealer (or authorised service representative).

F00-000:Warning Messages (in alphabetical order)

Message	Symptom	Action
Acquiring Linked Printer Configuration Data Please Wait a Moment	The machine system is retrieving Linked Printer information. Link Mode printing is disabled while the retrieval is underway.	<p>Touch [Close] to clear the Pop-Up Message and return to the previous screen.</p> <ul style="list-style-type: none"> • When printing from the machine; Press the  key or the  key. • When printing from a Linked Printer; Wait until the information has been retrieved. (This may take several minutes.)
!!Auto-Link Operation is Not Available!! Specified Linked Printer may be in Error or Turned OFF	Linked Printer is sending an error signal. Link Mode has been activated due to low print volume since "Link-Free Volume" is currently set to ON.	<ul style="list-style-type: none"> • When returning to the Master Screen;. Touch [Cancel]. (Alternatively, press the  key or the  key to clear.) • When changing to another available Linked Printer; Touch [Link Switch] and select another Linked Printer on the Link Sw. screen. ([Link Switch] will not display if no other Linked Printer is available.) p.204
!! Book Shadow Editor is Not Available with ADF !! Place Original on Platen Glass	ADF unit is disabled while Book Shadow function is active.	<p>Touch [Close]. (Alternatively, press the  key or the  key to clear.)</p> <p>Place the original on the Platen Glass. p.82</p>
Check Stock of Required Ink and Please Order If Needed	<p>The remaining quantity of Ink Cartridge or Master Roll has become less than specified on "Stock Management". p.162</p>	<p>Touch [Close]. (Alternatively, press the  key or the  key to clear.)</p> <p>Order Ink Cartridges or Master Rolls if necessary.</p>
Check Stock of Required Master and Please Order If Needed		
!! Complicated Area Form !! Re-circle Editing Areas and Redo Colour Separation	The shape of the selected area is too complicated to be recognised.	Multi-Point tool can connect up to 32 points to enclose an area. Please place dots to form a simple shape.
Dual-Colour Printing is Not Available for This Paper Size Load Paper Larger than B5 (Portrait)	This machine cannot perform 2-Colour printing on paper smaller than B5 size.	Touch [Close] and proceed to load paper with vertical dimension larger than that of B5 (257 mm).


Message	Symptom	Action
Either of Masters is Made in Ink Saving Process Operate Dual-Colour Printing?	One of the masters on either Drum 1 or Drum 2 was created in "Ink Saving" mode, while the other master is of regular printing quality.	Proceeding to print with existing set of masters by simply touching [Continue] button will result in poor colour balance, i.e., one of the colours may be too dark or too light. To correct this problem, touch [Cancel] and create another set of masters in the same mode.
Enter Print Quantity Over [nn], Programmed Minimum Value	You are trying to print fewer copies than previously specified on "Minimum Print Quantity".	Touch [Close] , and specify the number of copies higher than the number displayed on the message. <i>or</i> You can change "Minimum Print Q'ty" on the Admin. screen. p.162
!! Exceeding Number of Editing Areas Selected !! Deselect Some Areas and Redo Colour Separation	Too many areas are selected.	Up to 50 Diagonal Corner areas and 50 Multi-Point areas may be selected. Reduce number of selected areas.
!! Multi-Up is Not Available with This Paper Size !! Replace with Proper Paper of Standard Size	Multi-up functions cannot be used when custom-sized paper is in the Paper Feed Tray.	Touch [Close] . (Alternatively, press the  key or the  key to clear.) Load standard size paper in the Paper Feed Tray.
No Master on Print Drum 1 Make a New Master	You are attempting to print, but there is no master on the Print Drum.	Touch [Close] . Set the original and create a master. Important!: <ul style="list-style-type: none"> Do not leave the Print Drum without a master. This dries out the drum and causes damage. You must either create a master or perform a "Confidential" operation to wrap a master around the Print Drum.
No Master on Print Drum 2 Make a New Master		
!! Number of Copies is set to "0"!! Printing Operation will Start on this Printer	Number of print copies is set to "0", yet "Link-Free Volume" is set to ON when Linked Printer is connected.	<ul style="list-style-type: none"> When printing from the machine; Touch [Continue]. (Alternatively, press the  key to print.) When stopping the print job; Touch [Cancel]. (Alternatively, press the  key or the  key to clear.) Then, enter print quantity. p.163

Message	Symptom	Action
Original Undetected Reset Original	The machine failed to detect the original document. The original document may not be placed.	Re-position the original to clear the Pop-Up Message. <ul style="list-style-type: none"> • When resuming the print job; Touch [Continue]. (Alternatively, press the  key to print.) • When stopping the print job; Touch [Cancel]. (Alternatively, press the  key or the  key to clear.)
!! Outlines of Editing Areas are Too Long !! Divide Large Areas into Several Smaller Areas and Redo Colour Separation	Selected area is too large.	Reduce the size, or select smaller areas.
Page Format is Larger than Paper Size !! Possible Ink Smudges on Prints !!	The printing paper is smaller than the Master.	<ul style="list-style-type: none"> • To override the message and to print with possible ink smears on the roller; Touch [Continue]. (You can also print by pressing the  key or the  key.) • When stopping the print job; Touch [Cancel]. (You can also stop by pressing the  key or the  key.) <p>Load the correct size printer paper.</p>
Page Format is Larger than Paper Size !! Possible Ink Smudges on Prints !! (Continue->PROOF Key)	The printing paper is smaller than the Master.	<ul style="list-style-type: none"> • To override the message and to print with possible ink smears on the roller; Press the  key. • When stopping the print job; Touch [Cancel]. (You can also stop by pressing the  key or the  key.) <p>Load the correct size printer paper.</p>
Printer Temperature is Low "150ppm" is Not Available	Current temperature is too low for "150ppm" printing.	You may operate the machine with regular speed by touching [Continue] , until temperature within the machine reaches 15°C. To return to Print Basic Screen, touch [Cancel] .
Printing is Not Available for This Paper Size with Print Drum 2 Set Print Drum to be Used in Drum Position 1 and Re-select Printing Mode	Drum 2 may be used for single colour printing, but only on certain paper size. Paper size currently loaded does not support single colour printing with Drum 2.	Touch [Close] . Remove Drum 2 from its current position, and replace it in place of Drum 1. See  p.14 for paper size limitation when printing single colour using Drum 2.

Message	Symptom	Action
Printing is Not Available for This Setting with Print Drum 2 Set Print Drum to be Used in Drum Position 1 and Re-select Printing Mode	Drum 2 may be used for single colour printing, but certain limitations apply. Current settings do not support single colour printing with Drum 2.	Touch [Close] . Remove Drum 2 from its current position, and replace it in place of Drum 1.
Processing Other Operation Retry after a while	Colour separation cannot be performed while system is busy processing another operation.	Please wait until the current operation is completed.
Processing Print Data from PC Scanning Mode is Not Available while Process- ing Current Data	The machine is receiving the document data from the computer. While the data is being transmitted, Link Mode printing and Scan mode are disabled.	Touch [Close] . Initiate the Print job after the transmission is complete, or print from the machine.
Processing Print Data from PC This Function is Not Available while Process- ing Current Data		
Starting Up RISORINC-NET Please Wait a Moment	RISORINC-NET is starting up.	Touch [Close] . (Alternatively, press the  key or the  key to clear.) Please wait a moment. Alternatively, print from the machine.
!! Unmatched Colour -- Data Colour and Drum Colour 1 !! Change Print Drum	The colour of the drum is different from the colour specified on printer driver.	<ul style="list-style-type: none"> To ignore printer driver setting and to print with the colour currently installed on the drum, touch [Continue]. To change colour, touch [Cancel] and replace drum.
!! Unmatched Colour -- Data Colour and Drum Colour 2 !! Change Print Drum		
!! Unmatched Colour -- Data Colour and Drum Colours !! Change Print Drums		
!! Unmatched Size-- Current Page and Printing Paper !! Check Paper Size	The original data sent from the computer does not match the print paper size.	<ul style="list-style-type: none"> When resuming the print job; Touch [Continue]. (Alternatively, press the  key to print.) When stopping the print job; Touch [Cancel]. (Alternatively, press the  key or the  key to clear.) Check the print paper size and change paper or size as needed.




Consumable Information Screen

In order to assure optimum printing, the machine acquires information from the consumables. If acquired matching information is not proper, the Consumable Information screen is shown. Enter appropriate values.

The  icon on the Info Button will be greyed out when this occurs.


☞ p.212

Note:


- Entering an inappropriate value does not affect usual operations but may result in bad print quality.
- When you perform the following operations, the values set on the "Consumables Information Input Wizard" screen disappears and thus you need to enter the values again.
 - After the power switch is set to  (OFF), the switch is set to  (ON) again
 - After the machine is placed into the Sleep status, the  key is pressed
- If you are not sure the best setting for the consumables used in the machine, we may suggest that you use "1" (default setting) except for "H1" setting and adjust from there if necessary based on the result of the printed copies. Riso takes no responsibility, and cannot advise as to the best setting, for particular consumables not manufactured and sold by Riso.



Ink Information Input Screen

This screen pops up when data could not be obtained from the Ink Cartridge.

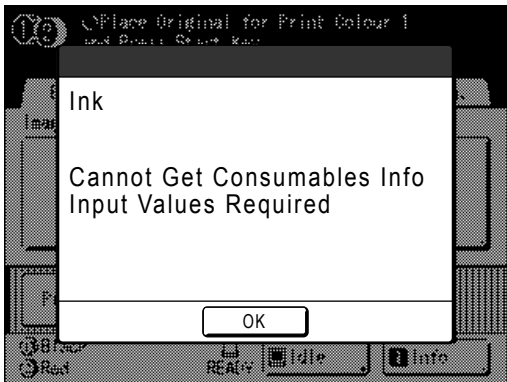



Touch **[OK]** and enter values as shown below.

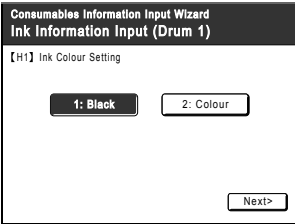Screen Display	Description	Values
	[H1] Ink Colour Setting (for Print Drum 1) [H7] Ink Colour Setting (for Print Drum 2) Select the same colour as the Print Drum currently in use.	1: Black 2: Colour

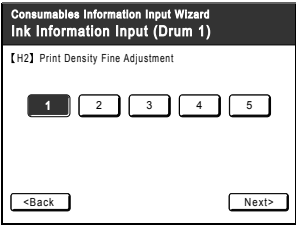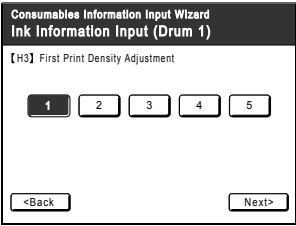
Screen Display	Description	Values
	[H2] Print Density Fine Adjustment (for Print Drum 1) [H8] Print Density Fine Adjustment (for Print Drum 2) Select a Print Density level to match the ink to fine-tune print result.	1 (Light) - 5 (Dark)
	[H3] First Print Density Adjustment (for Print Drum 1) [H9] First Print Density Adjustment (for Print Drum 2) Select a Print Density level of the first print to match the ink.	1 (Light) - 5 (Dark)

A confirmation screen displays when done.

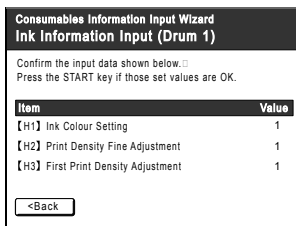


Press the  key to approve selection.
Returns to the Basic Screen.




Note:

- Master Information Input screen may also display. If so, enter Master Information as well.
 p.245

Master Information Input Screen


This screen pops up when data could not be obtained from the Master Roll.
Touch **[OK]** and enter values as shown below.

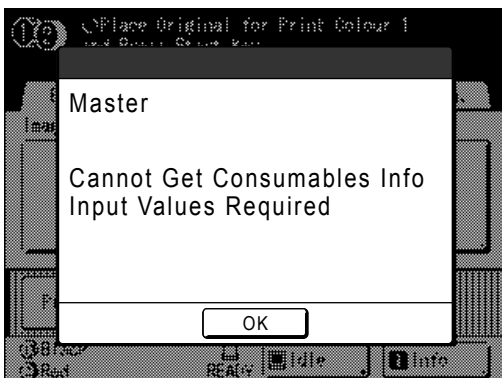

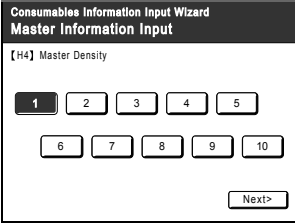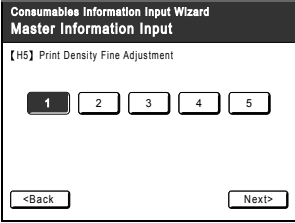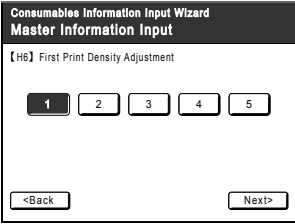Screen Display	Description	Values
	[H4] Master Density Select the standard density to be applied during creation of the master.	1 (Light) - 10 (Dark)
	[H5] Print Density Fine Adjustment Select a Print Density level to match the master to fine-tune print result.	1 (Light) - 5 (Dark)
	[H6] First Print Density Adjustment Select a Print Density level of the first print to match the master.	1 (Light) - 5 (Dark)



 
 
 

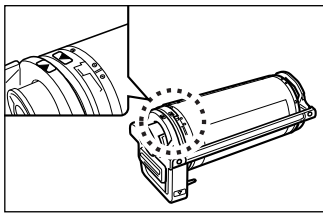

A confirmation screen displays when done.



Consumables Information Input Wizard Master Information Input	
Confirm the input data shown below. Press the START key if those set values are OK.	
Item	Value
[H4] Master Density	1
[H5] Print Density Fine Adjustment	1
[H6] First Print Density Adjustment	1
<Back	



Press the  key to approve selection.
Returns to the Basic Screen.



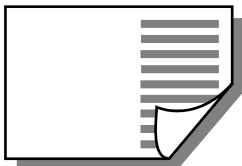



Troubleshooting


If you run into a problem, consult the following chart first to find answers before calling for a repair.



Problem	Possible Cause	Action
The machine does not start up when the power switch is pressed.	You may have pressed the power switch while the machine was in the Sleep Mode.	Try pressing the power switch again. Before pressing the power switch, you may want to find out whether the machine is indeed in the Sleep Mode, by checking the  indicator on the Control Panel. If the  key is lit, the machine is in sleep mode. Press the  key to end sleep mode and to activate the machine.
	Power has been disconnected.	<ul style="list-style-type: none"> • Check the power cord for proper connection to both the machine and the power outlet. • Check the power breaker.
The front cover is closed, but the error message still does not clear.	The Front Cover has not been firmly closed.	Completely close the Front Cover. The magnetic latch should properly engage.
The Paper Feed Tray cannot be closed.	The Feed Paper Tray Guides have not been widened up to the limit.	Turn the power on and lower the Paper Feed Tray to the bottom. Set the Feed Tray Paper Guide Lock Lever to  , widen the Feed Tray Paper Guides up to the limit, and close the Paper Feed Tray.
	The power was turned off before the Paper Feed Tray was lowered to the bottom.	
The Print Drum cannot be placed into position.	The Print Drum was stopped at an inappropriate position after rotation.	<p>After manually rotating the drum, make sure that the  mark and the  mark meet as shown.</p> 
	The Print Drum has not been correctly set to the guide.	Set the drum to the guide correctly.  p.222


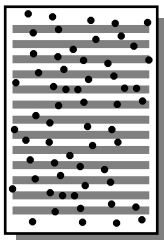

Problem	Possible Cause	Action
An error indication does not disappear even though consumables (ink, master roll) are set.	The consumables (ink, master roll) have not been correctly set.	After inserting the Ink Cartridge, turn it clockwise (🔒) to lock. Or set the Ink Cartridge again. 🔧 p.216
		Set a master roll so that the 📏 mark comes to the left, and set the Master Making Unit. 🔧 p.213
	The Ink Cartridge does not contain ink information.	Do not remove the label attached on the Ink Cartridge outlet section. If you did so, set a new Ink Cartridge. 🔧 p.213
	The master roll does not contain master information.	Do not remove the 📏 section from the master core. If you did so, set a new master roll. 🔧 p.213
There is no image on copies.	The original is placed face up.	Place the original face down. (This is also true for the ADF unit)
Some areas are missing in the printed copy. 	The Platen Glass (and/or the ADF Scanner Glass) is not clean.	Clean the Platen Glass (and/or the ADF Scanner Glass). 🔧 p.226
	A foreign object may exist on the master.	Pull out the Print Drum and check if any object exists on the master. If a foreign object exists between the master and the drum, remove the master. Then set the drum and perform the master-making operation again.
	<ul style="list-style-type: none"> The paper size placed on the Paper Feed Tray was not the same as the size of the original at the time of the master-making process. The Feed Tray Paper Guides were not fit to the width of paper at the time of the master-making process. 	A master is made according to the size of paper placed on the Paper Feed Tray; namely the width of the Feed Tray Paper Guides and the length of paper. If the size of paper placed on the tray is smaller than the size of the original, a master is not made for the entire original. Set the same size of paper on the tray as the original and perform the master-making operation.
Vertical blank lines are found on printed copies. 	The Thermal Print Head of the Master Making Unit or the Scanner Glass of ADF unit has been stained with dirt, white-out, etc.	Gently wipe the Thermal Print Head or Scanner Glass with a soft cloth. 🔧 p.226

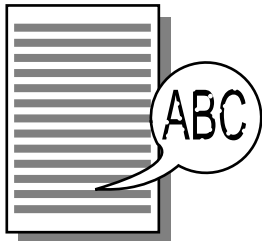Problem	Possible Cause	Action
<p>The unwanted background of an original is picked up on copies.</p> 	<p>If newspaper or coloured paper is used as an original, the background is picked up on copies.</p>	<p>Lighten the “Contrast” and create a new master. ☞ p.75</p>
<p>Dirt is found on printed copies.</p>	<p>The Platen Glass (and/or the ADF Scanner Glass) is not clean.</p>	<p>Clean the Platen Glass (and/or the ADF Scanner Glass). ☞ p.226</p>
<p>The edges of printed copies are smudged with ink.</p>	<p>Larger size of paper than the original was placed on the Paper Feed Tray at the time of the master-making process.</p>	<p>Because a master was made according to a larger size than the original, the edges of the original were processed as shadows. Set the same size of paper as the original and perform the master-making operation again. Or attach tape as described below to solve the problem.</p>
	<p>Did you use [Max. Scan] setting when making the master?</p>	
	<p>When printing thick paper such as cards, corners of the paper contacted and damaged the master.</p>	<p>Make another master and print with the new master. Or pull out the Print Drum and attach cellophane tape to the damaged section on the master. However, if attached with cellophane tape, a master may not be properly sent to the Master Disposal Box.</p>
<p>The back of the printed paper is smudged with ink</p> 	<p>The Pressure Roller has been stained with ink.</p>	<p>Remove the Print Drum and clean the Pressure Roller. ☞ p.226 If the print position is outside the print paper, this may cause the Pressure Roller to be stained with ink. Be careful when changing the size of print paper or shifting the print position.</p>
	<p>The Feed Tray Paper Guides were not fit to the width of paper at the time of the master-making process.</p>	<p>Adjust the Feed Tray Paper Guides to the width of the paper. If the Feed Tray Paper Guides are set wider than the width of the paper, a master will become wider than necessary. ☞ p.31</p>
	<p>Are you using a paper that does not efficiently absorb ink?</p>	<p>The ink did not dry fast enough, marking onto the reverse side of the next paper. Either change the paper or try “Ink Saving” or “Interval” features. ☞ p.84 ☞ p.118</p>

Problem	Possible Cause	Action
<p>Printed images are faint. Printed texts are blurred.</p> 	<p>If the machine is not used for an extended period of time, ink on the surface of the Print Drum may dry. This results in faint or blurred printing just after printing is started.</p>	<p>The ink on the Print Drum will dry when the machine is not in use for an extended period. Printing with dried ink will produce light or faded copies. Press the  key and make several copies before making copies to be actually used. Or use the "Idling Action". p.150</p>
	<p>Faint originals result in faint images.</p>	<p>Increase the scanning level and perform the master-making operation again. p.75 For originals written with a pencil, select the Pencil mode. p.68</p>
	<p>If the temperature is low (below 15°C) in a place where the machine is installed or Ink Cartridges are stored, ink does not flow smoothly.</p>	<p>Use the machine after keeping it at room temperature for a while. p.10</p>
	<p>The Ink Saving mode has been set.</p>	<p>With the "Ink Saving" mode selected, the ink on printed copies is fainter than usual. p.84</p>
<p>Multi-up did not function. There is nothing printed on one side.</p> 	<p>Did you place the second original in time after the beep, while the message "Place Another Original and Press Start Key" was showing?</p>	<p>When you print using "Multi-Up", the machine will beep during the Multi-Up Interval. Place the second original during that interval. If the machine starts scanning for the second time without a beep, even when you are scanning from the Platen Glass, you will need to adjust "Multiple-Original Interval" settings on the Admin. screen. p.160</p>
	<p>Did you accidentally press the  key while the original was being scanned?</p>	<p>The print operation will stop if the  key is pressed while scanning is in progress. Do not press the  key until all originals have been scanned.</p>
<p>In the Book shadow editing, the position for shadow erasure is shifted.</p>	<p>The original is not centred.</p>	<p>Place a book or magazine on the Platen Glass so that its binding section comes to the centre of the paper size placed on the Paper Feed Tray (or the size specified for the Size of originals for Book shadow editing using the Custom Setting mode).</p>

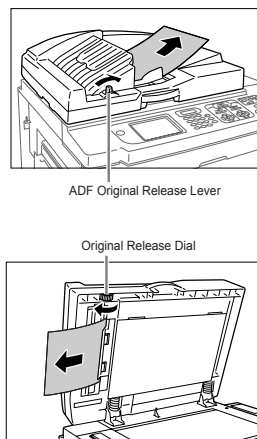Problem	Possible Cause	Action
Paper sticks to the surface of the Print Drum.	The margin at the top of the original or print is too small.	The margin of the original (top of the print in the paper output direction) must be 5 mm at least. Lower the vertical print position. If this adjustment is impossible, reproduce an original with enough margin and perform the master-making operation again. ☞ p.76
	The print paper is inappropriate.	Use the recommended paper. ☞ p.14
	The original has a solid black portion at its top.	If an original has a solid black portion at the top, printed copies may not properly output. Replace the original in the reverse direction and restart the master-making process.
Printed and curled copies are output.	The print paper is loaded at a horizontal grain direction.	Load print paper with a vertical grain direction.
Paper gets jammed in the ADF unit (option).	There is any paper caught in the ADF unit.	<p>Pull the ADF Original Release Lever to the right or turn the Release Original Dial and remove the jammed paper.</p>  <p>ADF Original Release Lever</p> <p>Original Release Dial</p>
Printed copies are not neatly aligned in the Paper Receiving Tray.	The positions of the Receiving Tray Paper Guides and the Paper Stopper are inappropriate.	Adjust the Receiving Tray Paper Guides and the Paper Stopper to the size of paper. For thick paper, slightly widen them as necessary. If you have adjusted the horizontal position on the Paper Feed Tray, shift the Receiving Tray Paper Guides in the same direction. ☞ p.33
	The Paper Arrangers are not properly set.	Set the Paper Arrangers properly. ☞ p.33

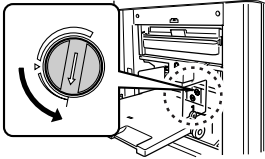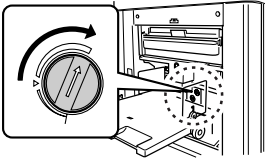Problem	Possible Cause	Action
<ul style="list-style-type: none"> Paper is not smoothly fed from the Paper Feed Tray. (skipped paper, or multiple-sheet feeding) There is a lot of paper powder Multiple sheets of paper were fed Construction paper or postcard was skipped The back side of the postcard is turned up 	The print paper is inappropriate.	Use paper that falls within the recommended range. ☞ p.14
	The position of the Paper Feed Pressure Adjustment Lever was inappropriate.	When using thick or slippery paper, set the Paper Feed Pressure Adjustment Lever to "Thick Paper". ☞ p.31
	The angle of the Stripper Plate is inappropriate.	<p>Turn the Stripper Plate Angle Adjustment dial as follows;</p> <ul style="list-style-type: none"> When the feeding skips Turn the dial to the left.  <ul style="list-style-type: none"> When multiple sheets are fed Turn the dial to the right.  <p>Important!:</p> <ul style="list-style-type: none"> Before making the adjustment, be sure to remove all paper from the Paper Feed Tray and confirm that the tray has lowered to the bottom.

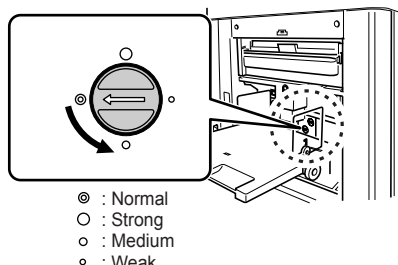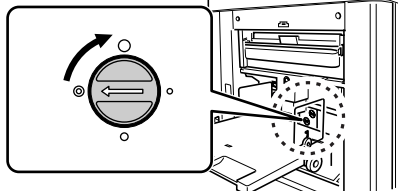Problem	Possible Cause	Action
<ul style="list-style-type: none"> Paper is not smoothly fed from the Paper Feed Tray. (skipped paper, or multiple-sheet feeding) There is a lot of paper powder Multiple sheets of paper were fed Construction paper or postcard was skipped The back side of the postcard is turned up 	<p>Paper handling pressure is not correctly adjusted.</p>	<ul style="list-style-type: none"> For paper that easily creates paper powder, skips, or for the back side of postcards that is turn up: Turn the dial to the left.  <ul style="list-style-type: none"> If paper is being multi-fed: Turn the dial to the right.  <p>Important!:</p> <ul style="list-style-type: none"> Before making the adjustment, be sure to remove all paper from the Paper Feed Tray and confirm that the tray has lowered to the bottom.
	<p>The Paper Feed Adjustment on the Functions screen is not properly set.</p>	<p>Adjust the "Paper Feed Adj.". Contact your dealer (or authorised service representative) for details on making the adjustment.</p>
<p>An error message displays even though there is no paper jam.</p>	<p>Is the lifted paper getting ejected at the second rotation of the Print Drum?</p>	<p>Check the printed copy, and if the top margin is less than 5mm, slightly lower Print Position.</p>
	<p>Is sunlight directly hitting the machine?</p>	<p>The sensor is affected by direct sunlight. Install shades or curtains, or move the machine out of direct sunlight.</p>
<p>When printing a multiple page computer file, the machine repeats the master-making process one page at a time.</p>	<p>Is "Print in Units" option selected in the Printer Driver?</p>	<p>Delete the current print job. Deselect "Print in Units", and resend the data to the machine. See p.62, step 3. p.66</p>
<p>The computer sent the file, but it was not received by the machine.</p>	<p>Is the Admin. screen currently showing on the display?</p>	<p>Touch  and switch to the Basic Screen from the Admin. screen.</p>



Appendix

Optional Accessories

A variety of optional accessories are available to enhance the capabilities of the machine.
For details about the optional accessories, see your dealer (or authorised service representative).

◆ Auto Document Feeder

Feed up to 50 sheets of originals automatically.

◆ Colour Drum

Simply change the Drum to print in multiple colours. (Case included)

◆ Key Card Counter

With a single button press, shows the numbers of printed copies and consumed masters within a given period of time. This can help you manage costs.

◆ Job Separator

With the Programmed Printing function, allows the machine to print and sort into groups separated by tape.

◆ Stand

◆ RISO PRINTER Network Interface Card RISORINC-NET

Use to directly connect the machine to the network.

This comes with the RISO-MONITOR software that allows you to check the status of the machine from computers.

◆ Special Paper Feed Kit

This unit allows you to feed thicker paper such as cards and envelopes.

◆ Ink/Master Holder

A rack kit for storing supply such as ink and masters.

◆ Document Storage Card DM-32CF/128CF

◆ Wide Stacking Tray

Paper Receiving Tray for sizes A6 - A3/Ledger (340 mm×470 mm).

◆ RISO Colour Separation Software CS-2000

Easy to use application software for printing multi-colored, computer-generated images on your RISO printer.

Specifications

RISO MZ770

Master-making/printing methods	High-speed digital master-making/full automatic stencil printing
Original Type	Book (10 kg or less), sheet
Original Size (max./min.)	When using the Platen Glass : 50mm × 90mm - 297mm × 432mm When using the ADF unit (option) : 90mm × 140mm - 297mm × 432mm
Original Paper Weight	When using the Platen Glass : 10 kg or less When using the ADF unit (option) : 50g/m ² - 128g/m ²
Print Paper Size (max./min.)	When simultaneously 2-Colour printing: 182 mm × 257 mm - 297 mm × 432 mm When 1-Colour printing (using Drum 1): 100mm × 148mm - 297mm × 432mm When 1-Colour printing (using Drum 2): 182 mm × 257 mm - 297 mm × 432 mm
Paper Supply Capacity	1000 sheets (64 g/m ²)
Print Paper Weight	46g/m ² - 210g/m ²
Image Processing mode	Line, Photo (Standard/Portrait/Group), Duo, Pencil
Resolution	D600dpi
Master-making Time (for A4/portrait/100% reproduction ratio)	Approx. 57 seconds (for dual-colour print) Approx. 24 seconds (for single-colour print (Drum 1)) Approx. 34 seconds (for single-colour print (Drum 2))
Printing Area (max.)	291mm × 413mm
Print Reproduction Ratio	Zoom : 50 - 200% Standard reproduction ratio (enlargement) : 163%, 141%, 122%, 116% Standard reproduction ratio (reduction) : 87%, 82%, 71%, 61% Margin+ : 90 - 99 %
Print Speed	Approx. 60 - 150 sheets per minute (Control panel: five steps variable, touch panel: 150ppm)
Print Position Adjustment	Vertical : ±15mm Horizontal : ±10mm
Ink Supply	Full automatic (1000 ml per cartridge)
Master Supply/Disposal	Full automatic (approx. 220 sheets per roll)
Master Disposal Capacity	80 sheets
User Interface	LCD Touch Panel with Progress Arrow indicators, front-side operation
Optional Accessories	Auto Document Feeder, Job Separator, Key Card Counter, Colour Drum, Network Interface Card RISORINC-NET, Special Paper Feed Kit, Stand, Document Storage Card DM-32CF/128CF, Wide Stacking Tray, RISO Colour Separation Software CS-2000
Power Source	MZ770E : 220V-240V AC, 50/60Hz <3.0A>
Dimensions	When in use : 1605mm(W) × 725mm(D) × 730mm(H) When in storage : 1010mm(W) × 725mm(D) × 730mm(H)
Weight	Approx. 168 kg

Note:

- Please note that due to improvements and changes to the machine, some images and explanations in this manual may not correspond to your machine.
- The specifications are subject to change without prior notice.

Index

Symbols

* Key	20, 126
+ Key	20, 126
×Key	20, 126

Numerics

150ppm	111
2 Up	85, 90
2-Colour Printing with 1 Original	44
2-Colour Printing with 2 Originals	38

A

ADF Original Guide	18
ADF Original Receiving Tray	18
ADF Original Release Dial	237
ADF Original Release Lever	18, 237
ADF Original Stopper	18
ADF Semi-Auto	156, 159
ADF unit	18, 39, 54, 58
Admin.	158
Admin. Screen	27
Advanced Features	122
Air Blow	121
Area Specification Sheet	47
Auto Clear	160
Auto Document Feeder	18, 254
Auto Idling	41, 150, 161
Auto Page Renewal	161
Auto Print	26, 67
Auto Process Mode	159
Auto Shut-Off	161
Auto-Link	196
Auto-Process	62, 81
Auto-Process Indicator	81
Auto-Process Key	21

B

Base IP Address	160
Basic Process	35
Basic Screen	25
Beep Sound	162
Book Shadow	82

C

C Key	20, 42, 52, 59, 79, 81, 97, 126, 127, 156
Changing Output Directions	66
Checking Remaining Consumable Amount	212
Cleaning	226
Clear All	66
Clock/Calendar	160
Closing the Paper Feed Tray	32
Closing the Paper Receiving Tray	34
Colour Auto-Link	163
Colour Drum	220, 254
Colour Mode	23
Combination	124, 127, 129, 131, 133, 134

Common Buttons	28
Computer Connection	13
Confidential	152
Configurable Functions (Link Mode)	206
Consumable Error	230, 234
Consumables	12
Contrast Adjustment	72
Control Panel	18, 20
Counter	19
Custom Paper Entry	160, 171

D

Data Information	183
Data-Map	25
Default Folder	159
Default Settings	158, 164
Density (Print Density)	112
D-Feed Check	117
Digital Copy Count	154
Direct Access	25
Direct Print	62
DirectAccess Entry	158, 167
Display	18, 20, 22
Display Adjustment	158
Display Priority	158
Displayed Language	158
Disposing of Consumables	223
Document Storage Card	254
Dot Process	70
Double Feed Check	159
Drums 1 and 2 Print Position Alignment	114
Dual-Colour Printing	38
Duo	68
Duplex Interval	163
Duplex Printing	208

E

Easy 2Colour	44
Eject Wing Control	120, 159
Energy Saving Mode	161
Error Messages	230
Ex. Reserve Period	149, 160
Extended Paper	173

F

Feed Tray Descent Button	18, 32
Feed Tray Paper Guide	18
Flanges	214
Folder Renaming	160
Format	185
Free	76, 78
Front Cover	19
Function and Name of Each Part	18
Functions Area	25
Functions Screen	27

G

Gauge Cover 39, 50, 54, 58
 Group 122

H

Hand Writing--1 45
 Hand Writing--2 46
 High Speed 111
 Humidity Range 11

I

i Information 25, 212
 Icons Used in This Manual 8
 Idling Action 150
 Image Processing 159
 Image Processing Mode 68
 Initial Screen 22
 Ink 216, 223
 Ink Cartridge 19, 216, 223
 Ink Cartridge Cap Holder 19, 217
 Ink Handling 12
 Ink Information Input 244
 Ink Saving 84
 Ink/Master Holder 254
 Installation 10
 Installation Error 230, 234
 Installation Location 10
 Interval 118
 Irregular Fitter 160

J

Jam Error 230
 Job 26
 Job Information Display 26
 Job Memory 140, 141, 143, 145, 147
 Job Operation Area 26
 Job Separation 159
 Job Separator 125, 254

K

Key Card Counter 254

L

Line 68
 Link Info Refresh 163
 Link Mode 24, 197, 202
 Link Properties 163, 198
 Linked Printer 163, 196
 Linked Printer Setup List 198
 Link-Free Volume 163
 Loading Paper 31

M

Machine Handling 11
 Maintenance 226
 Maintenance Call 239
 Malfunctions 247

Margin+ 76, 77
 Margin-Plus Rate 160
 Margins 17
 Master 224
 Master core 214, 223
 Master Disposal Box 218
 Master Disposal Box 1 18
 Master Disposal Box 2 19
 Master Disposal Box Handle 218
 Master Guide Flap 19, 214
 Master Information Input 245
 Master Making Unit 213
 Master Making Unit Cover 19, 213
 Master Making Unit Cover Lever 213
 Master Making Unit Handle 213
 Master Making Unit Lever 19
 Master Making Unit Release Button 19, 213
 Master Making Unit Removal Cover 19, 213
 Master Making Unit Removal Lever 19, 213
 Master Replacement 213
 Master Roll 19
 Master Roll Holder 19, 214
 Master-Making Key 21
 Materials Not to Be Printed 17
 Max. Scan 99
 Maximum Printing Area 17
 Message 230
 Message Area 25
 Minimum Print Q'ty 162
 Mode Key 20
 Multi-Page Mode 123, 127, 129, 131, 133, 134
 Multiple Paper Feed Detection 117
 Multi-Up function 85, 91
 Multi-Up Interval 88, 160
 Multi-Up Print 85
 Multi-Up Tickets 88, 94

O

OneSide MasterMake 96
 Online Auto-Link 163
 OP Auto Process 159
 Operation Environment 11
 Operation Pattern Display 9
 Operation Safety Guide 11
 Optional Accessories 254
 Optional Device Area 26
 Optional Device Error 230, 232
 Optional Functions (Linked Printer) 205
 Original 16
 Original Guide 39, 54, 58
 Original Margin 17
 Original Position Indicator 113
 Original Restrictions 17
 Original Scan Density 75
 Overlay 190

P

P Key	20
Page Orientation	163
Paper Arranger	19, 33
Paper Eject Adj	121
Paper Ejection Adj	159
Paper Ejection Wing	19, 120
Paper Feed Pressure Adjustment Lever	18, 32
Paper Feed Tray	18, 31, 32
Paper Guide	31
Paper Jam Error	230, 231, 237
Paper Receiving Tray	19, 33, 34
Paper Recommendations	14
Paper Size	80
Paper Stopper	19, 33, 34
Pencil	68
Photo	68
Photo Contrast	72
Photo Gradation	73
Photo (Group)	68
Photo (Portrait)	68
Photo (Standard)	68
Platen Cover	18
Platen Cover Pad	18, 227
Platen Glass	18, 39, 227
Power Connection	10
Power Switch	19, 30
Power-OFF Schedule	161
Pressure Roller	228
Preview	26, 66
Print Colours	163
Print Density	20, 112, 159
Print Density Adjustment Keys	20, 112
Print Density Indicator	20, 112
Print Drum	220
Print Drum 1	19
Print Drum 2	19
Print Drum Handle	19, 220
Print Drum Release Button	19, 220
Print Drum Replacement	220
Print Key	21
Print Paper	14, 32
Print Paper Handling	15
Print Position Adjustment	113
Print Position Adjustment Keys	20
Print Position Centre Key	113
Print Position Indicator	20
Print Quantity Display	20
Print Quantity Keys (0 to 9 Keys)	20, 42, 52, 59, 81, 97
Print Speed	20, 110, 159
Print Speed Adjustment Keys	20, 110
Print Speed Indicator	20, 110
Printer Exterior	229
Printing Cautions	17
Printing from Computer	26, 62

Printing from Paper Document	25, 38
Printing with 1-Colour	57
Programme	122
Programme Key	20
Progress Bar	21
Proof copy	42, 52, 59, 64, 97, 116
Proof Key	21, 116

R

Receiving Tray Paper Guides	19, 33, 34
Red Colour	45
Rename screen	132
Renew Page	26, 66, 100
Replacing Batteries	231, 239
Replacing Consumables	212
Reproduction Size	159
Reservation	149
Reserve Period	160
Reset Key	21
RISO PRINTER Network Interface Card RISORINC-NET	254

S

Safety Guide	10
Scan Mode	24, 178
Scanner Glass	228
Scanning Contrast	75, 159
Scanning Interval	160
Selecting a Mode	23
Selections	27
Selections Entry	158, 167
Semi-Auto (Master)	62, 67
Semi-Auto (Print)	62, 67
Separation Fan	121
Separation Hook	228, 238
Separation Sheet	47, 54
Service Call Error	230, 231
Setting the Paper Receiving Tray	33
Single Page Mode	122, 126, 129, 131, 133, 134
Size and Weight Restrictions	14, 16
Skip Page	26, 66
Special Paper Feed Kit	254
Specifications	255
Specified Area	46
Speed (print speed)	110
Stamp	192, 195
Stamp Data	160
Stand	254
Standard Ratio	76, 77
Start Key	21
Start-Up Screen	158
Status Area	25, 26
Stock Management	162
Stop Key	21
Stop Timing	62, 67
Storage Memory	176, 186

Storing Environment	15
Sub Tool Bar	163

T

Tab Area	25, 26
Temperature Range	11
Text and Photo (Image Processing mode)	68
Text (Image Processing mode)	68
The Screens and their Various Stages	22
Thermal Print Head	19, 227
Tips for Better Paper Feeding	15
Tone Curve	73
Tool Bar Position	163
Troubleshooting	230

U

Usage Status	154
--------------------	-----

W

Wake-Up Key	21
Warning Messages	240
White Sheet	228

Z

Zoom	76, 79
------------	--------

